


BASE PLATE- **(NQD-071)** STANDARD

DOOR BAR- **(NQD-080)** STANDARD


HANDLE PIVOT- **BC-11**

MODIFIED HANDLE PIVOT EXTENSION- **BC-12**

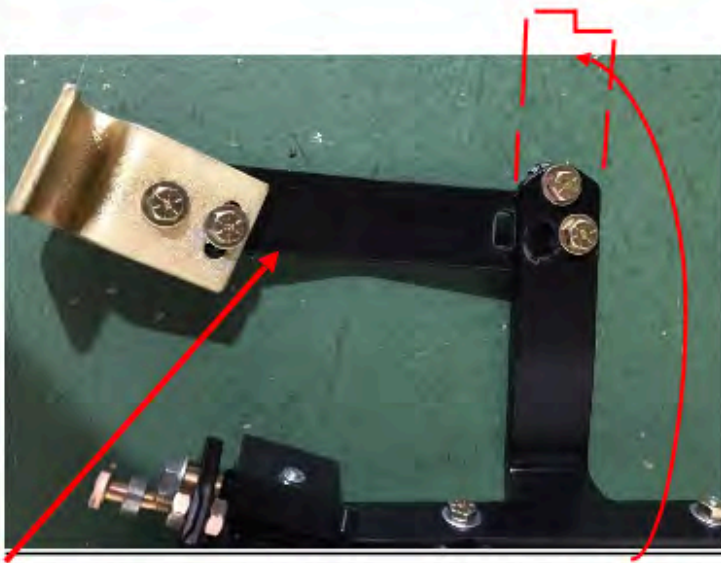

SHIPPING POSITION

INSTALLED POSITION

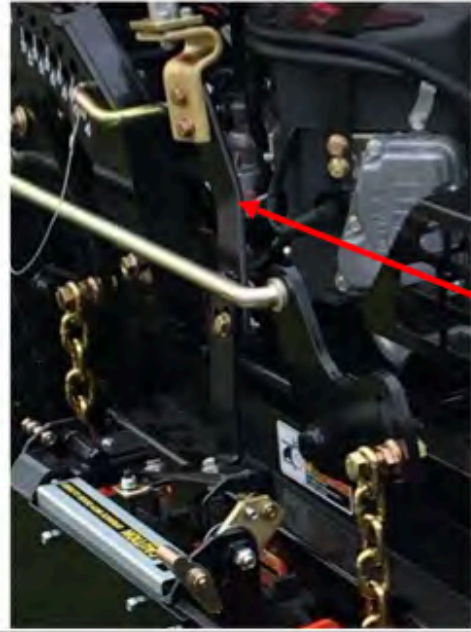

POSITION OF BEND

SHIPPING POSITION INSTALLED POSITION/POSITION OF BENDS

HANDLE- **(NQD-092)** STANDARD

DOOR- **NQD-BC4000-36**

CENTER DEFLECTOR- **(NQD-100)** STANDARD

BRACKETS- (2) **UB-09** (PRE INSTALLED)

HARDWARE KIT- A CONTENTS:

(4) 1/4-20 X 7/8 SOCKET HEAD BOLT

- (4) 1/4-20 GR 8 NUTS
- (2) 5/16-18 X 1 GR 5 HEX HEAD BOLT
- (4) 5/16 SAE or 1/4 USS WASHER
- (2) 5/16-18 NYLOC NUT
- (1) NQD-097-SPRING
- (1) SPRING PULLER

NQD-BC4000-36

BOBCAT QUICKCAT 4000 36" / KUBOTA STANDON SZ 36"

PICTURE 1



MOUNTING BRACKET

DRILL HERE

MOUNTING BRACKET

View of QWIKCHUTE

STEP 1


REMOVE FACTORY CHUTE AND PLACE QWIKCHUTE ON DECK. CLOSE DOOR ON QWIKCHUTE. CENTER IT UP ON THE DECK OPENING. WHILE HOLDING DOOR AGAINST THE FACE OF OPENING USE PREINSTALLED MOUNTING BRACKETS AS TEMPLATE MARK HOLE WITH MARKER. REMOVE UNIT CENTER PUNCH AND DRILL TWO 3/8" HOLES. MOUNT QWIKCHUTE TO DECK USING (2) 5/16 X 1 BOLTS WITH WASHERS AND NUTS AS SUPPLIED. HOLD DOOR AGAINST FACE WHEN TIGHTENING HARDWARE.

STEP 2 INSTALL HANDLE (SEE INSTALLATION SHEET) BEFORE INSTALLING HANDLE MOVE HANDLE EXTENSION BACK IN PLACE AS SHOWN BELOW AND TIGHTEN HARDWARE.

STEP 3 INSTALL SPRING (SEE INSTALLATION SHEET)



FINISHED KIT


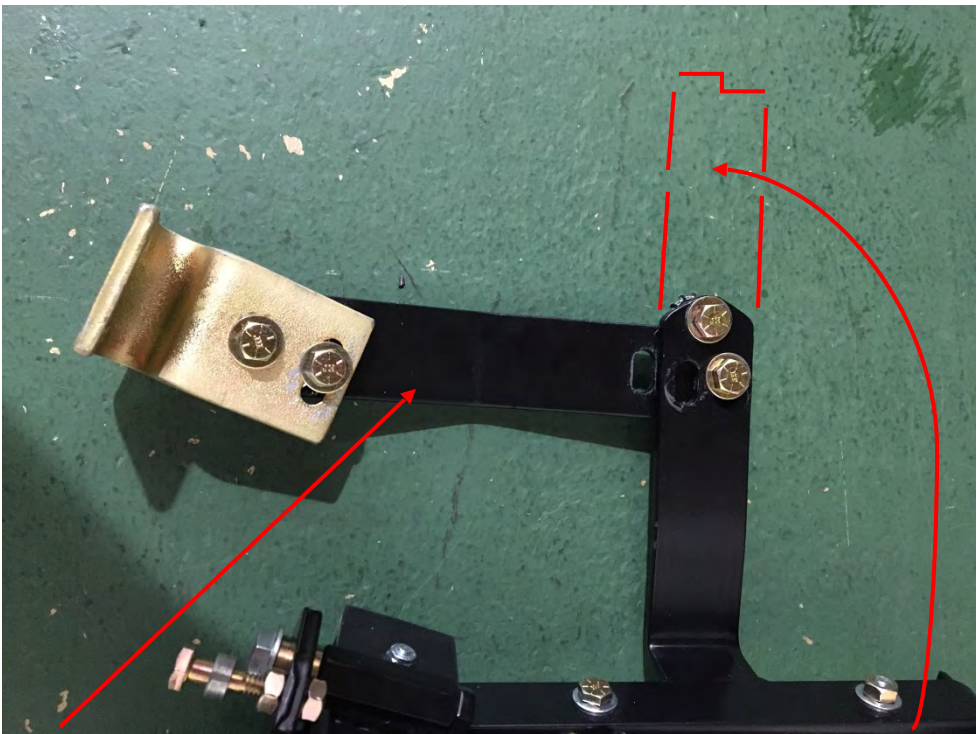


SHIPPING POSITION

INSTALLED POSITION

SPRING INSTALLATION QWIKCHUTE NQD MODEL

STEP 2 LOOP FINGERS OVER SCREWDRIVER
BLADE AND LIFT SPRING ON TO SPRING BOLT
CAUTION --DO NOT OVER STRECH SPRING
DISCARD WIRE LOOP AFTER SPRING IS CONNECTED

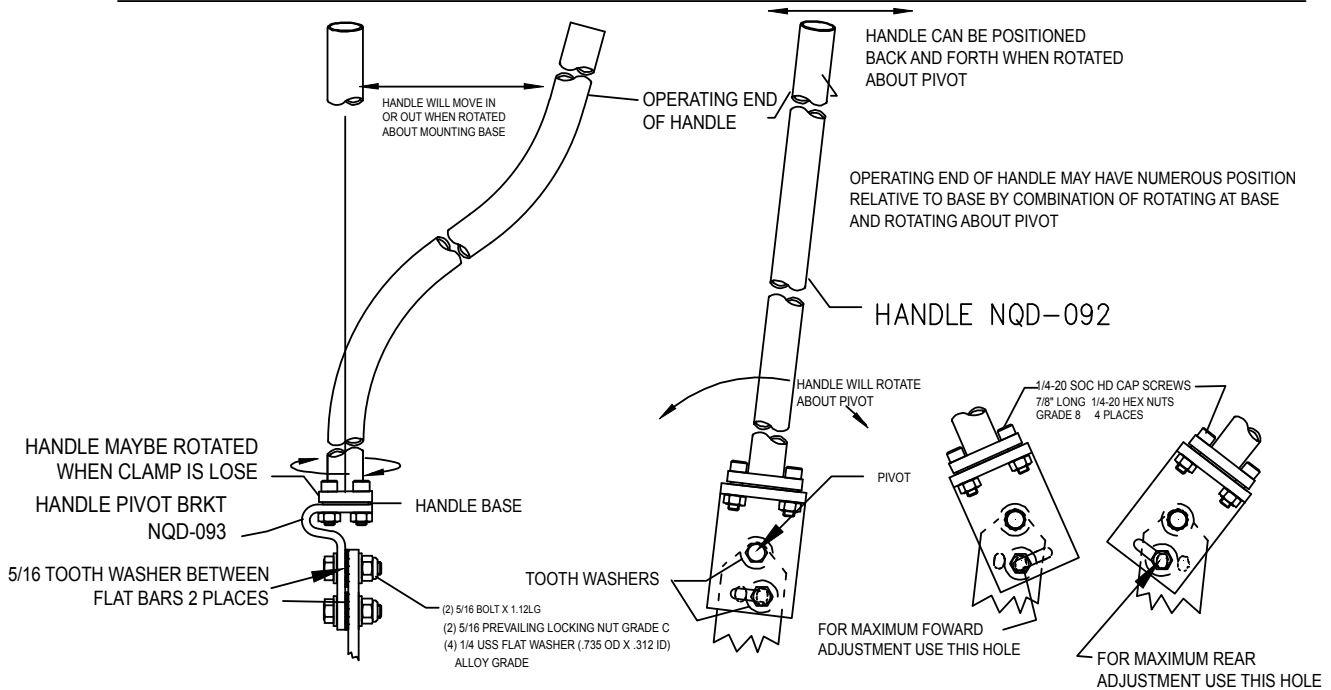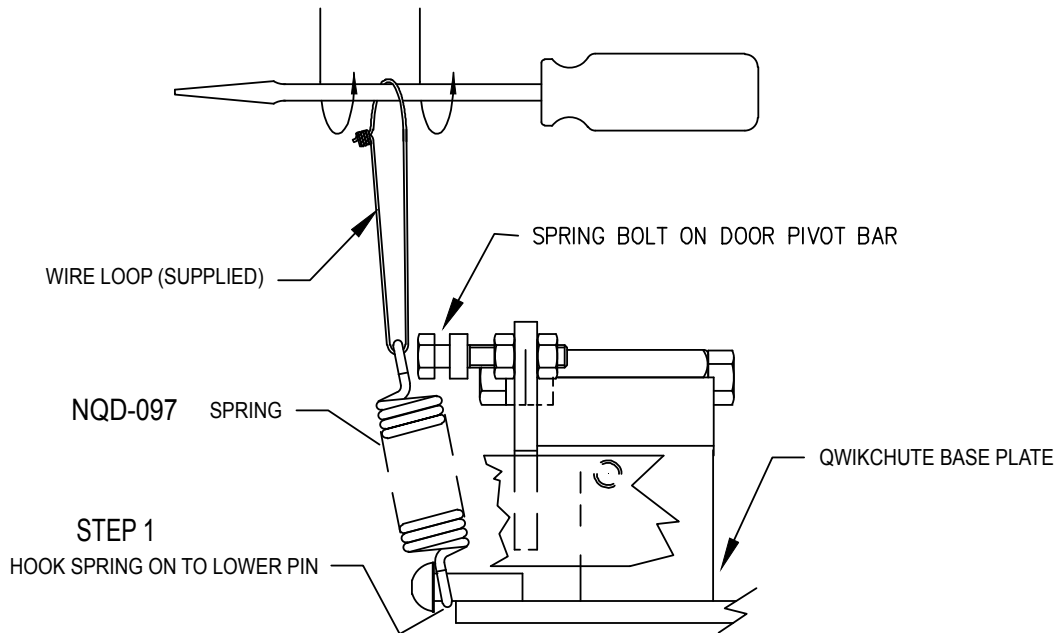

HANDLE INSTALLATION AND ADJUSTMENT

QWIKCHUTE OPERATING PRECEDURE

OPEN FULLY- move handle away from operator quickly.

CLOSE FULLY- move handle toward operator quickly.

PARTIALLY OPEN- from close position move handle away from operator until stay bar swings into position and release handle. To close from partially open position, quickly open and then close.

(some models do not have partial open feature.)

OIL ALL BEARING POINTS WEEKLY OR AS NEEDED.

WARRANTY

GTM Manufacturing, Inc. products are warranted to the original purchaser to be free from defects in materials and workmanship for a period of 90 days from the date of purchase.

Any part(s) of GTM products found to be defective within the warranty period shall, at GTM's option, be repaired or replaced without charge.

Warranty consideration is obtained by returning any GTM product/part believed to be defective to GTM Manufacturing, Inc. within the applicable warranty period. **Please call for authorization.**

GTM Manufacturing, Inc.
14350 EASTSIDE ST
GROVELAND, FL. 34736
(407) 654-6598
www.qwikchute.com

Warranty does not apply to conditions resulting from:

1. Damage(s) and/or costs associated with shipping and or/ transportation.
2. Lack of normal maintenance, adjustments, or service required for regular use of the product.
3. Modifications, service/repairs, parts or components not authorized by GTM.

GTM shall not be liable for any special, consequential, direct or indirect damages, and expressly states there are no implied warranties. Some states do not allow limitation of incidental or consequential damages, accordingly the above limitations and exclusions may not apply to you. This warranty provides you with specific legal rights which may vary from state to state.

IT IS THE OWNERS RESPONSIBILITY TO PROPERLY COMPLETE AND MAIL THE WARRANTY REGISTRATION CARD.

PROOF OF PURCHASE AND REGISTRATION WILL BE REQUIRED IN ORDER TO OBTAIN WARRANTY SERVICE.

WARRANTY REGISTRATION CARD

Name of Purchaser: _____

Street Address / P.O. Box: _____

City: _____ State: _____ Zip Code: _____

Model Number: _____ PURCHASE DATE: _____|_____|_____

Dealer Name: _____

Street Address: _____

City: _____ State: _____ Zip Code: _____

Customer Received: Operators Manual () Safety Instructions () Demonstration ()

Customers Signature

Date