


NQD-BDR4854 KIT CONTENTS. INSPECTED BY:_____

BASE PLATE- (BD-03) MODIFIED

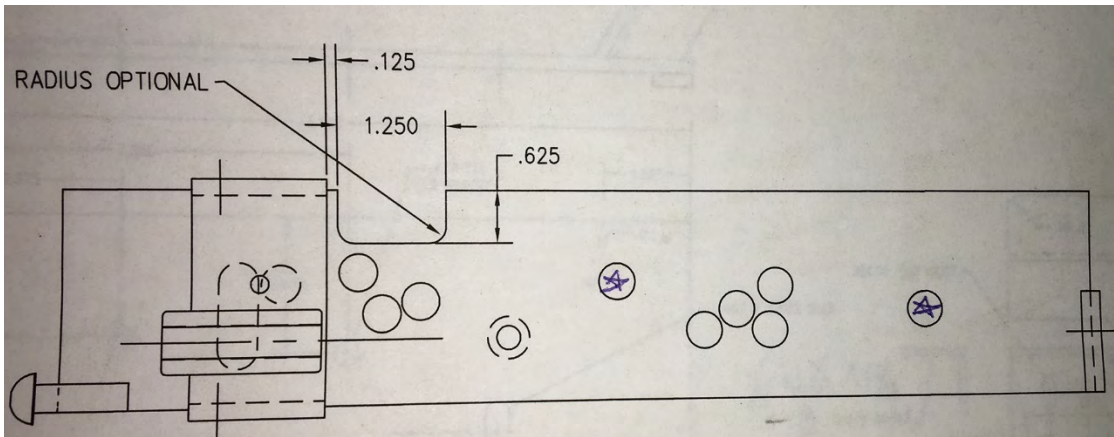

DOOR BAR- (NQD-080) STANDARD

HANDLE PIVOT- (NQD-075) STANDARD

HANDLE- (NQD-092) STANDARD

DOOR- NQD-BDR4854

CENTER DEFLECTOR- (NQD-100) STANDARD

HARDWARE KIT- A CONTENTS:

- (4) 1/4-20 X 7/8 SOCKET HEAD BOLT
- (4) 1/4-20 GR 8 NUTS
- (2) 5/16-18 X 1 GR 5 HEX HEAD BOLT
- (4) 5/16 SAE or 1/4 USS WASHER
- (2) 5/16-18 NYLOC NUT
- (1) NQD-097-SPRING
- (1) SPRING PULLER

BAFFLE/SUBPLATE-

- (1) BDR4854 (BD-01) SUBPLATE/(1) BDR4854 (BD-02) DEFLECTOR
- (2) 1/4-20 X 3/4" CARRIAGE BOLTS/(2) SAE WASHERS/(2) NYLOCKS
- (2) 5/16-18 X 1 BOLTS/(4) USS WASHERS/(2) NYLOCKS



- 
- STEP 1
1. REMOVE EXISTING FACTORY CHUTE AND SUBPLATE
 2. POSITION SUPPLIED SUB PLATE ON DECK AS SHOWN BOLT TO DECK USING EXISTING HOLES AND BOLTS THAT WAS USED FOR FACTORY SUB PLATE.
 3. ADJUST DEFLECTOR BAFFLE TO FIT DECK SKIRT AND TIGHTEN 1/4" BOLTS

GAP TO TO BE EVEN BETWEEN SUB PLATE AND RIB

SUB PLATE TO BE EVEN WITH EDGE OF DECK

SHEET 1 OF 2

QWIKCHUTE INSTALLATION
NQD-BDR4854 --BIG DOG 48 AND 54"



STEP 2

- A** WITH QWIKCHUTE DOOR CLOSED POSITION QWIKCHUTE BASE AT POSITION SHOWN WITH QWIKCHUTE DOOR TIGHT AGAINST DISCHARGE FACE. INSTALL SUPPLIED BOLTS AND TIGHTEN
- B** INSTALL HANDLE (SEE SEPARATE INSTRUCTION FOR HANDLE ADJUSTMENT)
- C** INSTALL SPRING (SEE SEPARATE INSTRUCTION FOR SPRING INSTALLATION)



QWIKCHUTE INSTALLATION

NQD-BDR4854 --BIG DOG 48 AND 54"

SHEET 2 OF 2

SPRING INSTALLATION QWIKCHUTE NQD MODEL

STEP 2 LOOP FINGERS OVER SCREWDRIVER
BLADE AND LIFT SPRING ON TO SPRING BOLT
CAUTION --DO NOT OVER STRECH SPRING
DISCARD WIRE LOOP AFTER SPRING IS CONNECTED

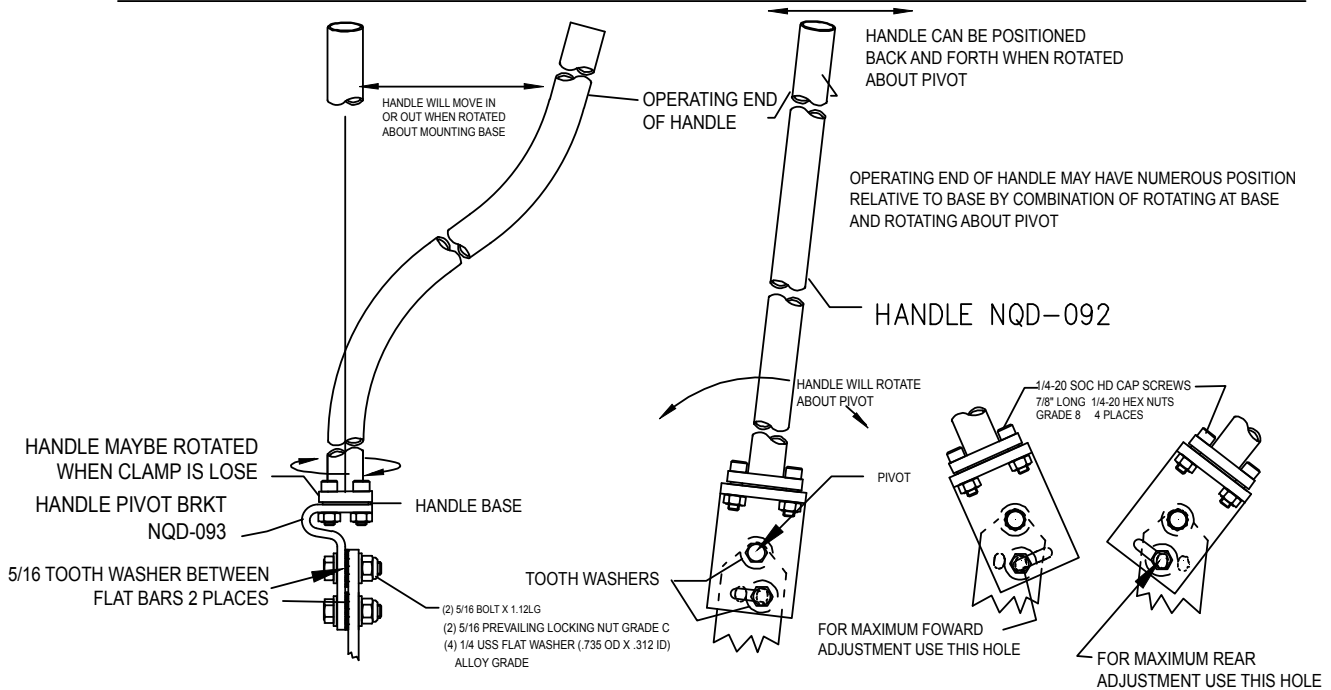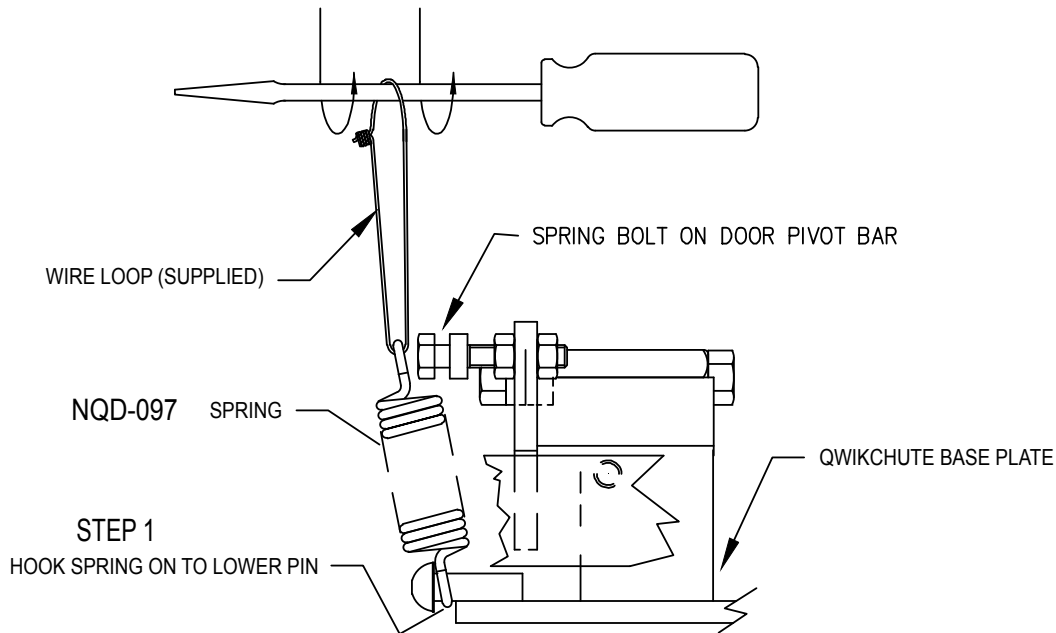

HANDLE INSTALLATION AND ADJUSTMENT

QWIKCHUTE OPERATING PRECEDURE

OPEN FULLY- move handle away from operator quickly.

CLOSE FULLY- move handle toward operator quickly.

PARTIALLY OPEN- from close position move handle away from operator until stay bar swings into position and release handle. To close from partially open position, quickly open and then close.

(some models do not have partial open feature.)

OIL ALL BEARING POINTS WEEKLY OR AS NEEDED.

WARRANTY

OIL ALL BEARING POINTS WEEKLY OR AS NEEDED

GTM Manufacturing, Inc. products are warranted to the original purchaser to be free from defects in materials and workmanship for a period of 90 days from the date of purchase.

Any part(s) of GTM products found to be defective within the warranty period shall, at GTM's option, be repaired or replaced without charge.

Warranty consideration is obtained by returning any GTM product/part believed to be defective to GTM Manufacturing, Inc. within the applicable warranty period. **Please call for authorization.**

GTM Manufacturing, Inc.
14350 EASTSIDE ST
GROVELAND, FL. 34736
(407) 654-6598
www.qwikchute.com

Warranty does not apply to conditions resulting from:

1. Damage(s) and/or costs associated with shipping and or/ transportation.
2. Lack of normal maintenance, adjustments, or service required for regular use of the product.
3. Modifications, service/repairs, parts or components not authorized by GTM.

GTM shall not be liable for any special, consequential, direct or indirect damages, and expressly states there are no implied warranties. Some states do not allow limitation of incidental or consequential damages, accordingly the above limitations and exclusions may not apply to you. This warranty provides you with specific legal rights which may vary from state to state.

IT IS THE OWNERS RESPONSIBILITY TO PROPERLY COMPLETE AND MAIL THE WARRANTY REGISTRATION CARD.

PROOF OF PURCHASE AND REGISTRATION WILL BE REQUIRED IN ORDER TO OBTAIN WARRANTY SERVICE.

WARRANTY REGISTRATION CARD

Name of Purchaser: _____
Street Address / P.O. Box: _____ County: _____
City: _____ State _____ Zip Code: _____

Model Number: _____ PURCHASE DATE: _____|_____|_____

Dealer Name: _____
Street Address: _____ County: _____
City: _____ State: _____ Zip Code: _____

Customer Received: Operators Manual (☐) Safety Instructions (☐) Demonstration (☐)

Customers Signature

Date