


NQD-ELUC60 KIT CONTENTS. INSPECTED BY:_____

BASE PLATE- (EX-19) MODIFIED

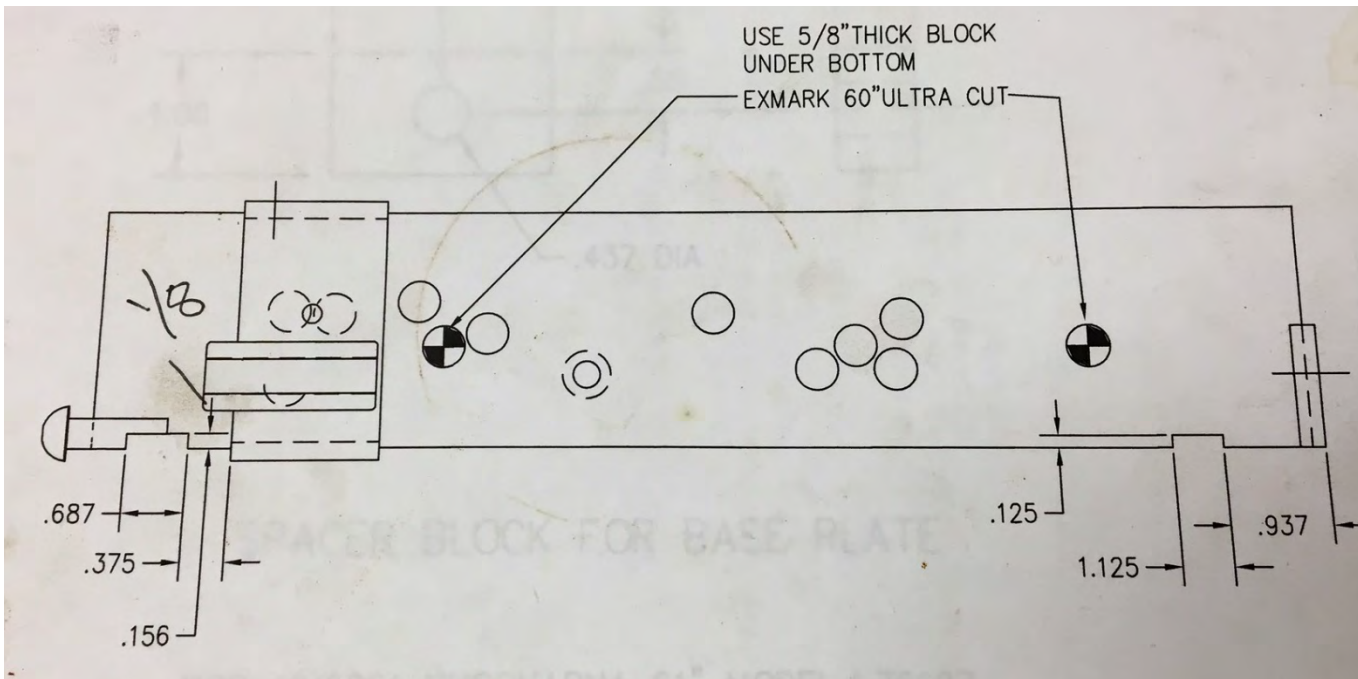

DOOR BAR- (NQD-080) STANDARD

HANDLE PIVOT- (NQD-075) STANDARD

HANDLE- (NQD-092) STANDARD

DOOR- NQD-ELUC60


CENTER DEFLECTOR- (NQD-100) STANDARD

BRACKETS- (UNINSTALLED/ IN HARDWARE KIT)

HARDWARE KIT- N CONTENTS:

- (2) UB-___(5/8" spacer)
OR: 2) UB-05 & 2) UB-10
- (2) 5/16-18 X 1-3/4 GR 5 HEX HEAD BOLT
- (4) 5/16 SAE or 1/4 USS WASHER
- (2) 5/16-18 NYLOC NUT
- (4) 1/4-20 X 7/8 SOCKET HEAD BOLT
- (4) 1/4-20 GR 8 NUT
- (1) NQD-097-SPRING
- (1) SPRING PULLER

USE THESE HOLES TO MOUNT
THE QWIKCHUTE TO DECK
MOUNTING BOLTS 5/16 X 1-3/4" LONG
2 PLACES

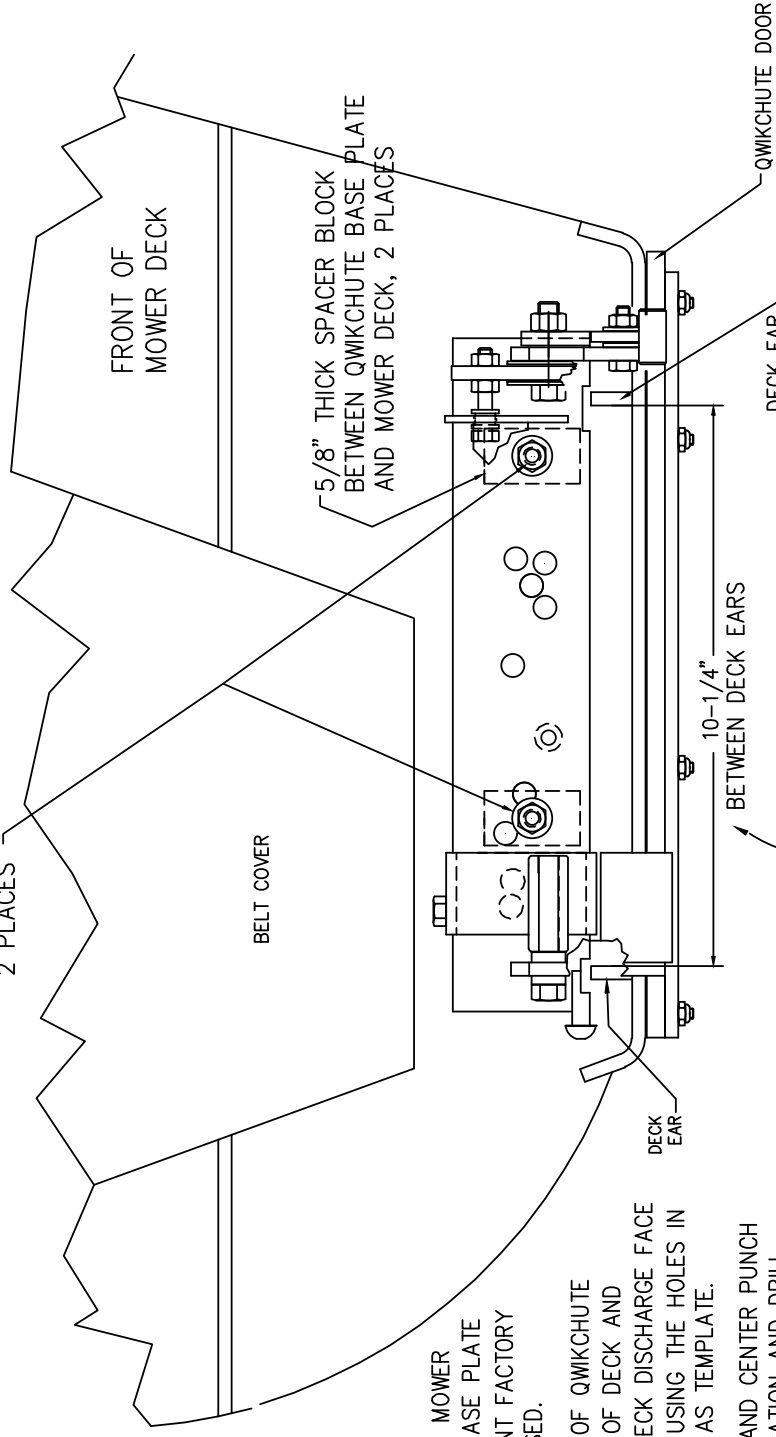

ALL PARTS OF QWIKCHUTE ASSEMBLY
NOT SHOWN FOR CLARITY

QWIKCHUTE INSTALLATION
EXMARK ULTRA CUT 60"
DECKS WITH 10-1/4" BETWEEN DECK EARS

STEP 1

A REMOVE FACTORY CHUTE

STEP 2

- A POSITION QWIKCHUTE ASSEMBLY ON MOWER DECK WITH NOTCH IN QWIKCHUTE BASE PLATE POSITIONED OVER EARS THAT MOUNT FACTORY DISCHARGE CHUTE AND DOOR CLOSED.
- B WITH SPACER BLOCKS ON BOTTOM OF QWIKCHUTE BASE PLATE SITTING FIRM ON TOP OF DECK AND QWIKCHUTE DOOR TIGHT AGAINST DECK DISCHARGE FACE
- C MARK DECK FOR MOUNTING HOLES USING THE HOLES IN BASE PLATE AND SPACER BLOCKS AS TEMPLATE.
- D REMOVE QWIKCHUTE FROM MOWER AND CENTER PUNCH THE MARKED MOUNTING HOLES LOCATION AND DRILL 3/8" DIA THRU DECK, 2 PLACES.



E REPOSITION QWIKCHUTE ON MOWER DECK WITH SPACERS AND INSTALL MOUNTING HARDWARE (BOLT 5/16 UNC X 1-3/4" LONG WITH FLAT WASHERS AND NUT) TIGHTEN MOUNTING HARDWARE WITH QWIKCHUTE DOOR TIGHT AGAINST DISCHARGE FACE

STEP 3

- A INSTALL SPRING (SEE SPRING INSTALLATION SHEET)
- B INSTALL HANDLE (SEE HANDLE INSTALLATION SHEET)

SPRING INSTALLATION QWIKCHUTE NQD MODEL

STEP 2 LOOP FINGERS OVER SCREWDRIVER
BLADE AND LIFT SPRING ON TO SPRING BOLT
CAUTION --DO NOT OVER STRECH SPRING
DISCARD WIRE LOOP AFTER SPRING IS CONNECTED

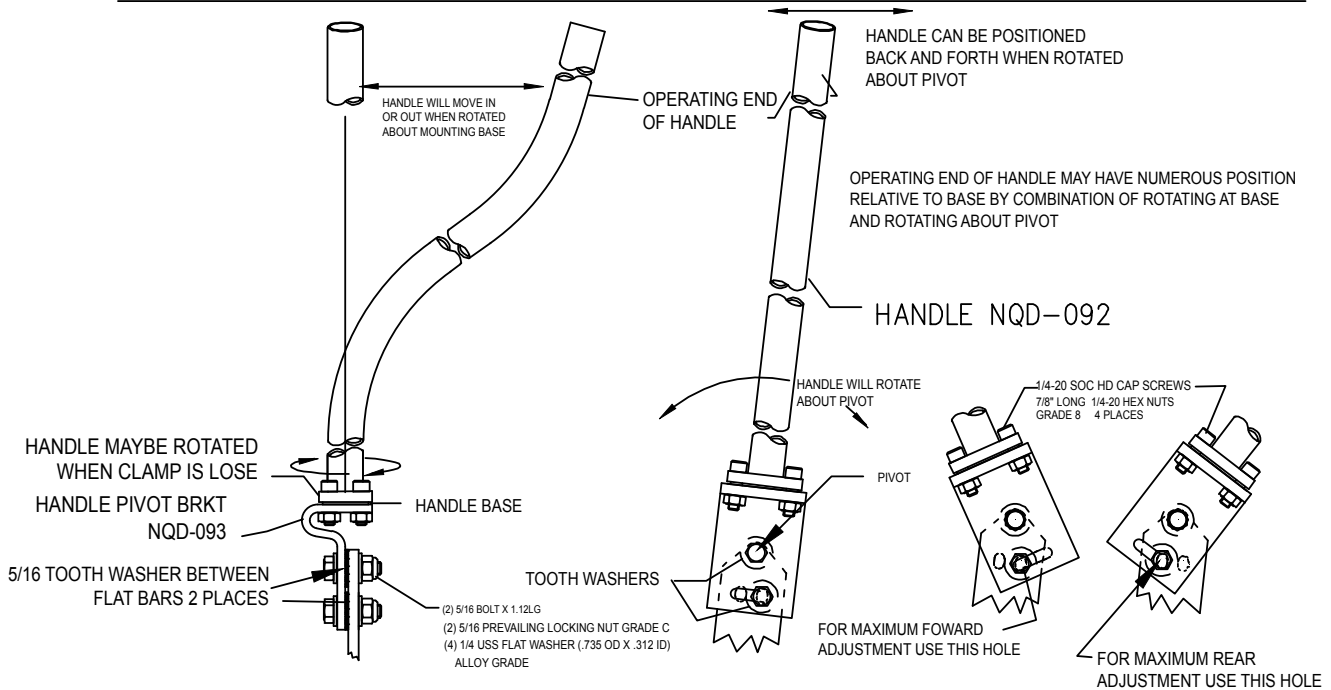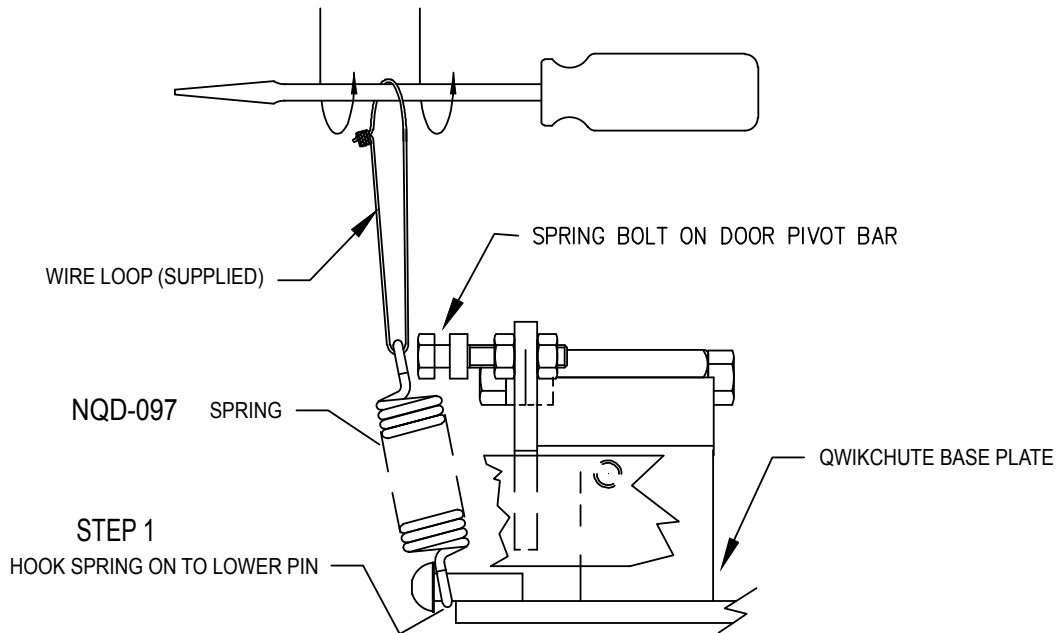

HANDLE INSTALLATION AND ADJUSTMENT

QWIKCHUTE OPERATING PRECEDURE

OPEN FULLY- move handle away from operator quickly.

CLOSE FULLY- move handle toward operator quickly.

PARTIALLY OPEN- from close position move handle away from operator until stay bar swings into postion and release handle. To close from partially open position, quickly open and then close.

(some models do not have partial open feature.)

OIL ALL BEARING POINTS WEEKLY OR AS NEEDED.

WARRANTY

OIL ALL BEARING POINTS WEEKLY OR AS NEEDED

GTM Manufacturing, Inc. products are warranted to the original purchaser to be free from defects in materials and workmanship for a period of 90 days from the date of purchase.

Any part(s) of GTM products found to be defective within the warranty period shall, at GTM's option, be repaired or replaced without charge.

Warranty consideration is obtained by returning any GTM product/part believed to be defective to GTM Manufacturing, Inc. within the applicable warranty period. **Please call for authorization.**

GTM Manufacturing, Inc.
14350 EASTSIDE ST
GROVELAND, FL. 34736
(407) 654-6598
www.qwikchute.com

Warranty does not apply to conditions resulting from:

1. Damage(s) and/or costs associated with shipping and or/ transportation.
2. Lack of normal maintenance, adjustments, or service required for regular use of the product.
3. Modifications, service/repairs, parts or components not authorized by GTM.

GTM shall not be liable for any special, consequential, direct or indirect damages, and expressly states there are no implied warranties. Some states do not allow limitation of incidental or consequential damages, accordingly the above limitations and exclusions may not apply to you. This warranty provides you with specific legal rights which may vary from state to state.

IT IS THE OWNERS RESPONSIBILITY TO PROPERLY COMPLETE AND MAIL THE WARRANTY REGISTRATION CARD.

PROOF OF PURCHASE AND REGISTRATION WILL BE REQUIRED IN ORDER TO OBTAIN WARRANTY SERVICE.

WARRANTY REGISTRATION CARD

Name of Purchaser: _____
Street Address / P.O. Box: _____ County: _____
City: _____ State: _____ Zip Code: _____

Model Number: _____ PURCHASE DATE: _____|_____|_____

Dealer Name: _____
Street Address: _____ County: _____
City: _____ State: _____ Zip Code: _____

Customer Received: Operators Manual (☐) Safety Instructions (☐) Demonstration (☐)

Customers Signature

Date