

NQD-F500S-48 KIT CONTENTS. INSPECTED BY:_____

BASE PLATE- (FE-33)

DOOR BAR- STANDARD (NQD-080)

HANDLE PIVOT- STANDARD (NQD-075) WITH NQD-093 MOVED TO FRONT FACE

HANDLE- STANDARD (NQD-092)

DOOR- NQD-F500S-48


CENTER DEFLECTOR- STANDARD (NQD-100)

BAFFLE/SUBPLATE- FE-34

HARDWARE KIT- B CONTENTS:

- (4) 1/4-20 X 7/8 SOCKET HEAD BOLT
- (4) 1/4-20 GR 8 NUT
- (2) 5/16-18 X 1 GR 5 HEX HEAD BOLT
- (4) 5/16 SAE **or** 1/4 USS WASHER
- (2) 5/16-18 NYLOC NUT
- (1) NQD-097 SPRING
- (1) SPRING PULLER

NQD-F500S-48 FERRIS 500S 48" DECK

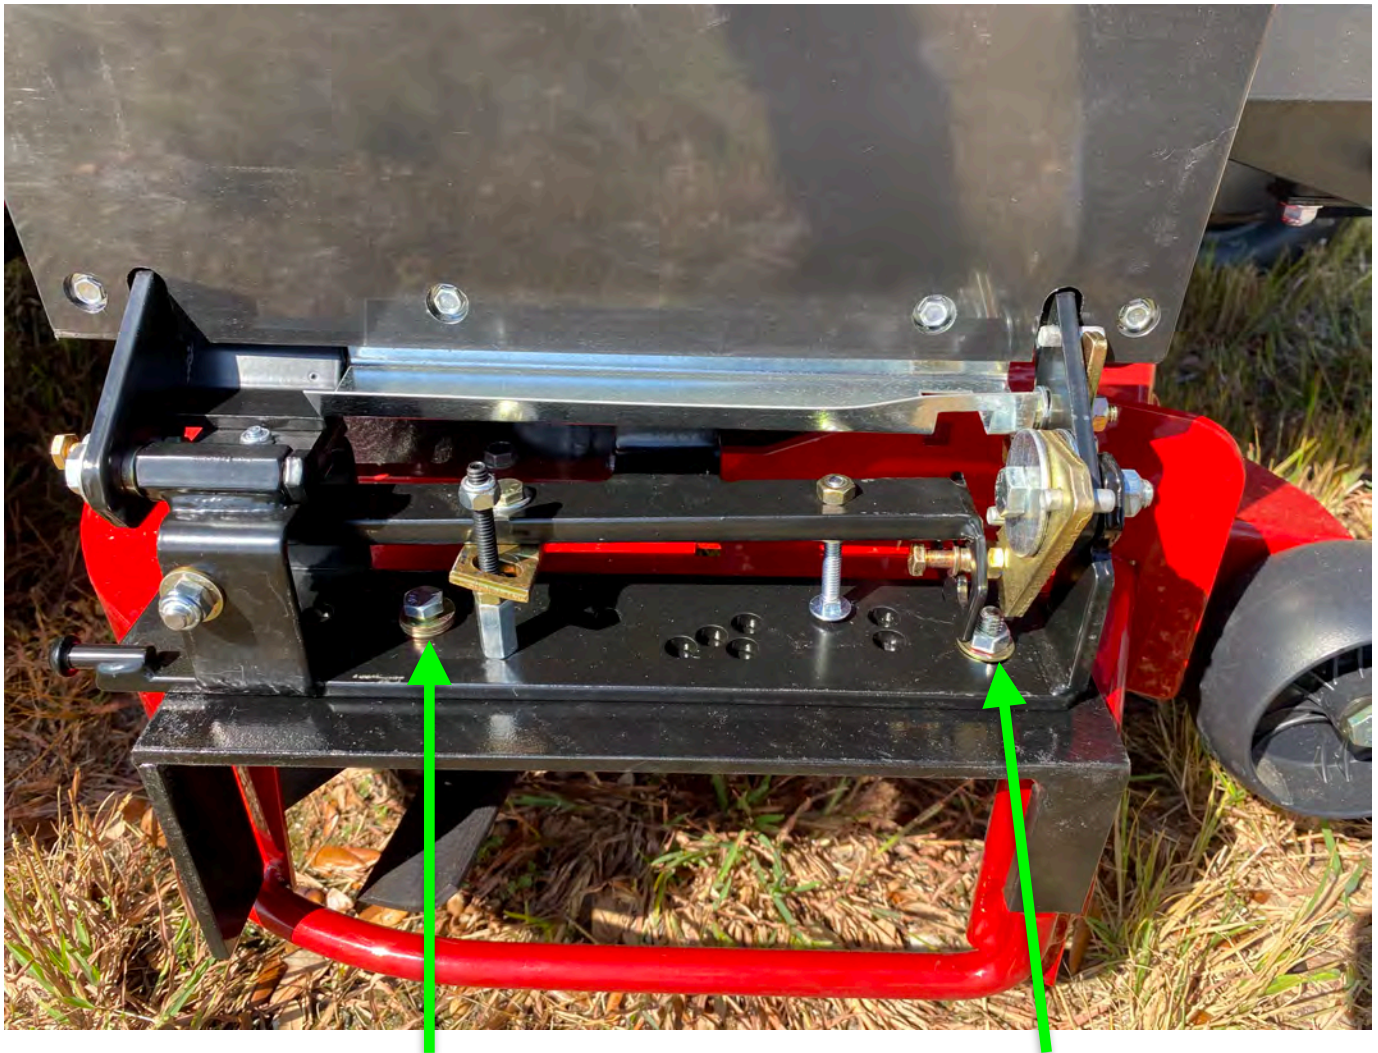

DRILL HERE

USE EXISTING HOLE IN DECK FOR THIS LOCATION

STEP 1

REMOVE FACTORY CHUTE AND PLACE QWIKCHUTE ON DECK WITH SUB PLATE BETWEEN QWIKCHUTE MOUNTING BASE PLATE AND MOWER DECK. CLOSE DOOR ON QWIKCHUTE. CENTER IT UP ON THE DECK OPENING HOLDING DOOR AGAINST THE FACE OF OPENING. USING MOUNTING HOLE AS TEMPLATE, MARK THE HOLE WITH A MARKER. REMOVE UNIT, CENTER PUNCH AND DRILL ONE 3/8" HOLE. MOUNT QWIKCHUTE TO THE DECK USING (2) 5/16 X 1-1/4 BOLTS WITH WASHERS AND NUTS AS SUPPLIED. TIGHTEN ALL HARDWARE USED TO INSTALL THE QWIKCHUTE. BE CAREFUL NOT TO MOVE THE MOUNTING LOCATION WHILE TIGHTENING THE HARDWARE OR THE DOOR MAY NOT LINE UP WITH THE OPENING THE BEST THAT IT COULD.

NQD-F500S-48

STEP 2

INSTALL SPRING (SEE INSTALLATION SHEET)



STEP 3

INSTALL HANDLE (SEE INSTALLATION SHEET)



SPRING INSTALLATION QWIKCHUTE NQD MODEL

STEP 2 LOOP FINGERS OVER SCREWDRIVER
BLADE AND LIFT SPRING ON TO SPRING BOLT
CAUTION --DO NOT OVER STRECH SPRING
DISCARD WIRE LOOP AFTER SPRING IS CONNECTED

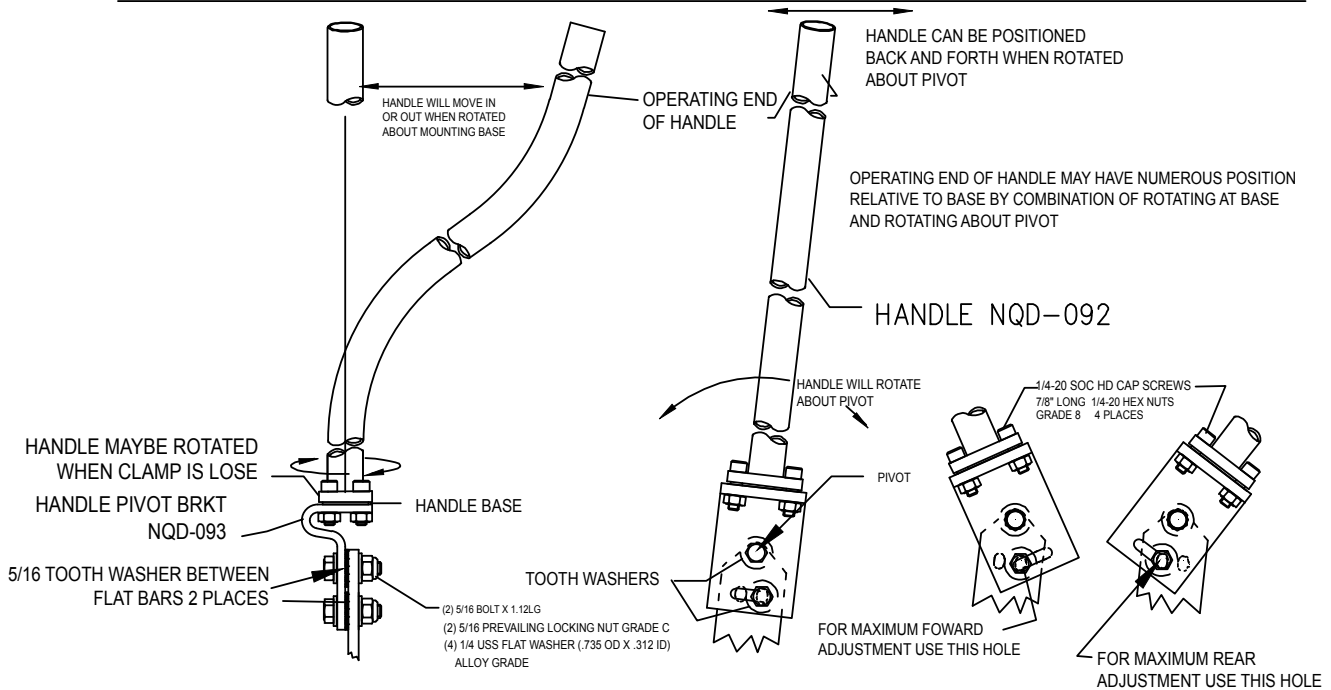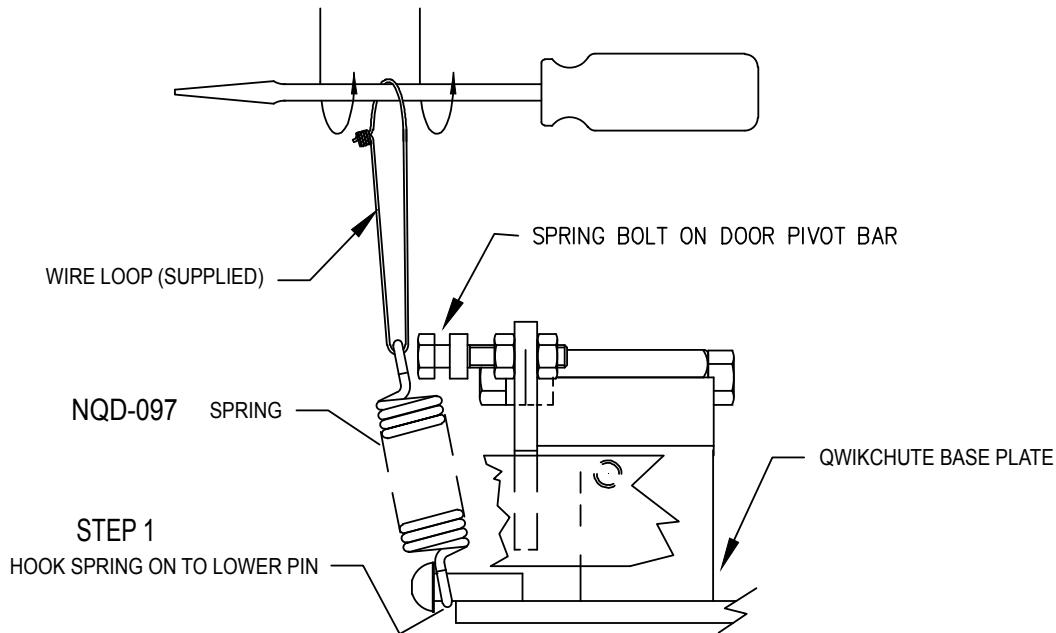

HANDLE INSTALLATION AND ADJUSTMENT

QWIKCHUTE OPERATING PRECEDURE

OPEN FULLY- move handle away from operator quickly.

CLOSE FULLY- move handle toward operator quickly.

PARTIALLY OPEN- from close position move handle away from operator until stay bar swings into position and release handle. To close from partially open position, quickly open and then close.

(some models do not have partial open feature.)

OIL ALL BEARING POINTS WEEKLY OR AS NEEDED.

WARRANTY

OIL ALL BEARING POINTS WEEKLY OR AS NEEDED

GTM Manufacturing, Inc. products are warranted to the original purchaser to be free from defects in materials and workmanship for a period of 90 days from the date of purchase.

Any part(s) of GTM products found to be defective within the warranty period shall, at GTM's option, be repaired or replaced without charge.

Warranty consideration is obtained by returning any GTM product/part believed to be defective to GTM Manufacturing, Inc. within the applicable warranty period. **Please call for authorization.**

GTM Manufacturing, Inc.
14350 EASTSIDE ST
GROVELAND, FL. 34736
(407) 654-6598
www.qwikchute.com

Warranty does not apply to conditions resulting from:

1. Damage(s) and/or costs associated with shipping and or/ transportation.
2. Lack of normal maintenance, adjustments, or service required for regular use of the product.
3. Modifications, service/repairs, parts or components not authorized by GTM.

GTM shall not be liable for any special, consequential, direct or indirect damages, and expressly states there are no implied warranties. Some states do not allow limitation of incidental or consequential damages, accordingly the above limitations and exclusions may not apply to you. This warranty provides you with specific legal rights which may vary from state to state.

IT IS THE OWNERS RESPONSIBILITY TO PROPERLY COMPLETE AND MAIL THE WARRANTY REGISTRATION CARD.

PROOF OF PURCHASE AND REGISTRATION WILL BE REQUIRED IN ORDER TO OBTAIN WARRANTY SERVICE.

WARRANTY REGISTRATION CARD

Name of Purchaser: _____
Street Address / P.O. Box: _____ County: _____
City: _____ State _____ Zip Code: _____

Model Number: _____ PURCHASE DATE: _____|_____|_____

Dealer Name: _____
Street Address: _____ County: _____
City: _____ State: _____ Zip Code: _____

Customer Received: Operators Manual (☐) Safety Instructions (☐) Demonstration (☐)

Customers Signature

Date