

BASE PLATE- **(MINI-04)** STANDARD MINI

DOOR BAR- **(MINI-05)** STANDARD MINI

HANDLE PIVOT- **(MINI-15)** STANDARD MINI

HANDLE- **(MINI-21)** STANDARD MINI

DOOR- **NQD-F60Z-36**

BRACKETS (2) **UB-04** (3.062" TALL) U-BRACKETS/INSTALLED

HARDWARE KIT- **H** CONTENTS:

(2) 5/16 -18 X 1 GR 5 HEX HEAD BOLT

(4) 5/16 SAE or 1/4 USS WASHER

(2) 5/16-18 NYLOC NUT

(1) NQD-097-SPRING

(1) SPRING PULLER

SPACER- **FE-15** (SPACER KIT) W/ HARDWARE:


(1) 3/8-16 X 3" HEX HEAD BOLT/**(1)** 3/8 X 1-1/2 FENDER
WASHER AND **(1)** 3/8-16 NYLOCK NUT

(1) **FE-15** (ALUMINUM SPACER)

NQD-F60Z-36



FRONT DECK SUPORT BEFORE

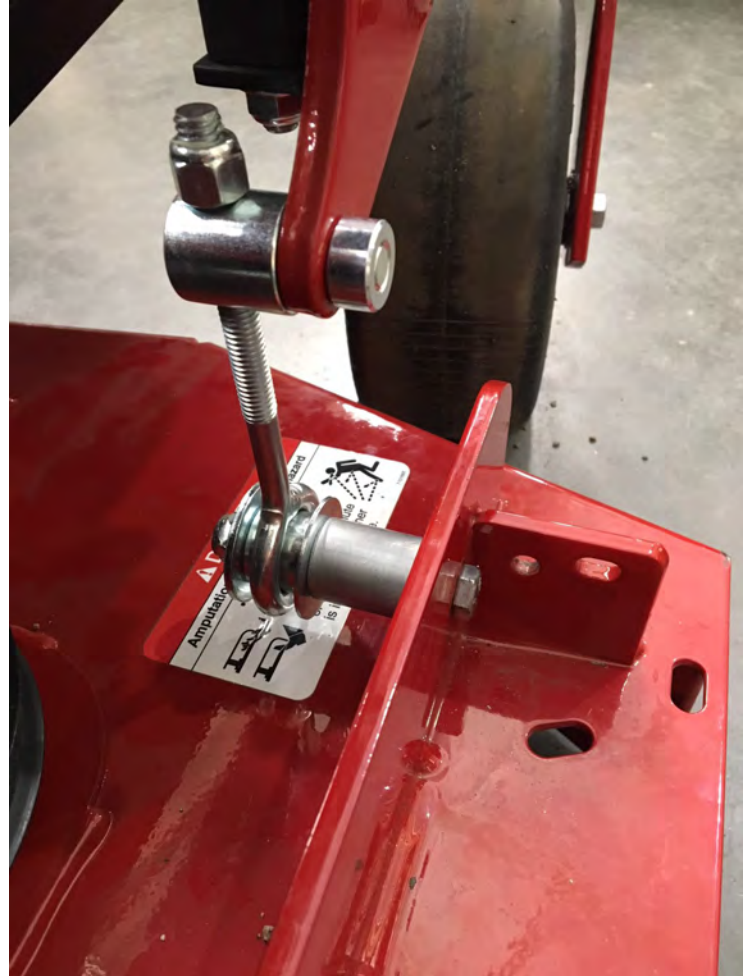

AFTER CHANGING POSITION AND ADDING SPACER

STEP 1

REMOVE FACTORY CHUTE FROM DECK

STEP 2

RELOCATE RIGHT FRONT DECK SUPPORT AS SHOWN IN PICTURE ABOVE. USE NEW 3/8-16 X 3 BOLT, WASHER AND SPACER PROVIDED IN KIT. REUSE EXISTING NUT WASHER AND SPACER AS SHOWN.

STEP 3


PLACE QWIKCHUTE ON DECK AS SHOWN BELOW WITH DOOR POSITIONED TO FIT DECK AND HELD TIGHT TO FACE OF DISCHARGE AREA. MARK THE SECOND HOLE TO BE DRILLED. REMOVE AND CENTER PUNCH HOLE AND DRILL WITH 3/8" BIT. USE TWO 5/16-18 X 1 BOLTS TO MOUNT HOLD TIGHT TO FACE WHEN TIGHTENING BOLTS.



MARK THIS HOLE TO DRILL


USE THE EXISTING HOLE TO MOUNT HERE

STEP 4- INSTALL HANDLE AS SHOWN

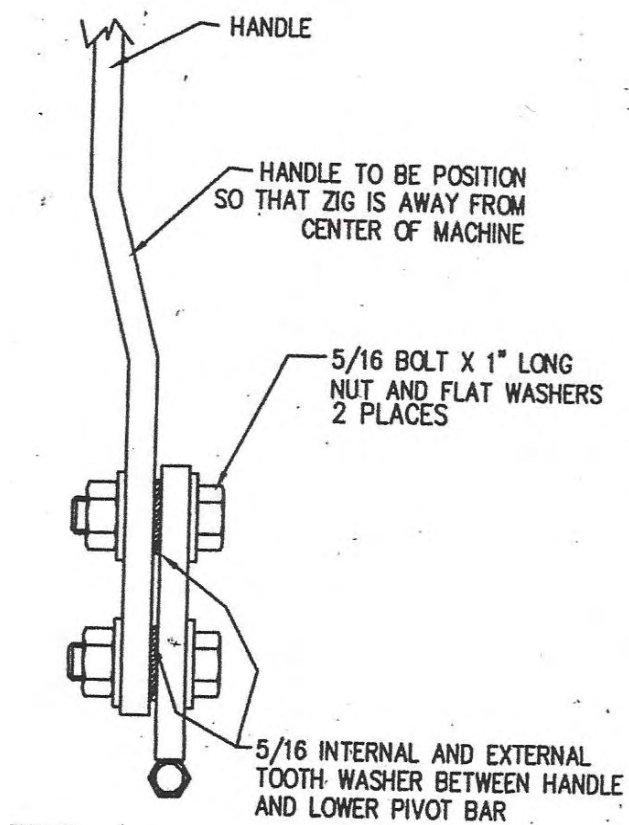

STEP 5- INSTALL SPRING


NQD MINI SERIES SPRING INSTALLATION

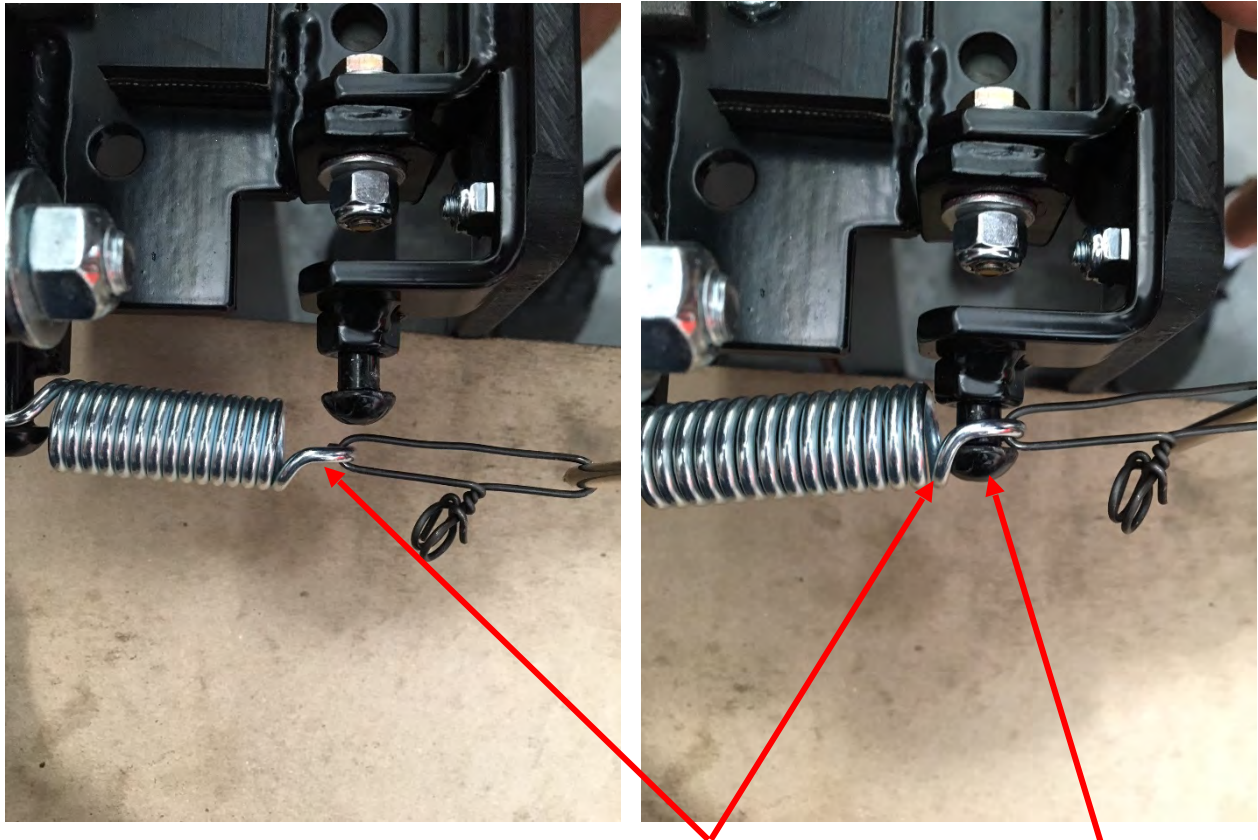

INSTALL SPRING WITH BEND IN HOOK AS SHOWN

SOME UNITS WILL HAVE A THREADED STUD HERE

INSTALL RETAINING LOCK NUT AFTER SPRING IS INSTALLED

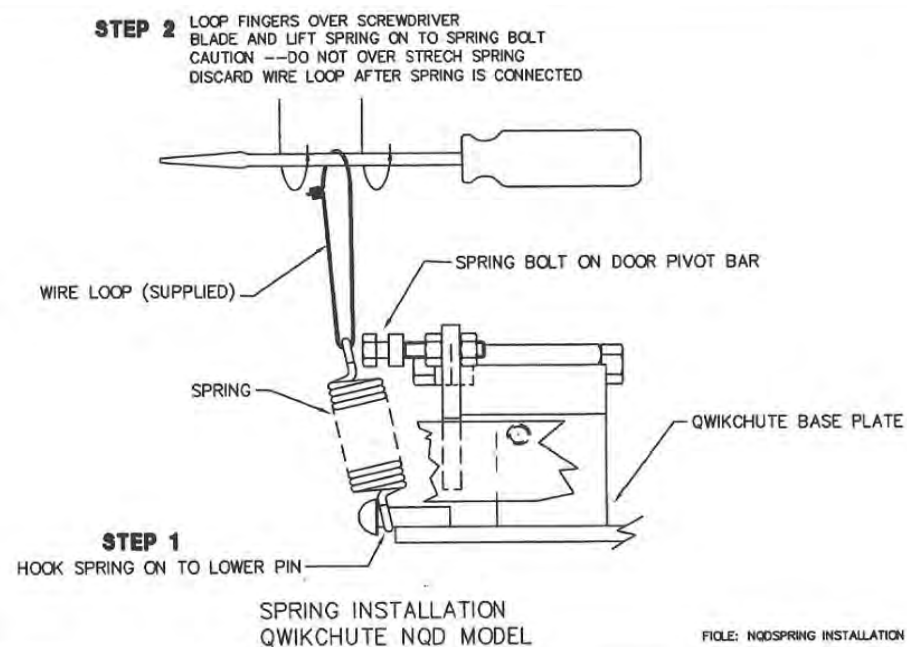

Qwikchute Operating Instructions

CLOSE Fully-move handle away from operator quickly.

OPEN Fully- move handle toward operator quickly.

OIL ALL BEARING POINT WEEKLY OR AS NEEDED.

WARRANTY

GTM Manufacturing, Inc. products are warranted to the original purchaser to be free from defects in materials and workmanship for a period of 90 days from the date of purchase.

Any part(s) of GTM products found to be defective within the warranty period shall, at GTM's option, be repaired or replaced without charge.

Warranty consideration is obtained by returning any GTM product/part believed to be defective to GTM Manufacturing, Inc. within the applicable warranty period. **Please call for authorization.**

GTM Manufacturing, Inc.

14350 EASTSIDE ST

GROVELAND, FL. 34736

(407) 654-6598

www.qwikchute.com

Warranty does not apply to conditions resulting from:

1. Damage(s) and/or costs associated with shipping and or/ transportation.
2. Lack of normal maintenance, adjustments, or service required for regular use of the product.
3. Modifications, service/repairs, parts or components not authorized by GTM.

GTM shall not be liable for any special, consequential, direct or indirect damages, and expressly states there are no implied warranties. Some states do not allow limitation of incidental or consequential damages, accordingly the above limitations and exclusions may not apply to you. This warranty provides you with specific legal rights which may vary from state to state.

IT IS THE OWNERS RESPONSIBILITY TO PROPERLY COMPLETE AND MAIL THE WARRANTY REGISTRATION CARD.

PROOF OF PURCHASE AND REGISTRATION WILL BE REQUIRED IN ORDER TO OBTAIN WARRANTY SERVICE.

WARRANTY REGISTRATION CARD

Name of Purchaser: _____

Street Address / P.O. Box: _____

City: _____ State: _____ Zip Code: _____

Model Number: _____ PURCHASE DATE: _____|_____|_____

Dealer Name: _____

Street Address: _____

City: _____ State: _____ Zip Code: _____

Customer Received: Operators Manual () Safety Instructions () Demonstration ()

Customers Signature

Date