

# **NQD-GCP44 KIT CONTENTS. INSPECTED BY:\_\_\_\_\_**

BASE PLATE- **(NQD-071)** STANDARD

DOOR BAR- **(NQD-080)** STANDARD

HANDLE PIVOT- **(NQD-075)** STANDARD

HANDLE- **(NQD-092)** STANDARD

DOOR- **NQD-GCP44**

CENTER DEFLECTOR- **(NQD-100)** STANDARD

BRACKETS- **(2) UB-07** (1 ½" EXMARK U-BRACKETS)/**INSTALLED**

HARDWARE KIT- **A** CONTENTS:

- (4)** 1/4-20 X 7/8 SOCKET HEAD BOLT
- (4)** 1/4-20 GR 8 NUTS
- (2)** 5/16-18 X 1 GR 5 HEX HEAD BOLT
- (4)** 5/16 SAE **or** 1/4 USS WASHER
- (2)** 5/16-18 NYLOC NUT
- (1)** NQD-097-SPRING
- (1)** SPRING PULLER



USE EXISTING DECK BAFFLE HOLE FOR  
QWIKCHUTE MOUNTING BRACKET

MOUNTING U-BRACKETS ARE SHIPPED —  
ATTACHED TO THE BASE PLATE OF THE  
QWIKCHUTE.  
DO NOT REMOVE FROM QWIKCHUTE WHEN  
MARKING HOLE LOCATION



**NQD-GCP44**

POSITION QWIKCHUTE ON DECK (DOOR AGAINST DISCHARGE FACE)  
MARK QWIKCHUTE MOUNTING HOLES (CENTER OF SLOT) ON  
DECK REMOVE QWIKCHUTE AND CENTER PUNCH MARKED  
HOLE LOCATION. THEN DRILL 3/8" DIAMETER THROUGH  
TOP OF DECK. INSTALL QWIKCHUTE ON DECK USING  
SUPPLIED 5/16 X 1" BOLTS AND NUTS AND WASHERS , DOOR TO BE  
TIGHT TO DISCHARGE FACE WHEN TIGHTENING BOLTS

INSTALL SPRING AND HANDLE AS SHOWN IN  
FOLLOWING PAGES

## SPRING INSTALLATION QWIKCHUTE NQD MODEL

**STEP 2** LOOP FINGERS OVER SCREWDRIVER  
BLADE AND LIFT SPRING ON TO SPRING BOLT  
CAUTION --DO NOT OVER STRECH SPRING  
DISCARD WIRE LOOP AFTER SPRING IS CONNECTED

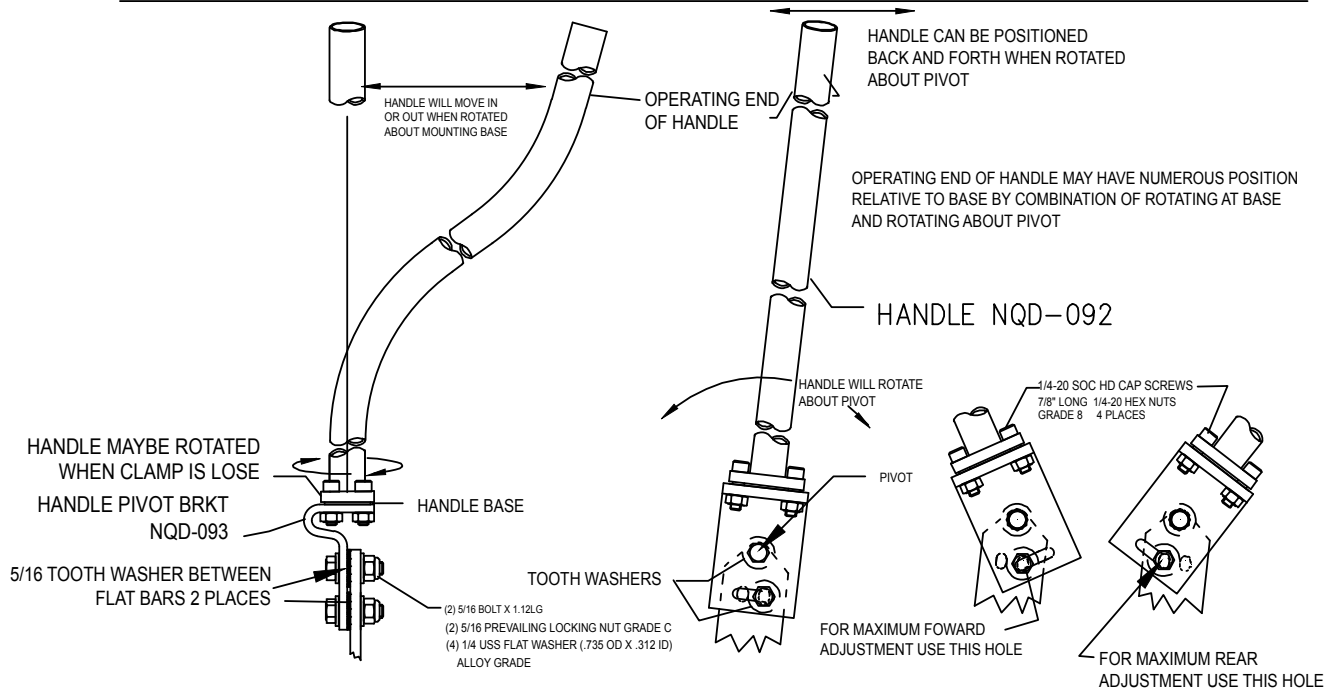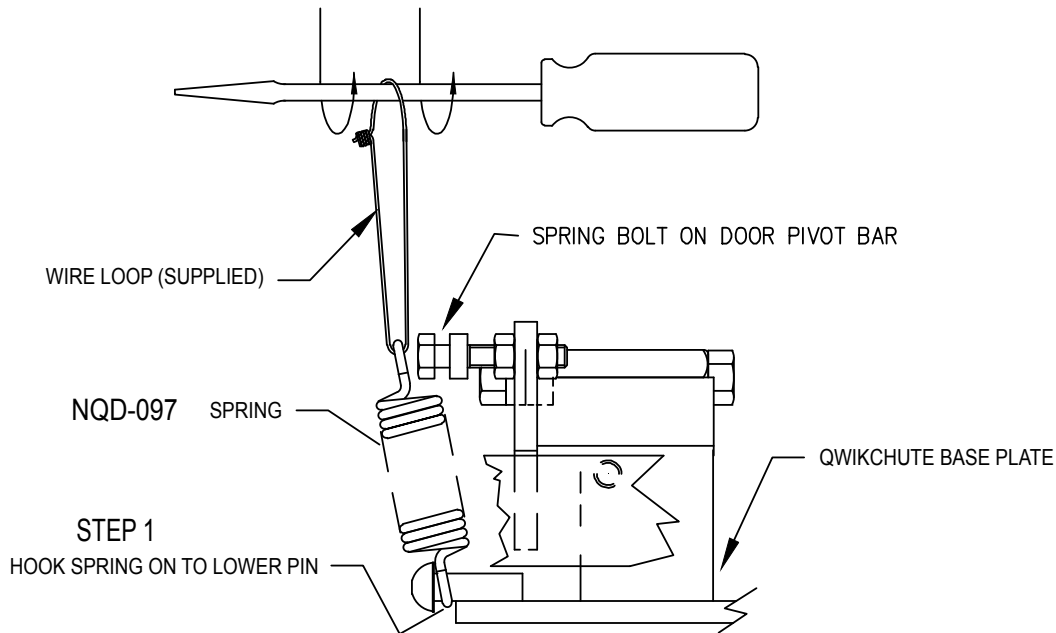

### HANDLE INSTALLATION AND ADJUSTMENT

### QWIKCHUTE OPERATING PRECEDURE

OPEN FULLY- move handle away from operator quickly.

CLOSE FULLY- move handle toward operator quickly.

PARTIALLY OPEN- from close position move handle away from operator until stay bar swings into position and release handle. To close from partially open position, quickly open and then close.

(some models do not have partial open feature.)

## OIL ALL BEARING POINTS WEEKLY OR AS NEEDED.

## **WARRANTY**

### **OIL ALL BEARING POINTS WEEKLY OR AS NEEDED**

GTM Manufacturing, Inc. products are warranted to the original purchaser to be free from defects in materials and workmanship for a period of 90 days from the date of purchase.

Any part(s) of GTM products found to be defective within the warranty period shall, at GTM's option, be repaired or replaced without charge.

Warranty consideration is obtained by returning any GTM product/part believed to be defective to GTM Manufacturing, Inc. within the applicable warranty period. **Please call for authorization.**

**GTM Manufacturing, Inc.**  
**14350 EASTSIDE ST**  
**GROVELAND, FL. 34736**  
**(407) 654-6598**  
**www.qwikchute.com**

**Warranty does not apply to conditions resulting from:**

1. Damage(s) and/or costs associated with shipping and or/ transportation.
2. Lack of normal maintenance, adjustments, or service required for regular use of the product.
3. Modifications, service/repairs, parts or components not authorized by GTM.

GTM shall not be liable for any special, consequential, direct or indirect damages, and expressly states there are no implied warranties. Some states do not allow limitation of incidental or consequential damages, accordingly the above limitations and exclusions may not apply to you. This warranty provides you with specific legal rights which may vary from state to state.

**IT IS THE OWNERS RESPONSIBILITY TO PROPERLY COMPLETE AND MAIL THE WARRANTY REGISTRATION CARD.**

**PROOF OF PURCHASE AND REGISTRATION WILL BE REQUIRED IN ORDER TO OBTAIN WARRANTY SERVICE.**

### **WARRANTY REGISTRATION CARD**

Name of Purchaser: \_\_\_\_\_  
Street Address / P.O. Box: \_\_\_\_\_ County: \_\_\_\_\_  
City: \_\_\_\_\_ State \_\_\_\_\_ Zip Code: \_\_\_\_\_

Model Number: \_\_\_\_\_ PURCHASE DATE: \_\_\_\_\_|\_\_\_\_\_|\_\_\_\_\_

Dealer Name: \_\_\_\_\_  
Street Address: \_\_\_\_\_ County: \_\_\_\_\_  
City: \_\_\_\_\_ State: \_\_\_\_\_ Zip Code: \_\_\_\_\_

Customer Received: Operators Manual ( ☐ ) Safety Instructions ( ☐ ) Demonstration ( ☐ )

\_\_\_\_\_  
Customers Signature

\_\_\_\_\_  
Date