

BASE PLATE- STANDARD MINI (**MINI-04**)

DOOR BAR- STANDARD MINI (**MINI-05**)

HANDLE PIVOT- STANDARD MINI (**MINI-15**)


HANDLE- STANDARD MINI (**MINI-21 W/ HARDWARE**)

DOOR- **NQD-HFTSD36**

FLIPPER- NO

HARDWARE KIT- **O KIT**

- (1) HU-17 (HFTSD36 channel brkt)
- (2) 3/8-16 NYLOC NUT
- (2) 3/8 SAE WASHER
- (2) 5/16-18 X 1 GR 5 HEX HEAD BOLT
- (4) 5/16 SAE **or** 1/4 USS WASHER
- (2) 5/16-18 NYLOC NUT
- (3) 1/4-20 X 1 GR 8 HEX HEAD BOLT
- (6) 1/4 SAE WASHER
- (3) 1/4-20 GR 8 NUT
- (1) NQD-097-SPRING
- (1) SPRING PULLER

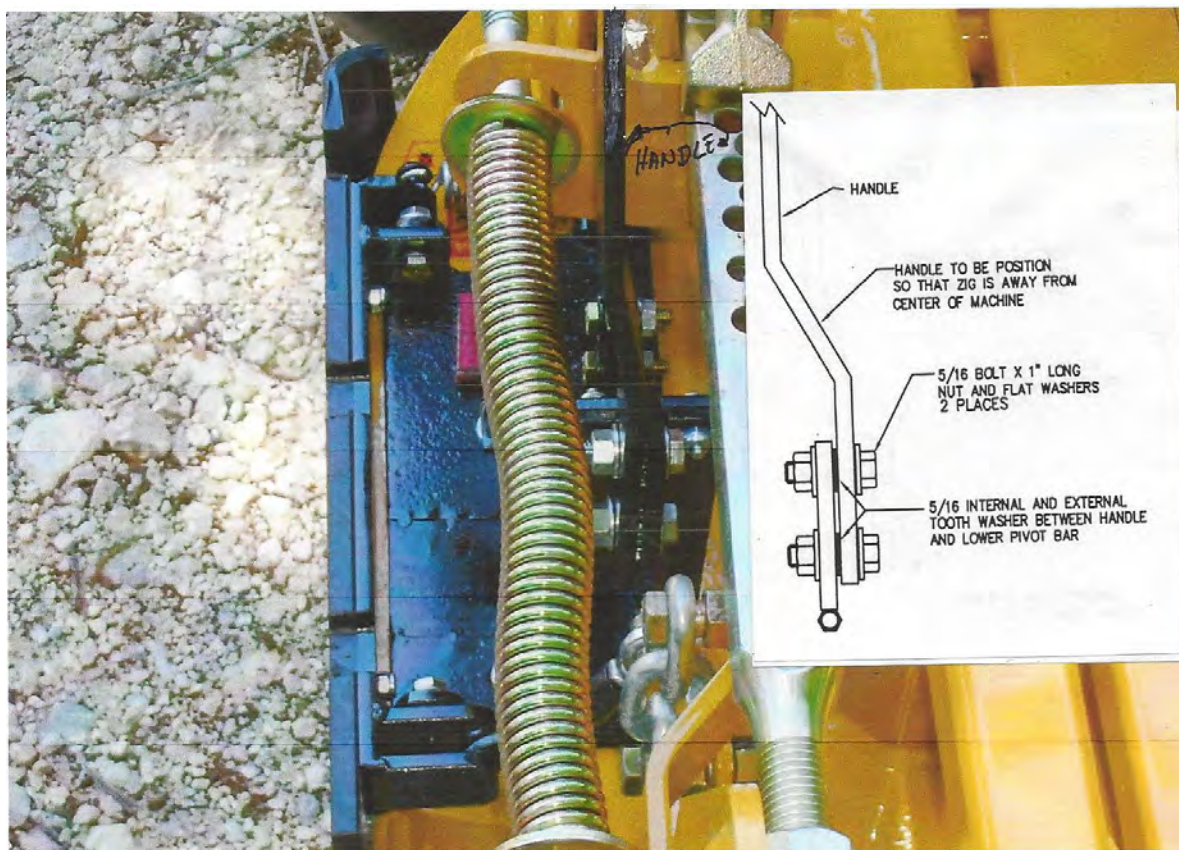

STEP 1


RELOCATE DECK CHAIN LIFT
BRACKET AS SHOWN IN PICTURE 1A

STEP 2


POSITION QWIKCHUTE ASSEMBLY
ON MOWER DECK WITH HOLES IN
BASE PLATE ALIGNED WITH EXISTING
STUDS IN DECK. USE 3/8 NUTS & WASHER
AS SUPPLIED. WITH QWIKCHUTE DOOR
CLOSED AND POSITIONED TIGHT AGAINST
DISCHARGE FACE TIGHTEN HARDWARE.


STEP 3

INSTALL HANDLE AS SHOWN

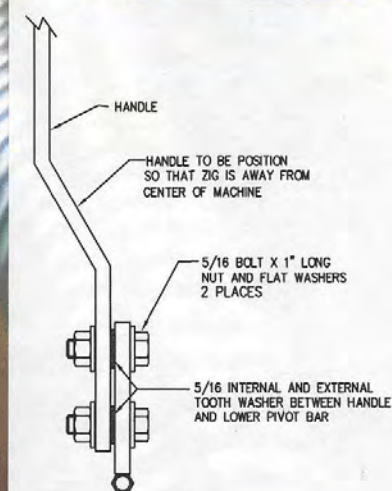


HANDLE POSITION FOR
2012 DECK

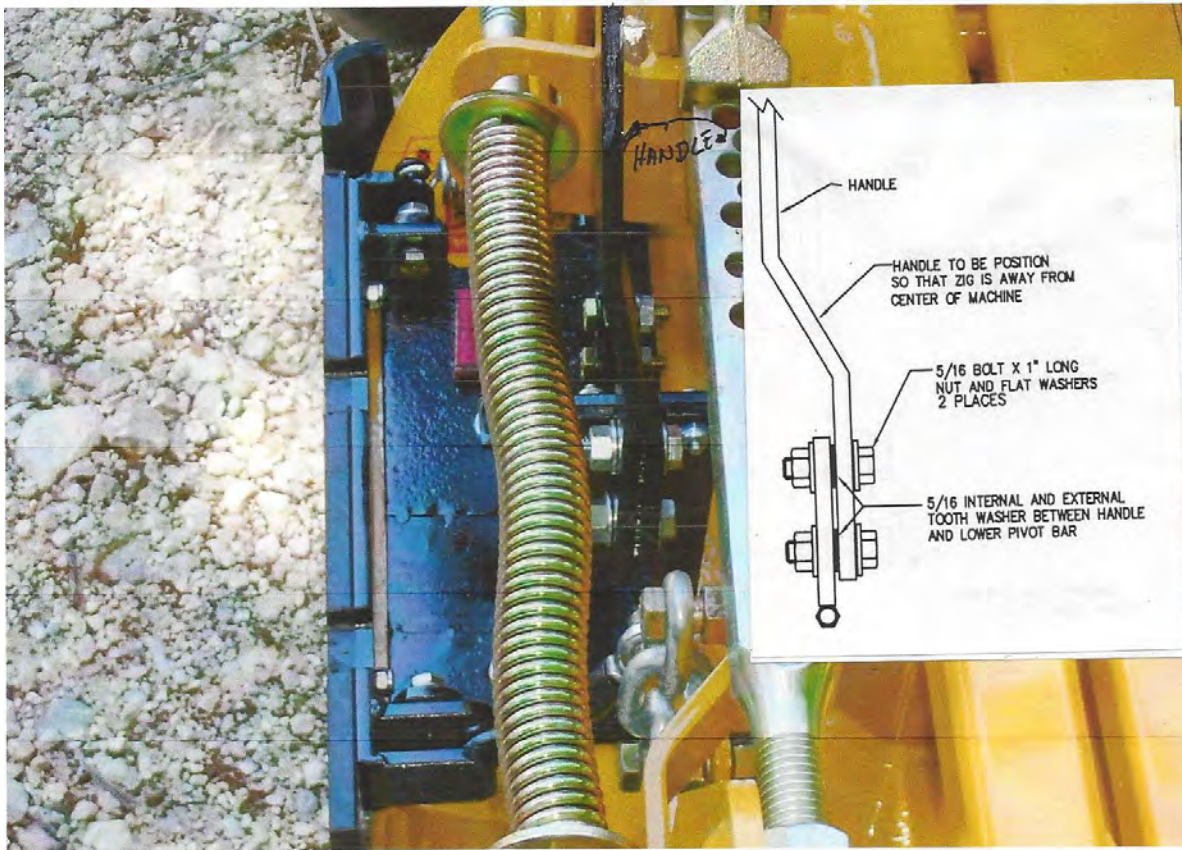


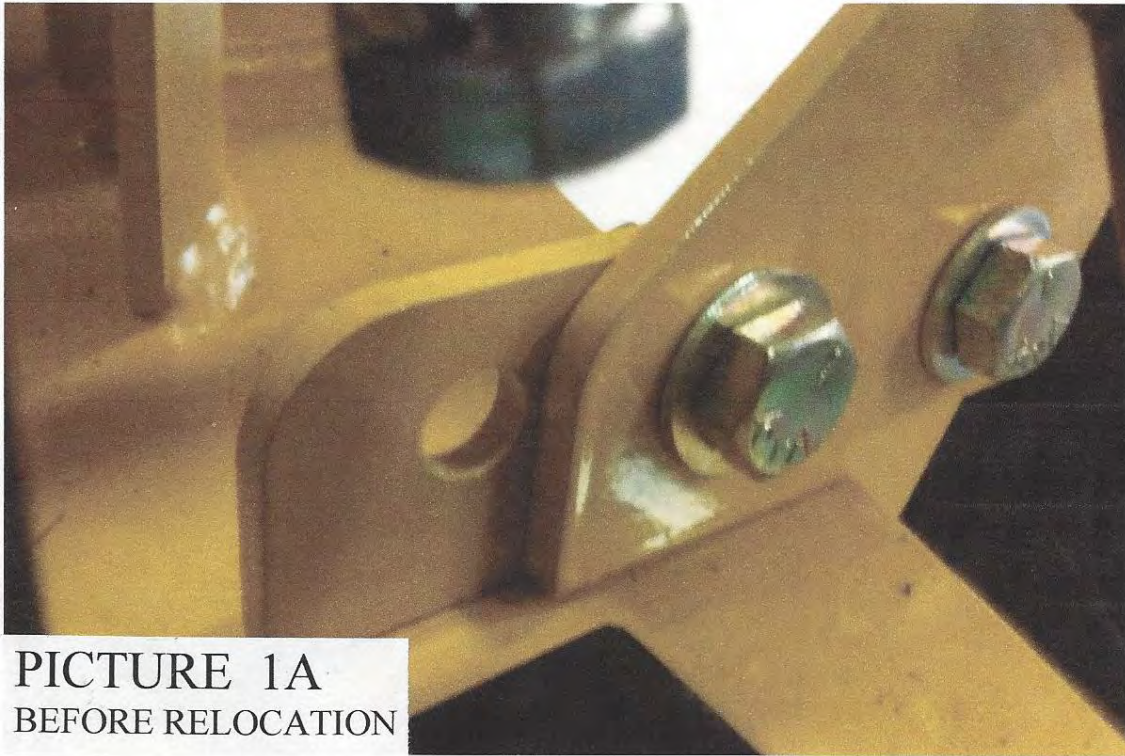

PICTURE 1A
BEFORE RELOCATION

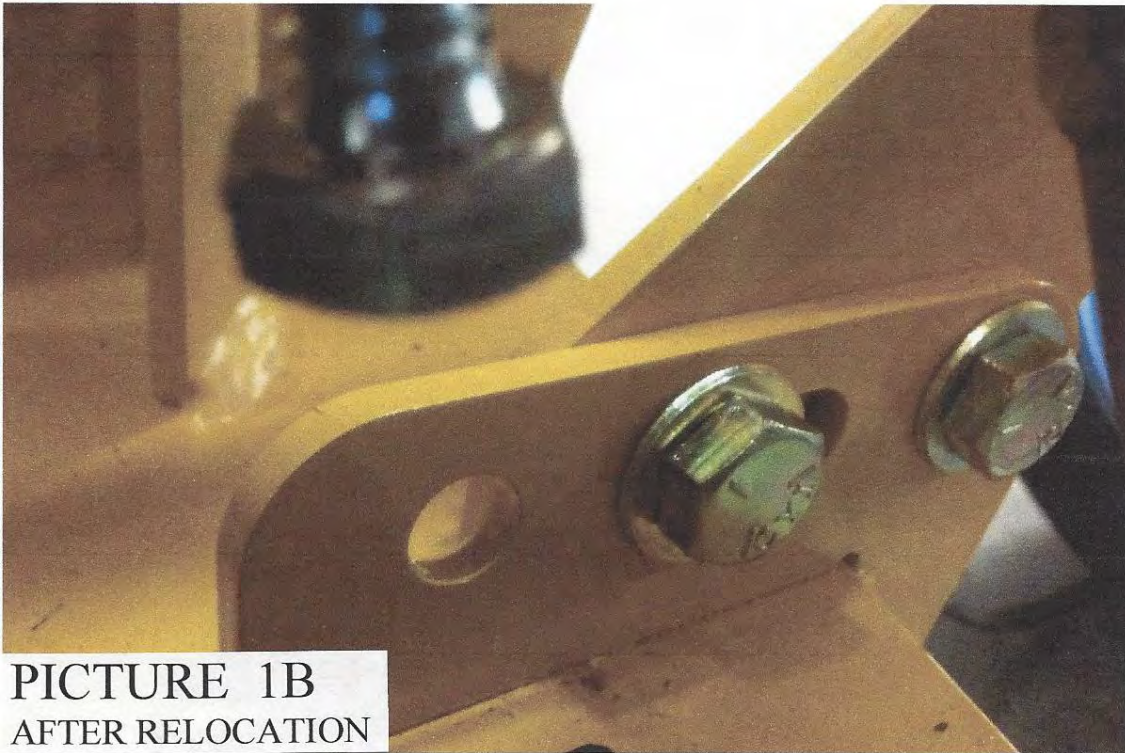

PICTURE 1B
AFTER RELOCATION

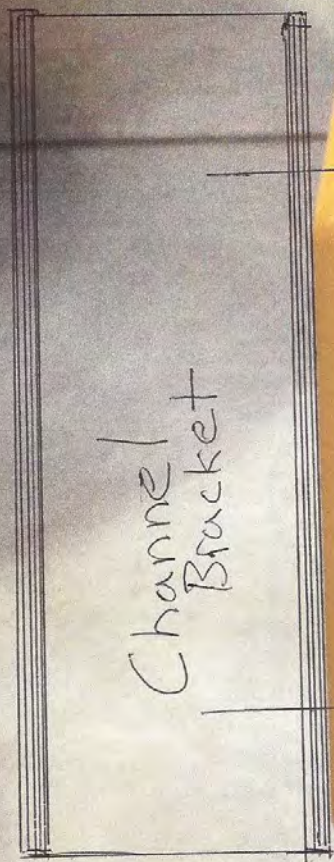

**IF YOUR DECK HAS THIS
STYLE OPENING USE THE
CHANNEL BRACKET
SUPPLIED TO FILL THE
GAP.**

**-PUT THE BRACKET UP TO
THE FLANGE AND MARK
THE HOLES.**

-DRILL 9/32" DIA HOLES


**-ATTACH WITH 1/4" HARD
WARE SUPPLIED**

USED WITH NQD-HFTSD36

**USED ON QWIKCHUTE INSTALLATION FOR HUSTLER
FASTRAK SUPERDUTY 36"**

PAGE 40F4


NQD MINI SERIES SPRING INSTALLATION

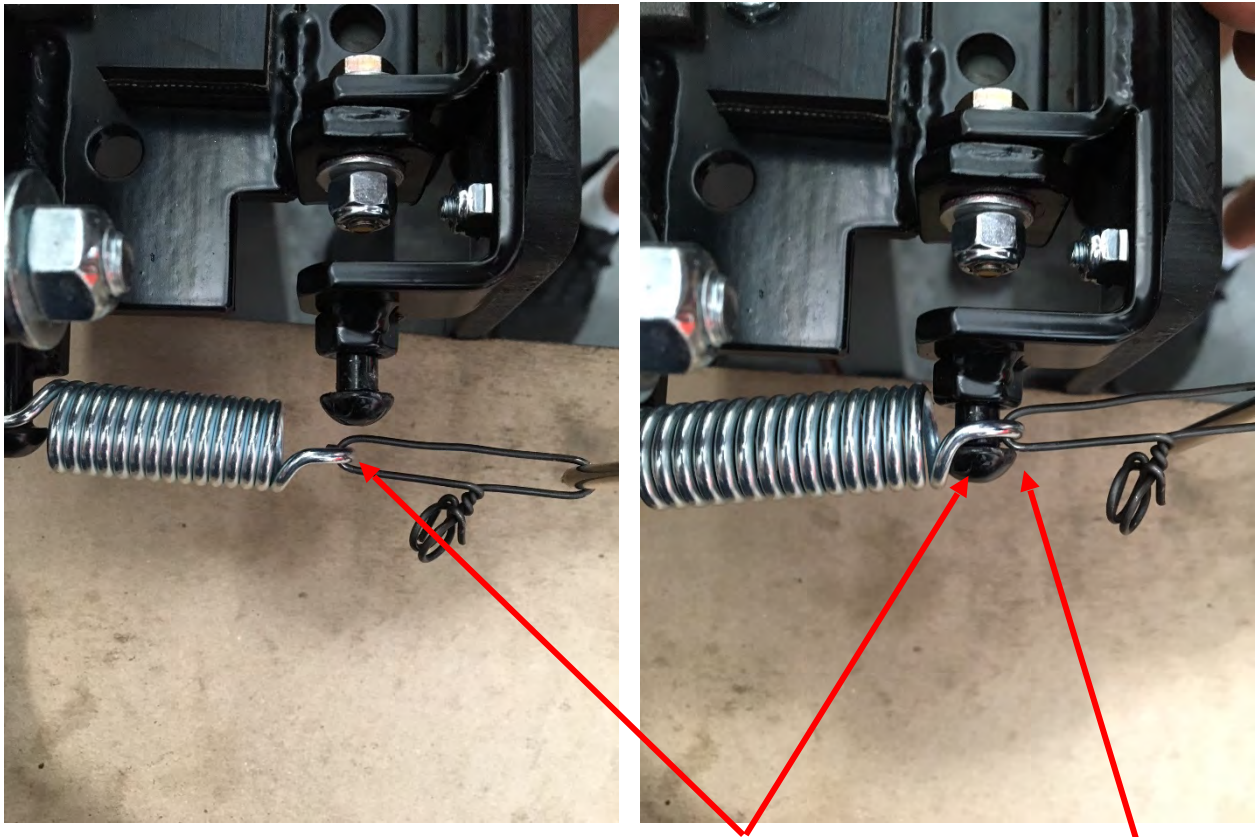

INSTALL SPRING WITH BEND IN HOOK AS SHOWN

SOME UNITS WILL HAVE A THREADED STUD HERE

IF SO, INSTALL RETAINING LOCK NUT AFTER SPRING IS INSTALLED

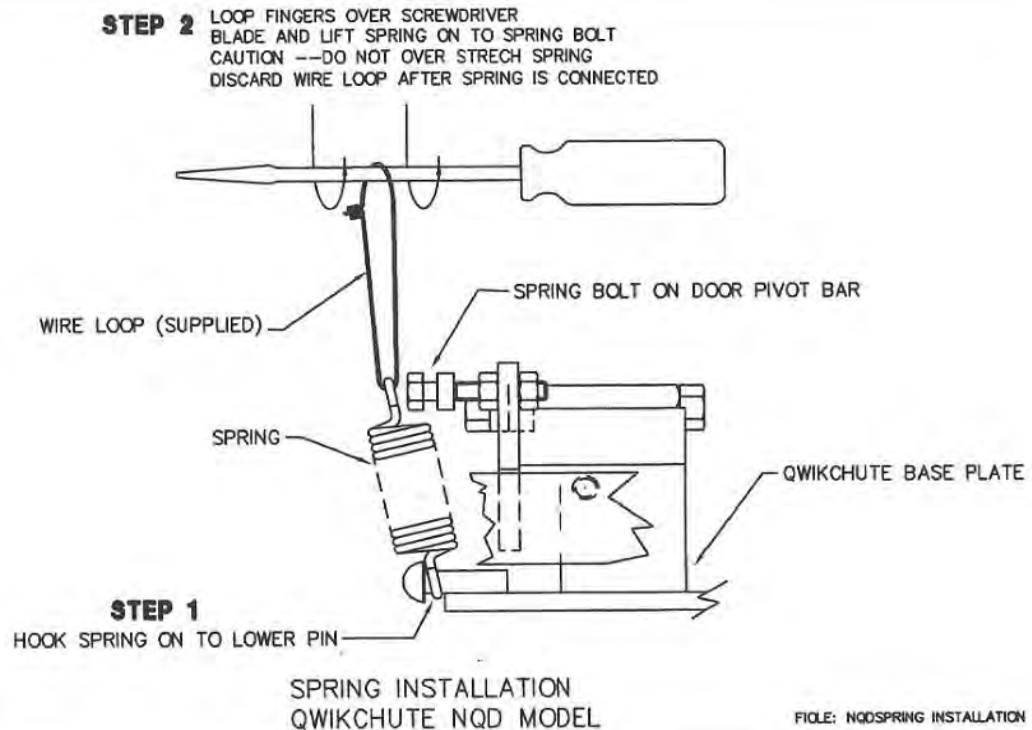

Qwikchute Operating Instructions

CLOSE Fully-move handle away from operator quickly.

OPEN Fully- move handle toward operator quickly.

OIL ALL BEARING POINT WEEKLY OR AS NEEDED.

WARRANTY

GTM Manufacturing, Inc. products are warranted to the original purchaser to be free from defects in materials and workmanship for a period of 90 days from the date of purchase.

Any part(s) of GTM products found to be defective within the warranty period shall, at GTM's option, be repaired or replaced without charge.

Warranty consideration is obtained by returning any GTM product/part believed to be defective to GTM Manufacturing, Inc. within the applicable warranty period. **Please call for authorization.**

GTM Manufacturing, Inc.

14350 EASTSIDE ST

GROVELAND, FL 34736

(407) 654-6598

www.qwikchute.com

Warranty does not apply to conditions resulting from:

1. Damage(s) and/or costs associated with shipping and or/ transportation.
2. Lack of normal maintenance, adjustments, or service required for regular use of the product.
3. Modifications, service/repairs, parts or components not authorized by GTM.

GTM shall not be liable for any special, consequential, direct or indirect damages, and expressly states there are no implied warranties. Some states do not allow limitation of incidental or consequential damages, accordingly the above limitations and exclusions may not apply to you. This warranty provides you with specific legal rights which may vary from state to state.

IT IS THE OWNERS RESPONSIBILITY TO PROPERLY COMPLETE AND MAIL THE WARRANTY REGISTRATION CARD.

PROOF OF PURCHASE AND REGISTRATION WILL BE REQUIRED IN ORDER TO OBTAIN WARRANTY SERVICE.

WARRANTY REGISTRATION CARD

Name of Purchaser: _____
Street Address / P.O. Box: _____
City: _____ State: _____ Zip Code: _____

Model Number: _____ PURCHASE DATE: _____

Dealer Name: _____
Street Address: _____
City: _____ State: _____ Zip Code: _____

Customer Received: Operators Manual () Safety Instructions () Demonstration ()

Customers Signature

Date