

NOTE: DO NOT USE PRE-ASSEMBLED REAR MOUNT WITHOUT CHANGING OUT THE ANGLED BUSHINGS FOR STRAIGHT BUSHINGS ON THIS MODEL.

BASE PLATE- **(HU-05)** MODIFIED(2 SLOTS)

DOOR BAR- STANDARD **(NQD-080)**

HANDLE PIVOT- OUT THE REAR W/ **NQD-117** USE HANDLE EXTENSION **(HU-11)**
(WITH DOUBLE BEND)

HANDLE- SHORT **(HU-34)**

DOOR- **NQD-HTSRDA36**

CENTER DEFLECTOR- STANDARD **(NQD-100)**

REAR HANDLE MOUNT- **HU-07-36**

LINKAGE- **XL (NQD-123/124 OR 154/124)**

HARDWARE KIT- **A** CONTENTS:

- (4)** 1/4-20 X 7/8 SOCKET HEAD BOLT
- (4)** 1/4-20 GR 8 NUTS
- (2)** 5/16-18 X 1 GR 5 HEX HEAD BOLT
- (4)** 5/16 SAE **or** 1/4 USS WASHER
- (2)** 5/16-18 NYLOC NUT
- (1)** NQD-097-SPRING
- (1)** SPRING PULLER



STEP 1

- A** REMOVE FACTORY CHUTE

STEP 2

- A** POSITION QWIKCHUTE ON MOWER DECK . INSTALL MOUNTING HARDWARE (BOLT 5/16 UNC X 1-1/4" LONG WITH FLAT WASHERS AND NUT) TIGHTEN MOUNTING HARDWARE WITH QWIKCHUTE DOOR TIGHT AGAINST DISCHARGE FACE

- B** INSTALL HANDLE PIVOT BRACKET AT CONTROL AREA
USE (2) BOLTS 1/2 X 3-1/2 LONG SUPPLIED

- C** INSTALL THE ROD ASSEMBLY

STEP 3

- A** INSTALL SPRING (SEE SPRING INSTALLATION SHEET)

- B** INSTALL HANDLE (SEE HANDLE INSTALLATION SHEET)

THE ROD ADJUSTMENT


- A.** POSITION DECK IN LOWEST POSITION
B. QWIKCHUTE DOOR COMPLETELY OPEN
C. QWIKCHUTE OPERATING HANDLE IN FORWARD POSITION
D. TIGHTEN SCREW ON LOCKING COLLAR

THE ROD ASSEMBLY

- (1) SET COLLAR
(1) TUBE
(1) EXTENSION ROD 1/2" DIA X 6"
(2) MALE ROD ENDS 3/8"

QWIKCHUTE INSTALLATION MODEL NQD-HTSRDA48/54/36
HUSTLER TRIM STAR 48"±36" (LEVER DECK HEIGHT ADJUSTMENT)



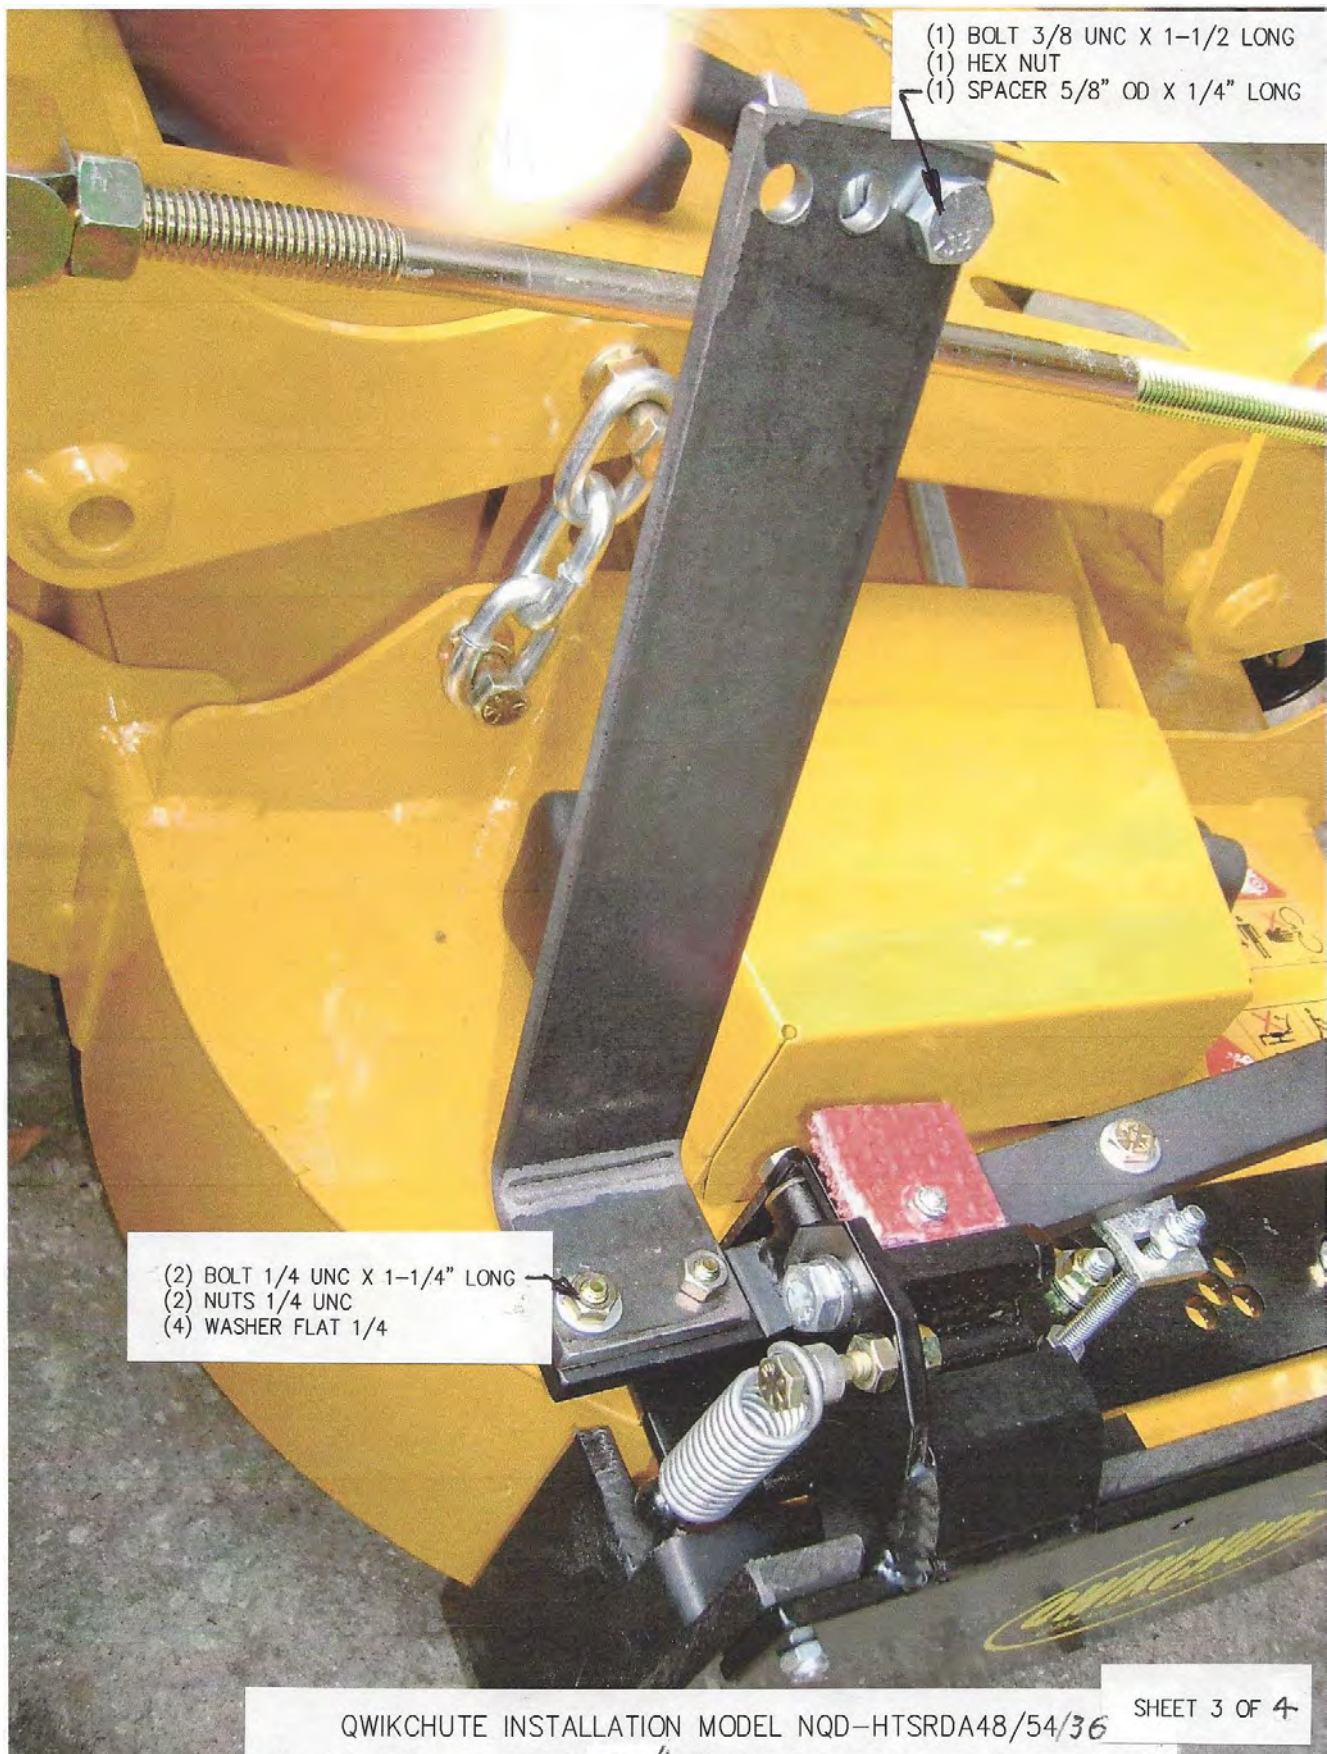

- (1) BOLT 3/8 UNC X 1-1/2" LONG
- (1) HEX NUT
- (1) SPACER 5/8" OD X 1/4" LONG

- (2) BOLT 1/4 UNC X 1-1/4" LONG
- (2) NUTS 1/4 UNC
- (4) WASHER FLAT 1/4

QWIKCHUTE INSTALLATION MODEL NQD-HTSRDA48/54/36
HUSTLER TRIM STAR 48" x 36" (LEVER DECK HEIGHT ADJUSTMENT)



SHEET 3 OF 4



QWIKCHUTE INSTALLATION MODEL NQD-HTSRDA48/54/36
HUSTLER TRIM STAR 48" & 36" (LEVER DECK HEIGHT ADJUSTMENT)

SPRING INSTALLATION QWIKCHUTE NQD MODEL

STEP 2 LOOP FINGERS OVER SCREWDRIVER
BLADE AND LIFT SPRING ON TO SPRING BOLT
CAUTION --DO NOT OVER STRECH SPRING
DISCARD WIRE LOOP AFTER SPRING IS CONNECTED

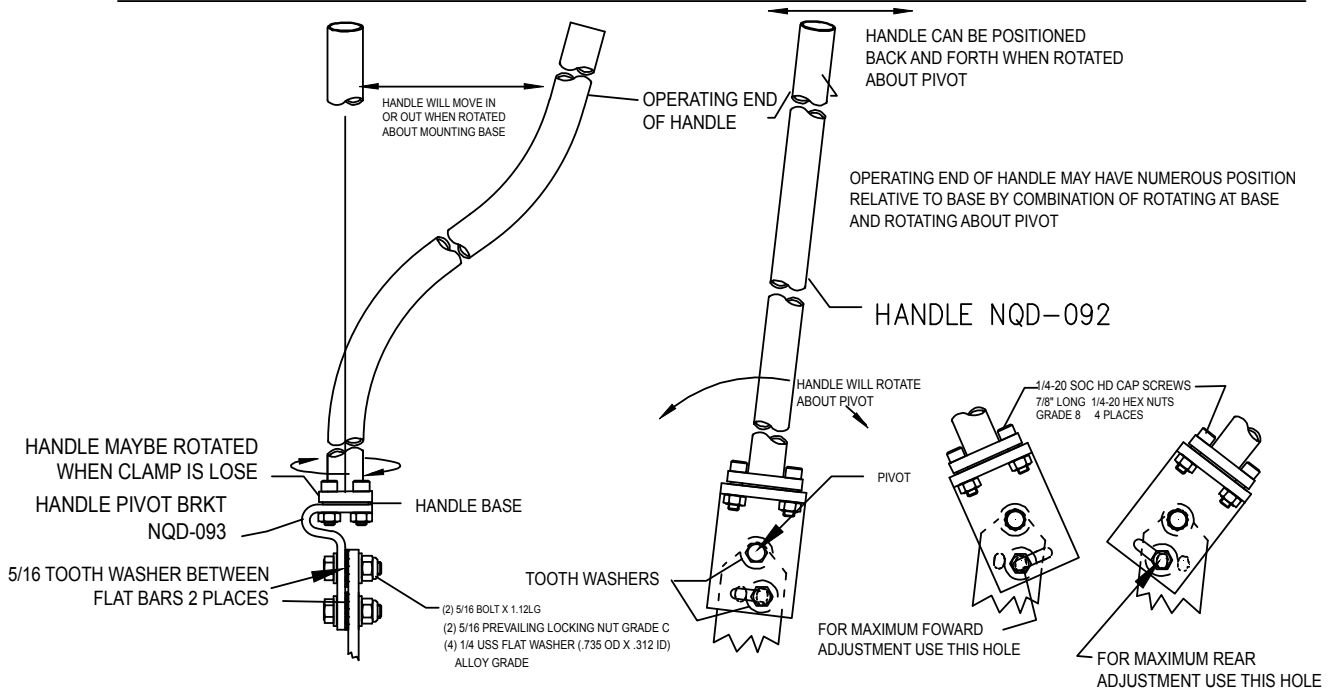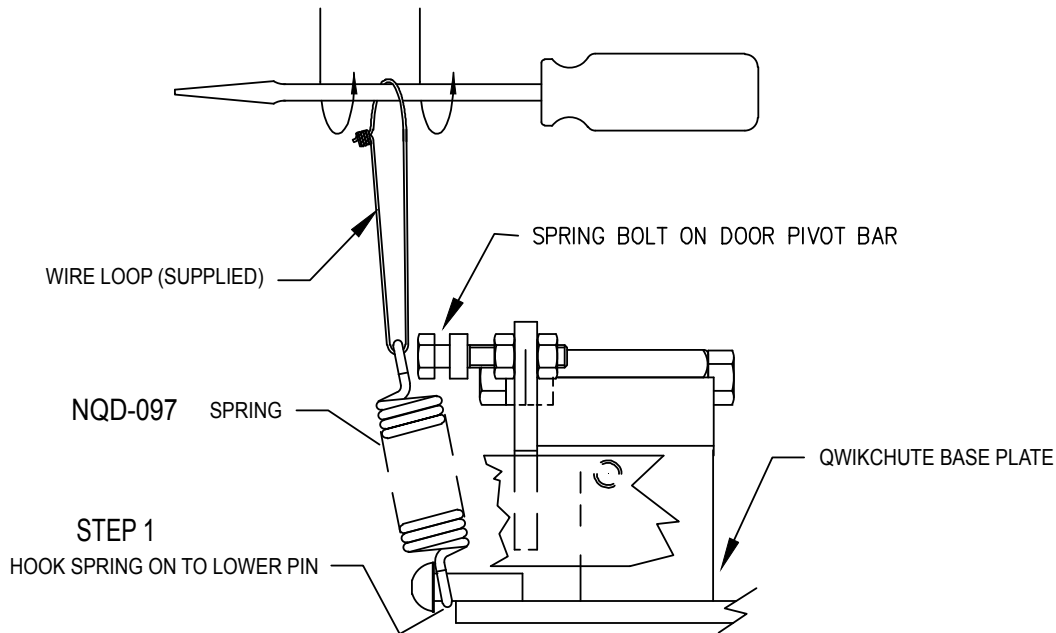

HANDLE INSTALLATION AND ADJUSTMENT

QWIKCHUTE OPERATING PRECEDURE

OPEN FULLY- move handle away from operator quickly.

CLOSE FULLY- move handle toward operator quickly.

PARTIALLY OPEN- from close position move handle away from operator until stay bar swings into position and release handle. To close from partially open position, quickly open and then close.

(some models do not have partial open feature.)

OIL ALL BEARING POINTS WEEKLY OR AS NEEDED.

WARRANTY

GTM Manufacturing, Inc. products are warranted to the original purchaser to be free from defects in materials and workmanship for a period of 90 days from the date of purchase.

Any part(s) of GTM products found to be defective within the warranty period shall, at GTM's option, be repaired or replaced without charge.

Warranty consideration is obtained by returning any GTM product/part believed to be defective to GTM Manufacturing, Inc. within the applicable warranty period. **Please call for authorization.**

GTM Manufacturing, Inc.

14350 EASTSIDE ST

GROVELAND, FL. 34736

(407) 654-6598

www.qwikchute.com

Warranty does not apply to conditions resulting from:

1. Damage(s) and/or costs associated with shipping and or/ transportation.
2. Lack of normal maintenance, adjustments, or service required for regular use of the product.
3. Modifications, service/repairs, parts or components not authorized by GTM.

GTM shall not be liable for any special, consequential, direct or indirect damages, and expressly states there are no implied warranties. Some states do not allow limitation of incidental or consequential damages, accordingly the above limitations and exclusions may not apply to you. This warranty provides you with specific legal rights which may vary from state to state.

IT IS THE OWNERS RESPONSIBILITY TO PROPERLY COMPLETE AND MAIL THE WARRANTY REGISTRATION CARD.

PROOF OF PURCHASE AND REGISTRATION WILL BE REQUIRED IN ORDER TO OBTAIN WARRANTY SERVICE.

WARRANTY REGISTRATION CARD

Name of Purchaser: _____

Street Address / P.O. Box: _____

City: _____ State: _____ Zip Code: _____

Model Number: _____ PURCHASE DATE: _____|_____|_____

Dealer Name: _____

Street Address: _____

City: _____ State: _____ Zip Code: _____

Customer Received: Operators Manual (☐) Safety Instructions (☐) Demonstration (☐)

Customers Signature

Date