

NQD-JD700-60 KIT CONTENTS. INSPECTED BY: _____

BASE PLATE- STANDARD, **NQD-071**

DOOR BAR- STANDARD, **NQD-080**

HANDLE PIVOT- STANDARD, **NQD-075**

HANDLE- STANDARD, **NQD-092**

DOOR- **NQD-JD60B(LH) / NQD-JD700-60**

CENTER DEFLECTOR- STANDARD, **NQD-100**

END DEFLECTOR- **NQD-121-1, FULL**

BRACKETS- (2) **UB-02** INSTALLED

HARDWARE KIT- **CPW**

BAFFLE/SUBPLATE- **(JD-01)** JOHN DEERE 60" STEEL BAFFLE

JOHN DEERE 700 60"

NQD-JD700-60




FIG 1.

INSTALL THE BAFFLE ONTO THE DECK FIRST. (INSTRUCTIONS ON PAGE 3)
MOUNT THE QWIKCHUTE BRACKET IN THE EXISTING HOLE AS SHOWN IN FIG 1.
CLOSE THE DOOR OF THE QWIKCHUTE AND ALIGNING IT WITH THE OPENING, THEN MARK THE SLOTS IN THE OTHER 3 BRACKETS WITH A MARKER.
REMOVE THE QWIKCHUTE FROM THE DECK AND CENTER PUNCH THE CENTER OF THE 3 MARKS.
DRILL THE 3 MARKED HOLES WITH A 9/32" DRILL.
REINSTALL THE QWIKCHUTE AND PLACE THE SUPPLIED WASHERS (2 UNDER EACH BRACKET) AS SHOWN IN FIG 2.



FIG 2.

INSTALL 2) WASHERS UNDER EACH BRACKET TO LEVEL THE QWIKCHUTE.


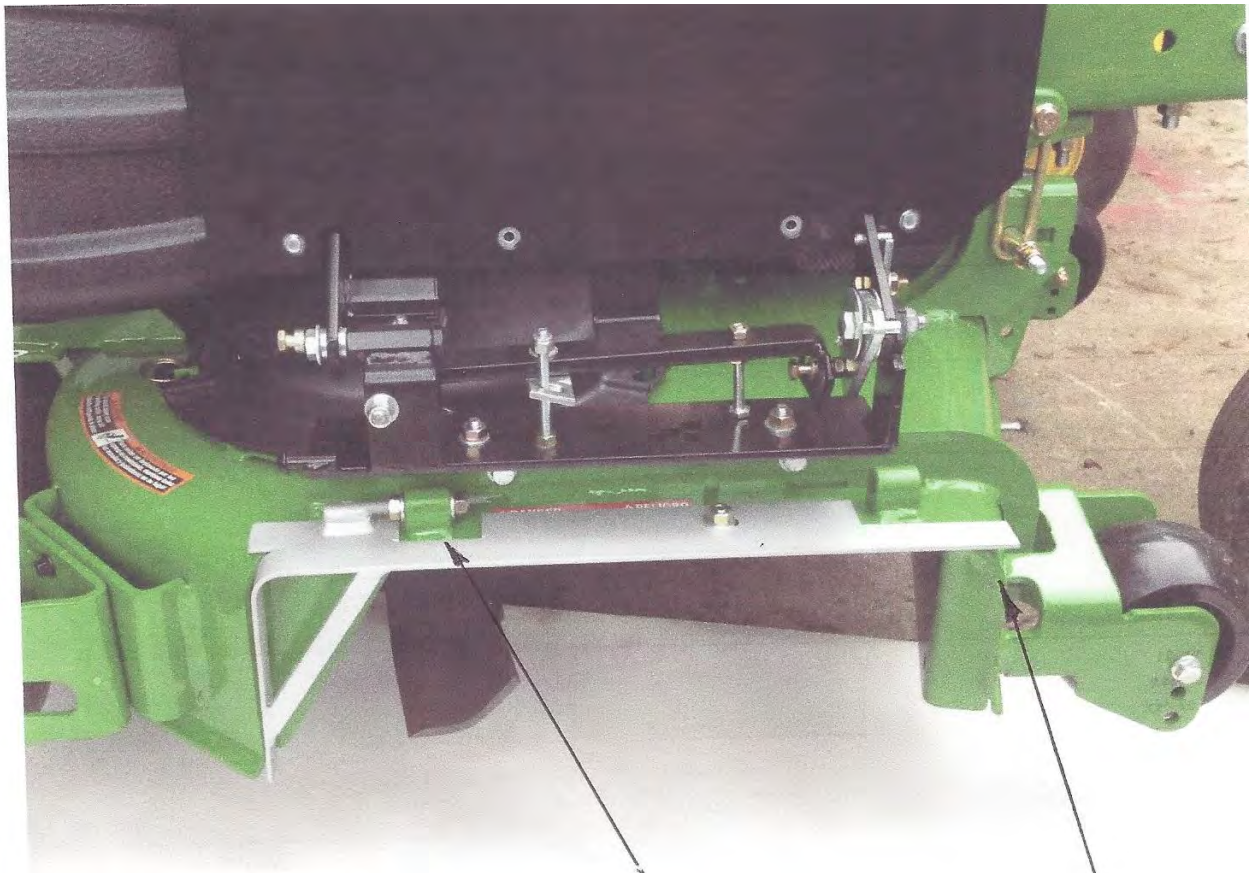


TO INSTALL THREADED ROD ON DECK BAFFLE
THROUGH HOLE OF DECK BOSS ROTATE BAFFLE
WITH LEG OUTWARD AND INSERT ROD INTO HOLE
THEN ROTATE BAFFLE INTO CORRECT POSITION

1. INSTALL DECK BAFFLE AS SHOWN ABOVE
USING HARDWARE SUPPLIED WITH QWIKCHUTE KIT
2. ALIGN BAFFLE EDGE SO THAT EDGE OF BAFFLE AND EDGE OF
DECK ARE FLUSH WITH EACH OTHER AT FRONT OF DECK.
3. TIGHTEN HARDWARE WHILE BAFFLE IS HELD IN PLACE.

QWIKCHUTE BAFFLE INSTALLATION
JOHN DEERE 54" / 60" 7 IRON PRO DECK
NQD-JD54B AND NQD-JD60B

STEP 2 LOOP FINGERS OVER SCREWDRIVER
BLADE AND LIFT SPRING ON TO SPRING BOLT
CAUTION -DO NOT OVER STRECH SPRING
DISCARD WIRE LOOP AFTER SPRING IS CONNECTED

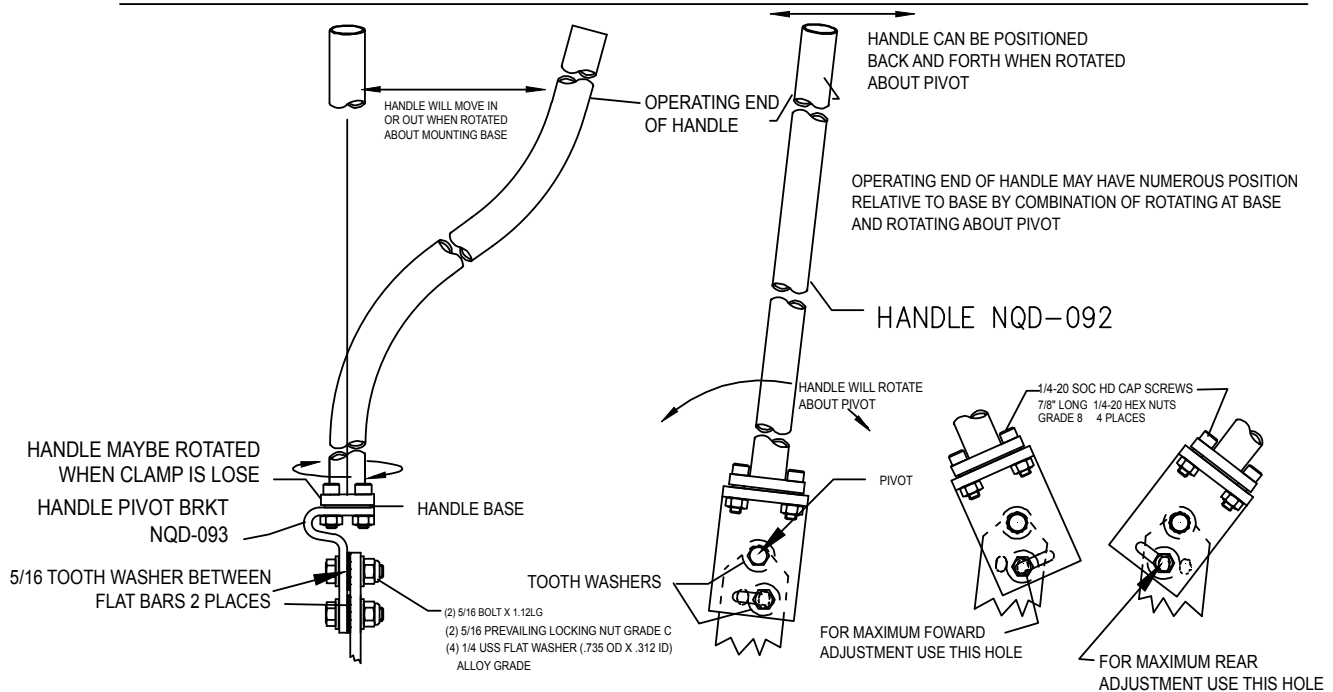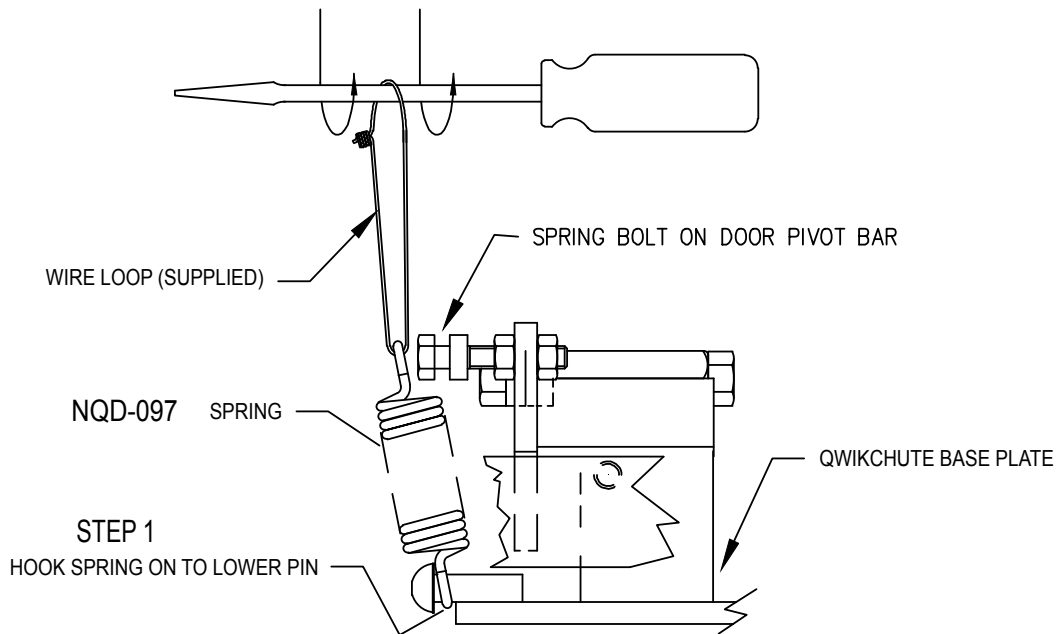

OPEN FULLY- move handle away from operator quickly.

CLOSE FULLY- move handle toward operator quickly.

PARTIALLY OPEN- from close position move handle away from operator until stay bar swings into position and release handle. To close from partially open position, quickly open and then close.

(some models do not have partial open feature.)

OIL ALL BEARING POINTS WEEKLY OR AS NEEDED.

WARRANTY

GTM Manufacturing, Inc. products are warranted to the original purchaser to be free from defects in materials and workmanship for a period of 90 days from the date of purchase.

Any part(s) of GTM products found to be defective within the warranty period shall, at GTM's option, be repaired or replaced without charge.

Warranty consideration is obtained by returning any GTM product/part believed to be defective to GTM Manufacturing, Inc. within the applicable warranty period. **Please call for authorization.**

GTM Manufacturing, Inc.

14350 EASTSIDE ST

GROVELAND, FL. 34736

(407) 654-6598

www.qwikchute.com

Warranty does not apply to conditions resulting from:

1. Damage(s) and/or costs associated with shipping and or/ transportation.
2. Lack of normal maintenance, adjustments, or service required for regular use of the product.
3. Modifications, service/repairs, parts or components not authorized by GTM.

GTM shall not be liable for any special, consequential, direct or indirect damages, and expressly states there are no implied warranties. Some states do not allow limitation of incidental or consequential damages, accordingly the above limitations and exclusions may not apply to you. This warranty provides you with specific legal rights which may vary from state to state.

IT IS THE OWNERS RESPONSIBILITY TO PROPERLY COMPLETE AND MAIL THE WARRANTY REGISTRATION CARD.

PROOF OF PURCHASE AND REGISTRATION WILL BE REQUIRED IN ORDER TO OBTAIN WARRANTY SERVICE.

WARRANTY REGISTRATION CARD

Name of Purchaser: _____

Street Address / P.O. Box: _____

City: _____ State: _____ Zip Code: _____

Model Number: _____ PURCHASE DATE: _____|_____|_____

Dealer Name: _____

Street Address: _____

City: _____ State: _____ Zip Code: _____

Customer Received: Operators Manual () Safety Instructions () Demonstration ()

Customers Signature

Date