

NQD-JD72 KIT CONTENTS. INSPECTED BY:_____

BASE PLATE- **(NQD-071)** STANDARD

DOOR BAR- **(NQD-080)** STANDARD

HANDLE PIVOT- **(NQD-075)** STANDARD

HANDLE- **(NQD-092)** STANDARD

DOOR- **NQD-JD72**

CENTER DEFLECTOR- **(NQD-100)** STANDARD

END DEFLECTOR- **(NQD-121-1)** FULL

BRACKETS- (1) **(JD-06)** MOUNTING ANGLE BRACKET

BAFFLE/SUBPLATE-**(JD-19)** PLASTIC TRIANGLE BAFFLE

HARDWARE KIT- **JD** CONTENTS:

- (1)** 1/4-20 X 1 GR 8 HEX HEAD BOLT
- (2)** 1/4 SAE WASHER
- (1)** 1/4-20 NYLOC NUT
- (1)** 5/16-18 X 1-1/4 GR 5 HEX HEAD BOLT
- (4)** 5/16 SAE **or** 1/4 USS WASHER
- (2)** 5/16-18 NYLOC NUT
- (1)** 5/16-18 X 1 HEX HEAD BOLT
- (1)** JD-07 (Angle Clip Bracket)
- (4)** 1/4-20 X 7/8 SOCKET HEAD BOLT
- (4)** 1/4-20 GR 8 NUTS
- (1)** NQD-097-SPRING
- (1)** SPRING PULLER

COMPLETE THE BAFFLE (JD-19) INSTALL PRIOR TO MOUNTING THE QWIKCHUTE




BEFORE THE BAFFLE IS ADDED TO THE DECK:

ATTACH PROVIDED PLASTIC BAFFLE TO THE MOWER DECK WITH (2) 1/4-20 X 1" FLAT HEAD BOLTS, WASHER, AND LOCKING NUTS. USE THE EXISTING HOLES IN THE MOWER DECK TO INSTALL THE BAFFLE. TIGHTEN HARDWARE FULLY.

AFTER THE BAFFLE IS ADDED TO THE DECK:



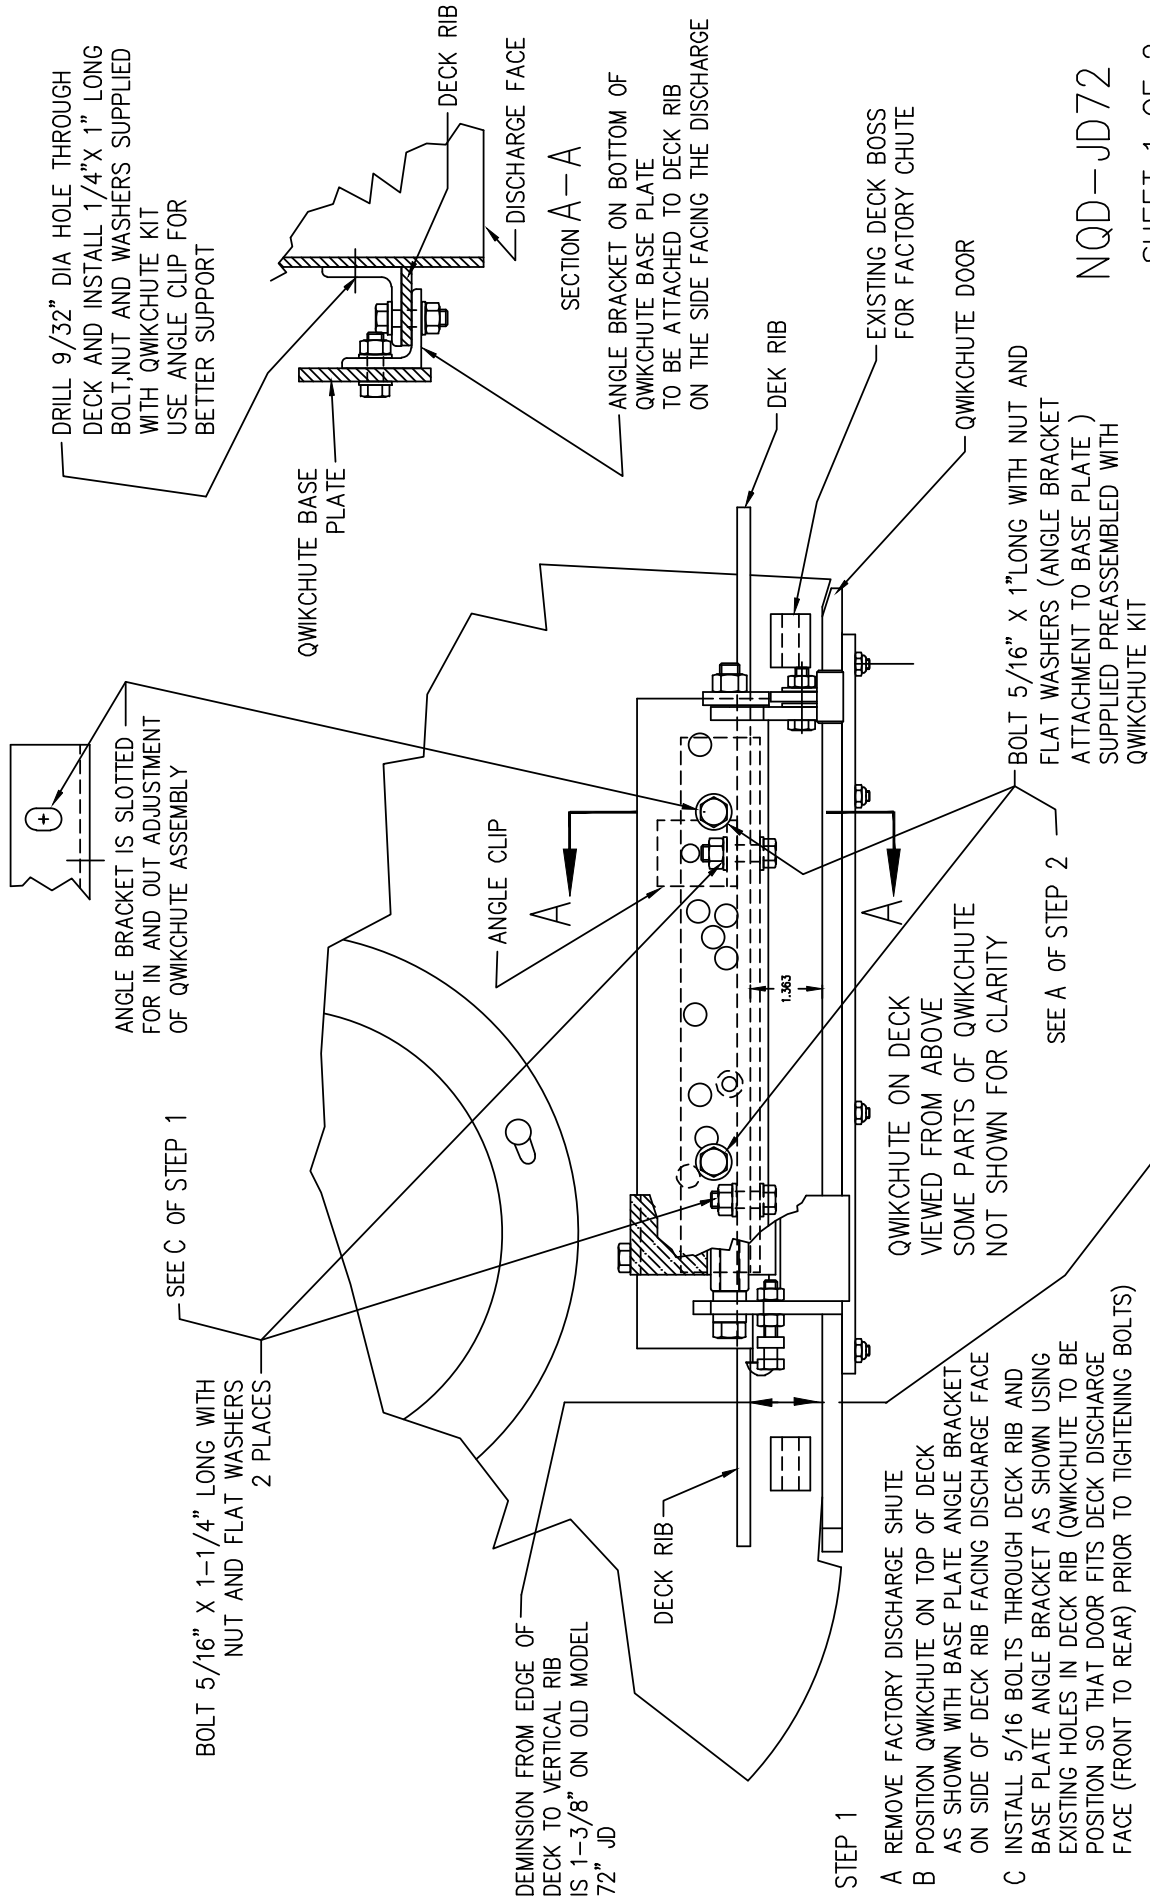

NQD-JD72

SHEET 1 OF 2

REV. 4-2015

QWIKCHUTE INSTALLATION NQD-JD72
FOR OLDER MODEL 72" DECK RIB LOCATION IS DIFFERENT
THAN NEW MODEL. USE THIS ASSEMBLY DRAWING ON OLD MODEL
JOHN DEERE 72" - 7 IRON II


FILE: NQDJOHNDEERE

NQD-JD72

SHEET 2 OF 2



REV. 4- 2015

FILE: NQDJOHNDEERE

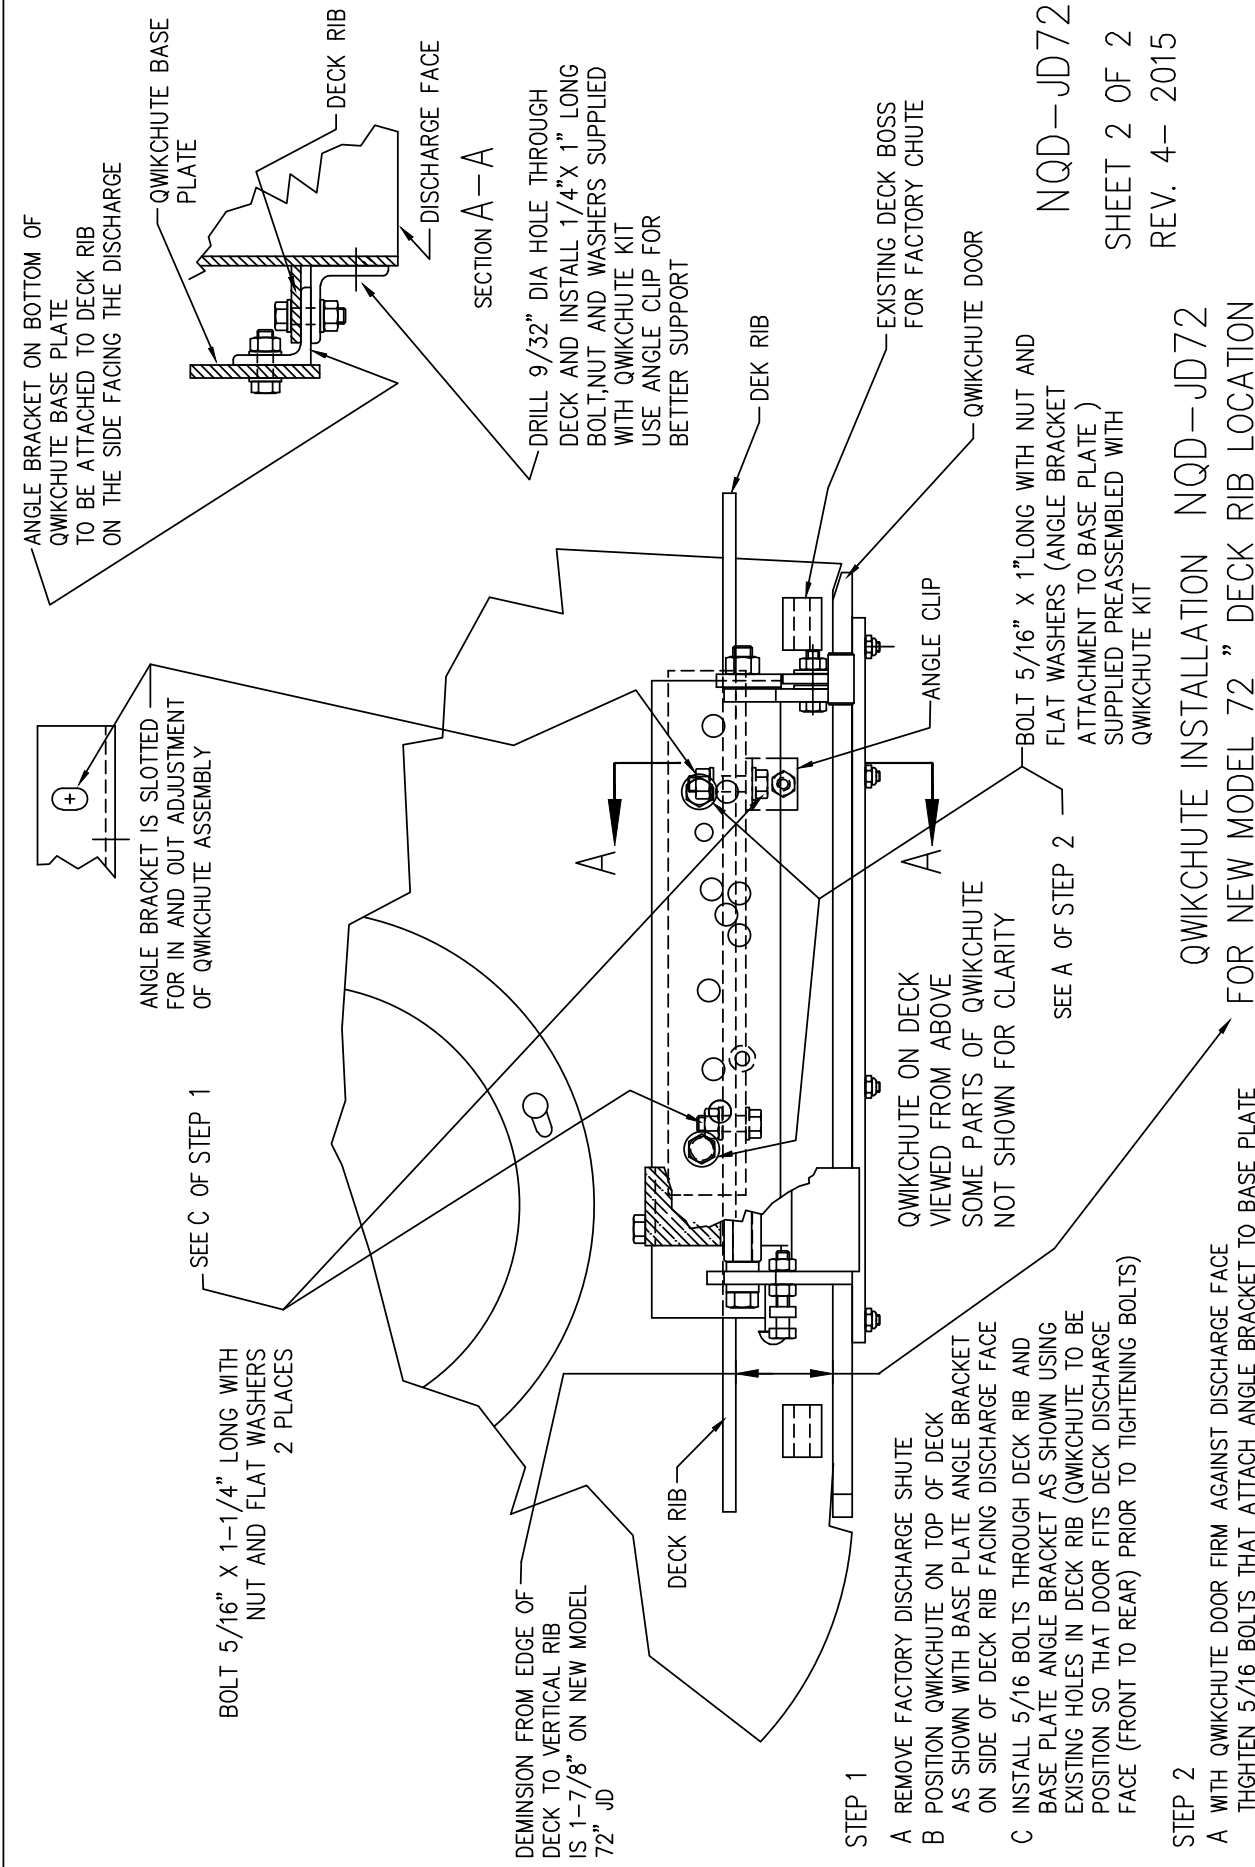

SPRING INSTALLATION QWIKCHUTE NQD MODEL

STEP 2 LOOP FINGERS OVER SCREWDRIVER
BLADE AND LIFT SPRING ON TO SPRING BOLT
CAUTION --DO NOT OVER STRECH SPRING
DISCARD WIRE LOOP AFTER SPRING IS CONNECTED

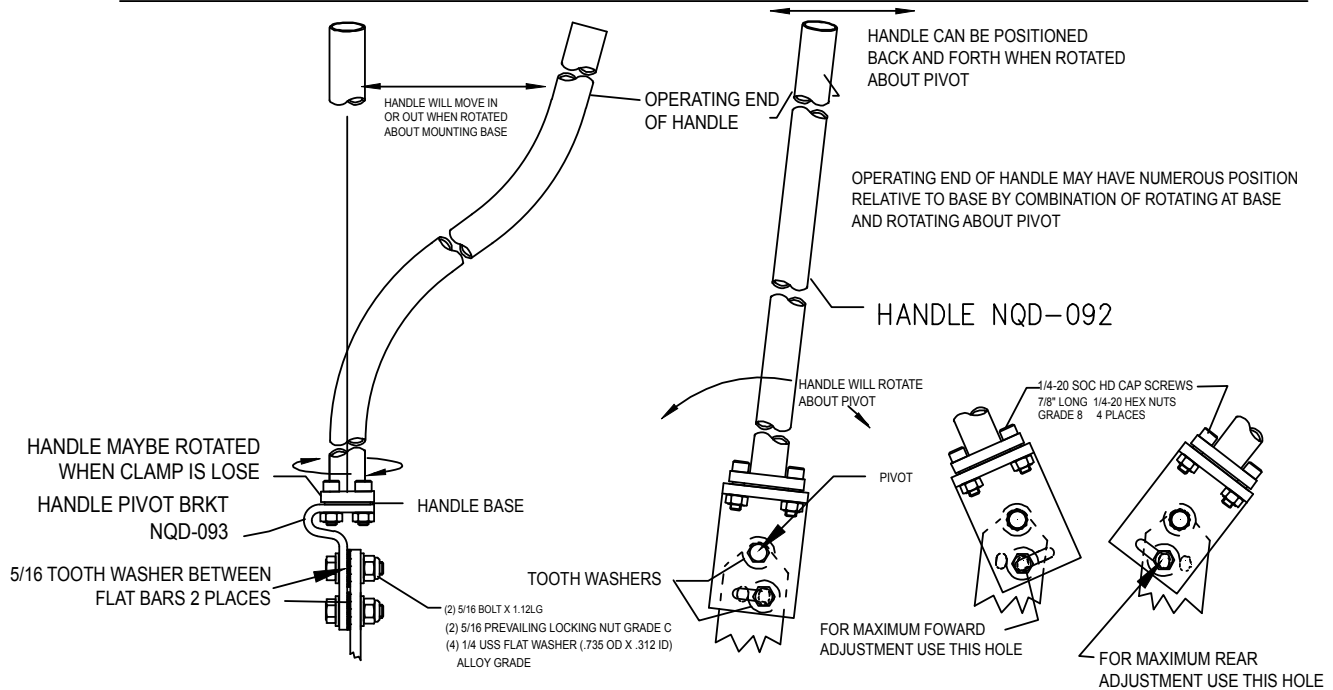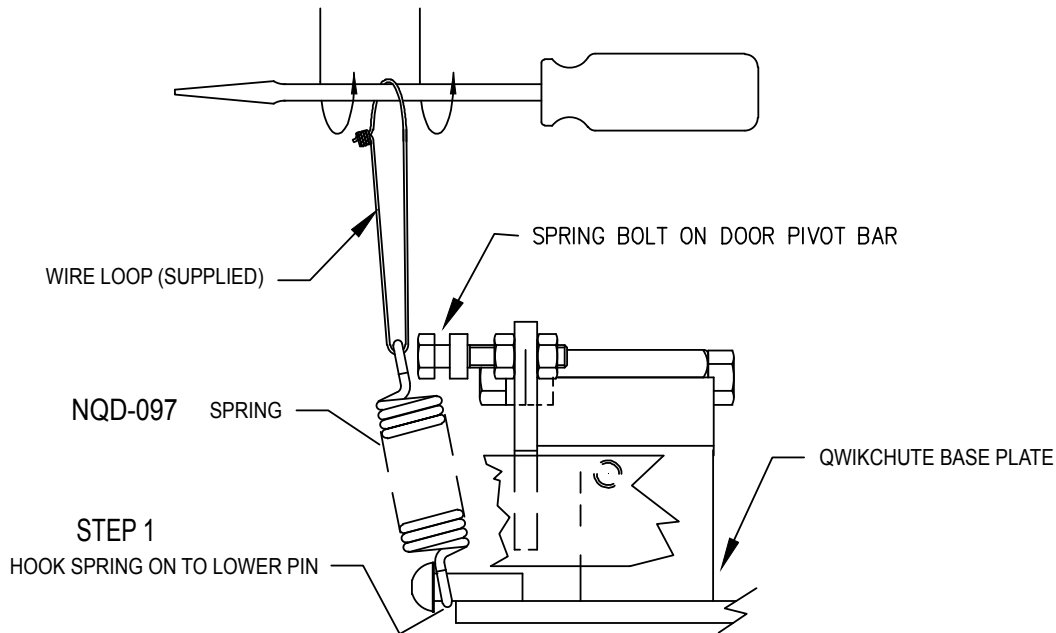

HANDLE INSTALLATION AND ADJUSTMENT

QWIKCHUTE OPERATING PRECEDURE

OPEN FULLY- move handle away from operator quickly.

CLOSE FULLY- move handle toward operator quickly.

PARTIALLY OPEN- from close position move handle away from operator until stay bar swings into position and release handle. To close from partially open position, quickly open and then close.

(some models do not have partial open feature.)

OIL ALL BEARING POINTS WEEKLY OR AS NEEDED.

WARRANTY

GTM Manufacturing, Inc. products are warranted to the original purchaser to be free from defects in materials and workmanship for a period of 90 days from the date of purchase.

Any part(s) of GTM products found to be defective within the warranty period shall, at GTM's option, be repaired or replaced without charge.

Warranty consideration is obtained by returning any GTM product/part believed to be defective to GTM Manufacturing, Inc. within the applicable warranty period. **Please call for authorization.**

GTM Manufacturing, Inc.

14350 EASTSIDE ST

GROVELAND, FL. 34736

(407) 654-6598

www.qwikchute.com

Warranty does not apply to conditions resulting from:

1. Damage(s) and/or costs associated with shipping and or/ transportation.
2. Lack of normal maintenance, adjustments, or service required for regular use of the product.
3. Modifications, service/repairs, parts or components not authorized by GTM.

GTM shall not be liable for any special, consequential, direct or indirect damages, and expressly states there are no implied warranties. Some states do not allow limitation of incidental or consequential damages, accordingly the above limitations and exclusions may not apply to you. This warranty provides you with specific legal rights which may vary from state to state.

IT IS THE OWNERS RESPONSIBILITY TO PROPERLY COMPLETE AND MAIL THE WARRANTY REGISTRATION CARD.

PROOF OF PURCHASE AND REGISTRATION WILL BE REQUIRED IN ORDER TO OBTAIN WARRANTY SERVICE.

WARRANTY REGISTRATION CARD

Name of Purchaser: _____

Street Address / P.O. Box: _____

City: _____ State: _____ Zip Code: _____

Model Number: _____ PURCHASE DATE: _____|_____|_____

Dealer Name: _____

Street Address: _____

City: _____ State: _____ Zip Code: _____

Customer Received: Operators Manual () Safety Instructions () Demonstration ()

Customers Signature

Date