

NQD-JDQTR36. KIT CONTENTS. INSPECTED BY: _____

BASE PLATE- **(MINI-04)** STANDARD MINI WITH FLIPPER STAY BAR

DOOR BAR- STANDARD MINI **(MINI-05)**

HANDLE PIVOT- STANDARD MINI (WITH **JD-03** HANDLE PIVOT EXTENSION AND 093 HANDLE)/ PIVOT BRACKET INSTALLED

HANDLE- STANDARD **(NQD-092)**

DOOR- **NQD-JDQTR36**

BRACKETS- (2) 1 ¼" TALL EXMARK U-BRACKETS **(UB-06)**

FLIPPER - YES


HARDWARE KIT- **A KIT**

- (4)** 1/4-20 X 7/8 SOCKET HEAD BOLT
- (4)** 1/4-20 GR 8 NUTS
- (2)** 5/16-18 X 1 GR 5 HEX HEAD BOLT
- (4)** 5/16 SAE **or** 1/4 USS WASHER
- (2)** 5/16-18 NYLOC NUT
- (1)** NQD-097-SPRING
- (1)** SPRING PULLER





On the 810eE with plastic belt cover if you want to have the pulley cover remain you will need to trim it along the white line as shown above to provide clearance for the Qwikchute.

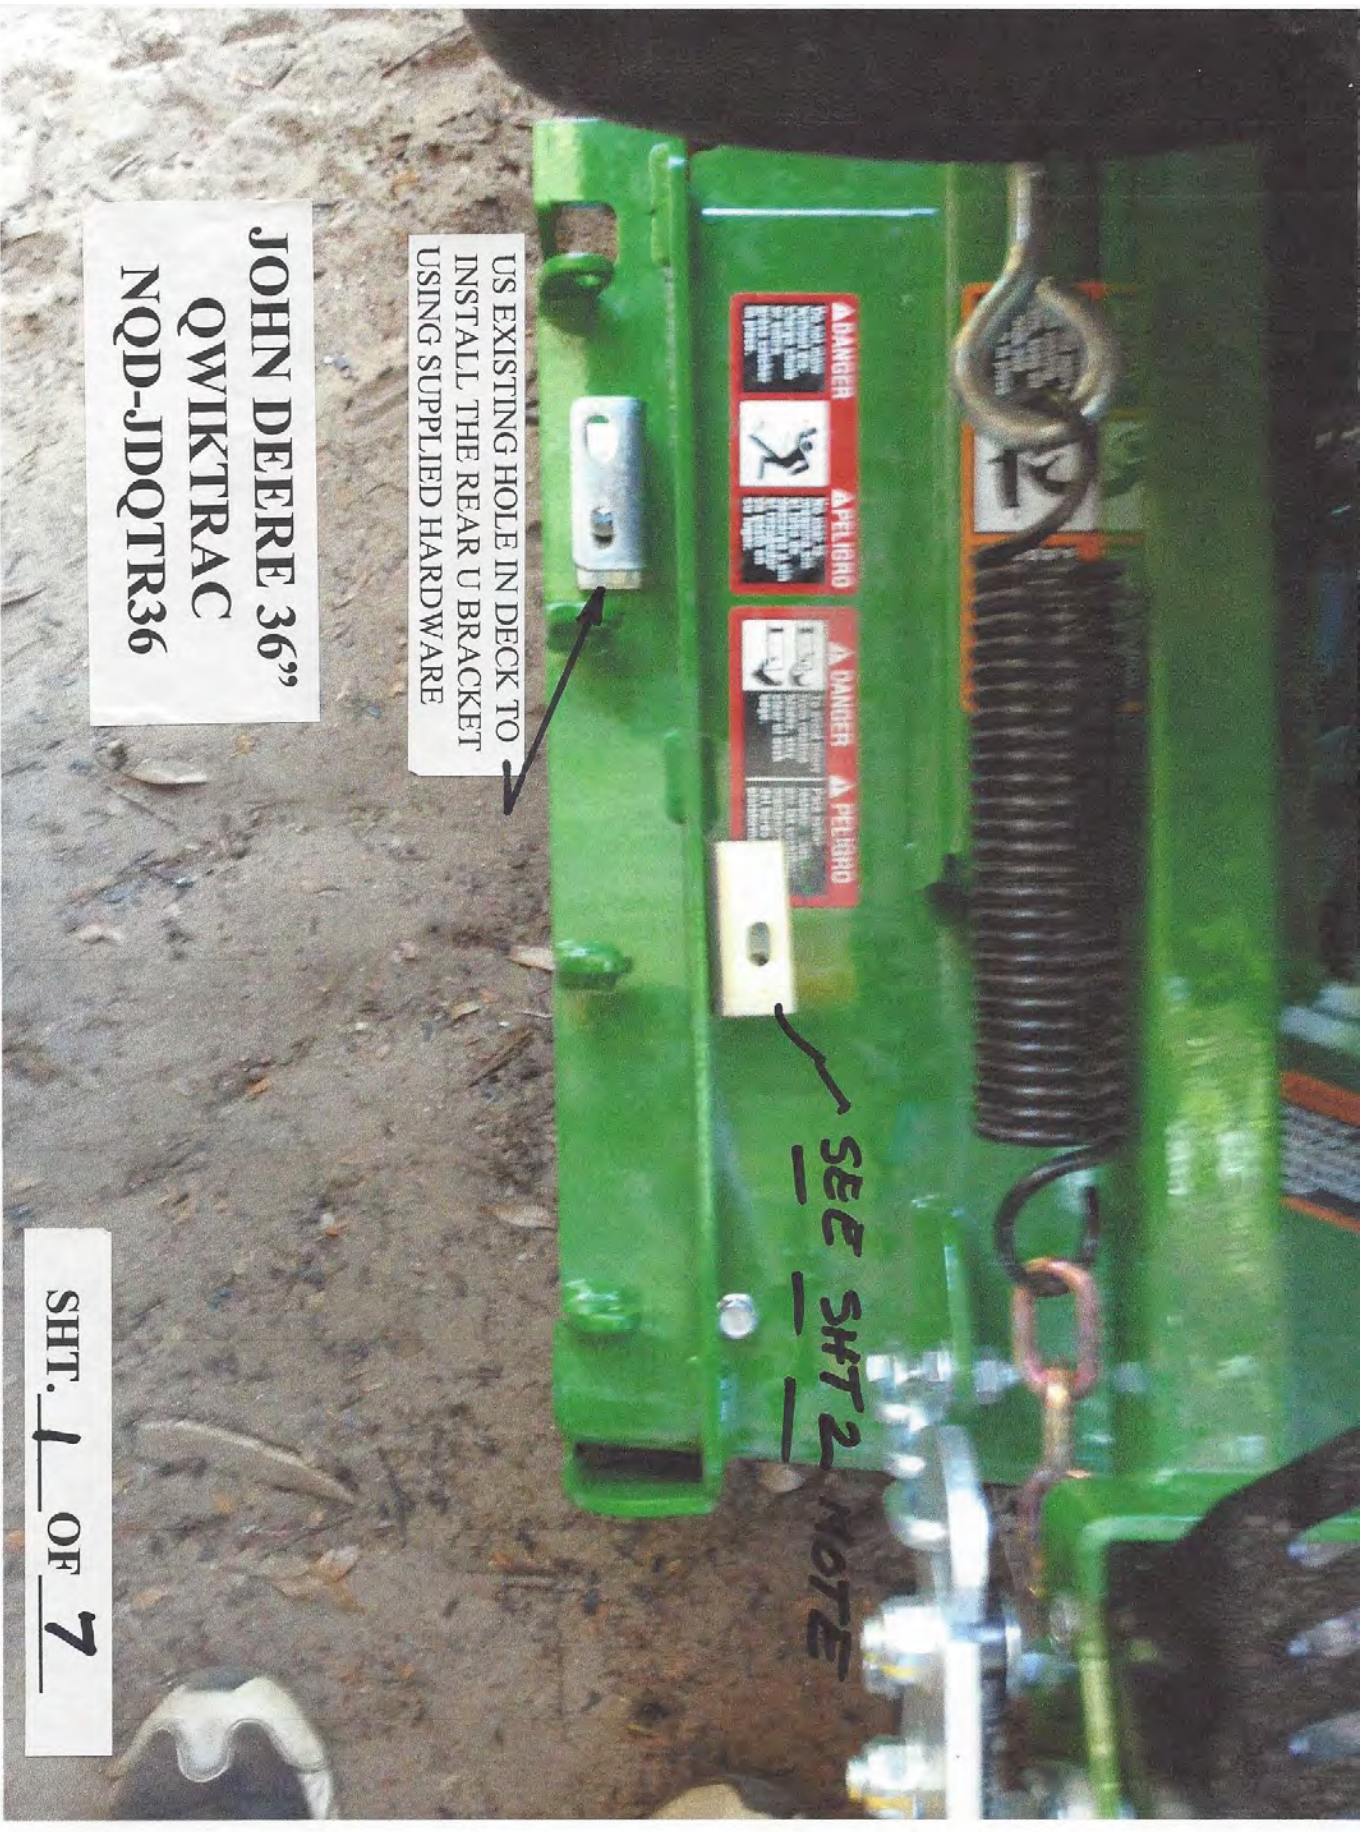

US EXISTING HOLE IN DECK TO
INSTALL THE REAR U BRACKET
USING SUPPLIED HARDWARE

JOHN DEERE 36"
QWIKTRAC
NQD-JDQTR36

✓ SEE SHT 2 NOTE




**JOHN DEERE 36"
QWIKTRAC
NQD-JDQTR36**

WITH QWIKCHUTE POSITION AS
SHOWN MARK DECK USING SLOT
IN FRONT U MOUNTING BRACKET
AND DRILL 5/16" DIA HOLE THRU
DECK AND INSTALL USING SUPPLIED
HARDWARE. WITH QWIKCHUTE
DOOR TIGHT TO DECK



**JOHN DEERE 36"
QWIKTRAC
NQD-JDQTR36**

SEE HANDLE ADJUSTMENT SHEET
FOR POSITIONING HANDLE TO
DESIRED POSITION

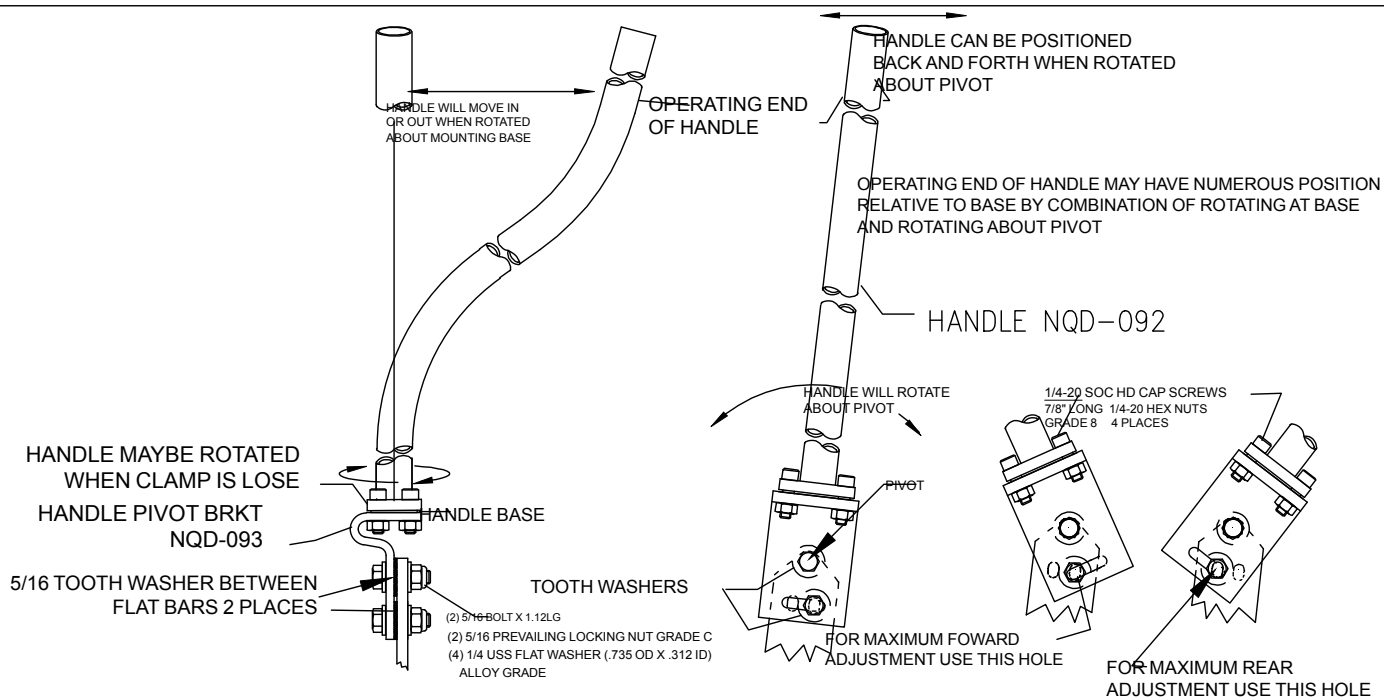

HANDLE INSTALLATION AND ADJUSTMENT

QWIKCHUTE OPERATING PRECEDURE

OPEN FULLY- move handle away from operator quickly.


CLOSE FULLY- move handle toward operator quickly.

PARTIALLY OPEN- from close position move handle away from operator until stay bar swings into position and release handle. To close from partially open position, quickly open and then close.

(some models do not have partial open feature.)

OIL ALL BEARING POINTS WEEKLY OR AS NEEDED.


NQD MINI SERIES SPRING INSTALLATION

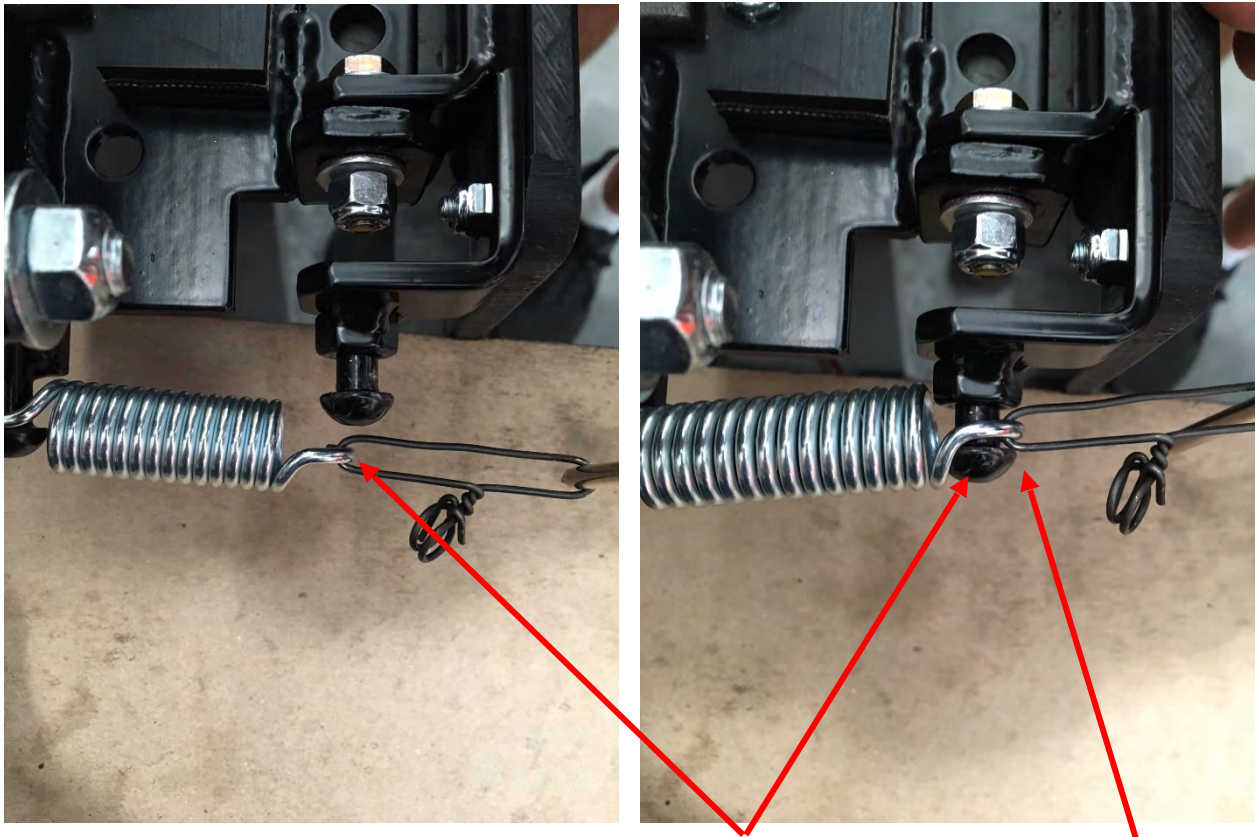

INSTALL SPRING WITH BEND IN HOOK AS SHOWN

SOME UNITS WILL HAVE A THREADED STUD HERE

IF SO, INSTALL RETAINING LOCK NUT AFTER SPRING IS INSTALLED

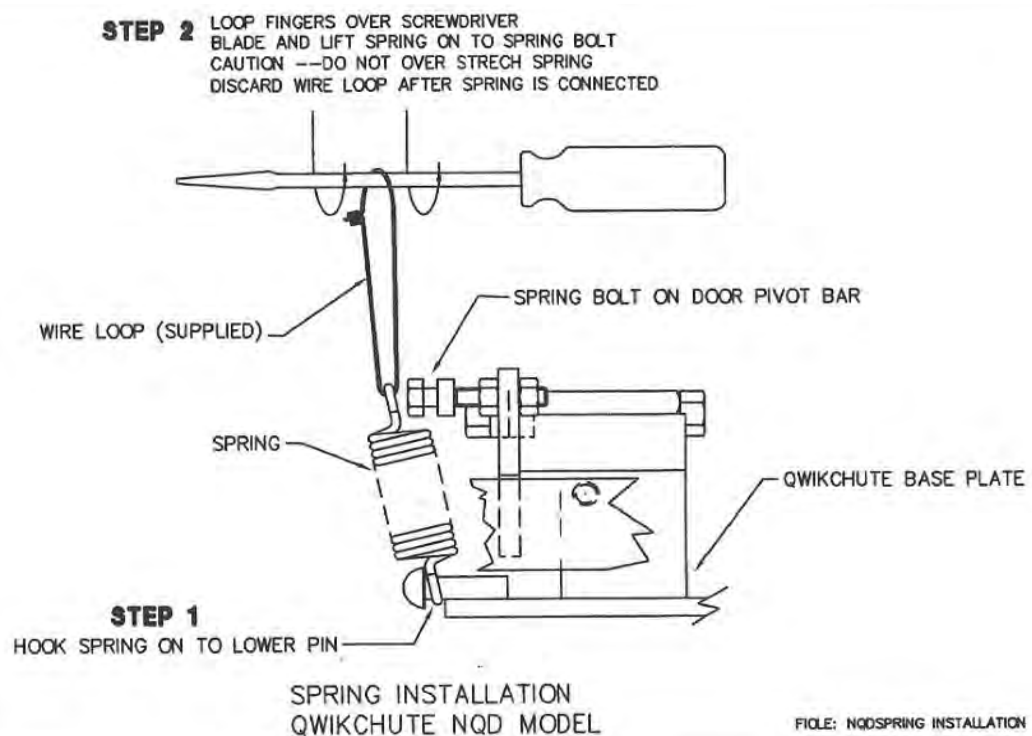

WARRANTY

GTM Manufacturing, Inc. products are warranted to the original purchaser to be free from defects in materials and workmanship for a period of 90 days from the date of purchase.

Any part(s) of GTM products found to be defective within the warranty period shall, at GTM's option, be repaired or replaced without charge.

Warranty consideration is obtained by returning any GTM product/part believed to be defective to GTM Manufacturing, Inc. within the applicable warranty period. **Please call for authorization.**

GTM Manufacturing, Inc.

14350 EASTSIDE ST

GROVELAND, FL. 34736

(407) 654-6598

www.qwikchute.com

Warranty does not apply to conditions resulting from:

1. Damage(s) and/or costs associated with shipping and or/ transportation.
2. Lack of normal maintenance, adjustments, or service required for regular use of the product.
3. Modifications, service/repairs, parts or components not authorized by GTM.

GTM shall not be liable for any special, consequential, direct or indirect damages, and expressly states there are no implied warranties. Some states do not allow limitation of incidental or consequential damages, accordingly the above limitations and exclusions may not apply to you. This warranty provides you with specific legal rights which may vary from state to state.

IT IS THE OWNERS RESPONSIBILITY TO PROPERLY COMPLETE AND MAIL THE WARRANTY REGISTRATION CARD.

PROOF OF PURCHASE AND REGISTRATION WILL BE REQUIRED IN ORDER TO OBTAIN WARRANTY SERVICE.

WARRANTY REGISTRATION CARD

Name of Purchaser: _____

Street Address / P.O. Box: _____

City: _____ State: _____ Zip Code: _____

Model Number: _____ PURCHASE DATE: _____|_____|_____

Dealer Name: _____

Street Address: _____

City: _____ State: _____ Zip Code: _____

Customer Received: Operators Manual () Safety Instructions () Demonstration ()

Customers Signature

Date