

BASE PLATE- STANDARD OR JD (**NQD-071 or NQD-104**)

DOOR BAR- STANDARD (**NQD-080**)

HANDLE PIVOT- OUT THE REAR/**NQD-117** (WITH **GR-19** BRACKET AND **JD-03** HANDLE EXTENSION

HANDLE- LONG (**NQD-092LH**)

DOOR- NQD-SFC-30 W/ **SC-09** PLASTIC SUB-PLATE/BAFFLE

CENTER DEFLECTOR- STANDARD (**NQD-100**)

HARDWARE KIT- **B** CONTENTS:

- (4) 1/4-20 X 7/8 SOCKET HEAD BOLT
- (4) 1/4-20 GR 8 NUTS
- (2) 5/16-18 X 1-1/4 GR 5 HEX BOLT
- (4) 5/16 SAE **or** 1/4 USS WASHER
- (2) 5/16-18 NYLOC NUT
- (1) NQD-097-SPRING
- (1) SPRING PULLER

NOD-SFC30

30" DECK

STEP 1 (PHOTOS SHOWN ON THE NEXT 2 PAGES)

REMOVE FACTORY CHUTE AND PLACE QWIKCHUTE ON DECK WITHOUT PLASTIC BAFFLE UNDER AS SHOWN IN PHOTO. CLOSE THE DOOR ON THE QWIKCHUTE. ALIGN DECK OPENING WITH FRONT OF DOOR AS SHOWN IN PICTURE 1, WHILE HOLDING DOOR AGAINST THE FACE OF THE OPENING, USING THE HOLES SHOWN IN PICTURE 2 OF THE BASEPLATE AS A TEMPLATE, MARK THROUGH THE HOLES WITH A MARKER. REMOVE UNIT, CENTER PUNCH AND DRILL TWO 3/8" HOLES. MOUNT QWIKCHUTE TO THE DECK WITH PLASTIC BAFFLE BETWEEN QWIKCHUTE AND THE DECK. MAKE SURE THE PLASTIC BAFFLE IS FLUSH TO EDGE OF DECK WHILE COVERING THE 2 HOLES IN THE DECK. USE (2) 5/16 X 1-1/4 BOLTS WITH WASHERS AND NUTS AS SUPPLIED. HOLD DOOR AGAINST FACE WHEN TIGHTENING HARDWARE.

STEP 2 INSTALL SPRING (SEE INSTALLATION SHEET)


STEP 3 INSTALL HANDLE (SEE INSTALLATION SHEET)



PICTURE 1


LINE UP THE FRONT OF THE DOOR AS SHOWN ABOVE, AND THEN MARK AND DRILL YOUR HOLES AS SHOWN ON THE NEXT PAGE

PICTURE 2

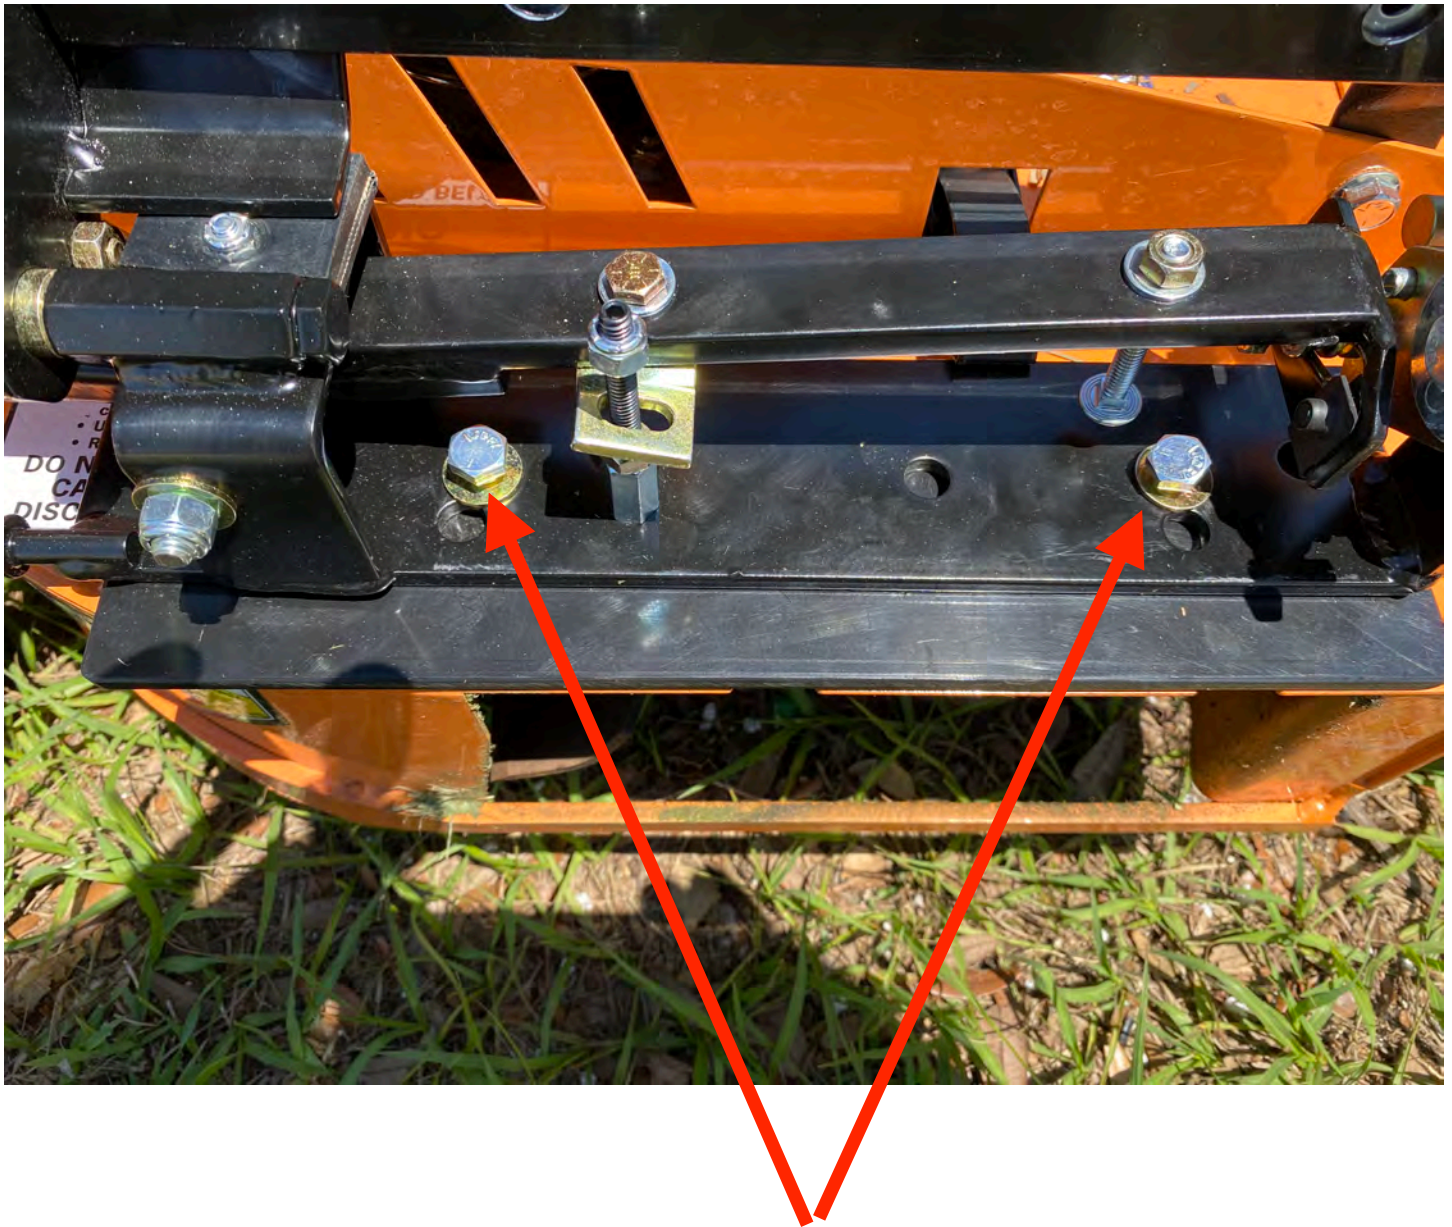

DRILL/MOUNT HERE

STEP 2 LOOP FINGERS OVER SCREWDRIVER
BLADE AND LIFT SPRING ON TO SPRING BOLT
CAUTION --DO NOT OVER STRECH SPRING
DISCARD WIRE LOOP AFTER SPRING IS CONNECTED

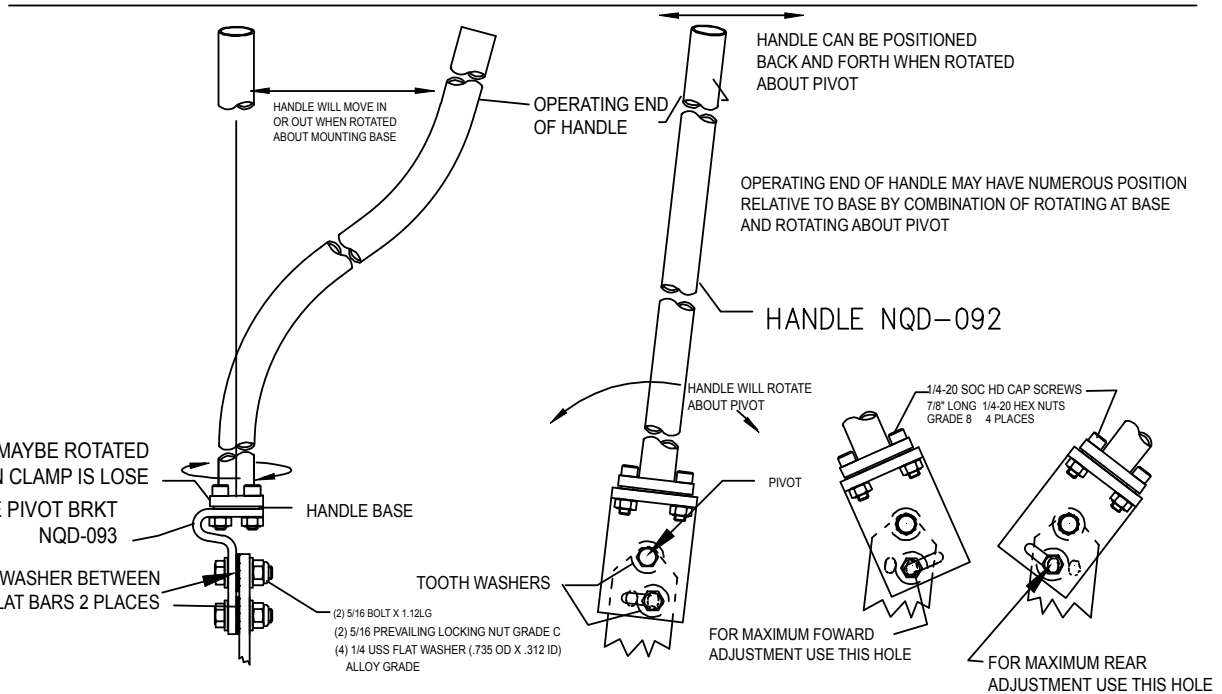

QWIKCHUTE OPERATING PRECEDURE

CLOSE FULLY- move handle toward operator quickly.

(some models do not have partial open feature.)

OIL ALL BEARING POINTS WEEKLY OR AS NEEDED.

WARRANTY

GTM Manufacturing, Inc. products are warranted to the original purchaser to be free from defects in materials and workmanship for a period of 90 days from the date of purchase.

Any part(s) of GTM products found to be defective within the warranty period shall, at GTM's option, be repaired or replaced without charge.

Warranty consideration is obtained by returning any GTM product/part believed to be defective to GTM Manufacturing, Inc. within the applicable warranty period. **Please call for authorization.**

GTM Manufacturing, Inc.

14350 EASTSIDE ST

GROVELAND, FL. 34736

(407) 654-6598

www.qwikchute.com

Warranty does not apply to conditions resulting from:

1. Damage(s) and/or costs associated with shipping and or/ transportation.
2. Lack of normal maintenance, adjustments, or service required for regular use of the product.
3. Modifications, service/repairs, parts or components not authorized by GTM.

GTM shall not be liable for any special, consequential, direct or indirect damages, and expressly states there are no implied warranties. Some states do not allow limitation of incidental or consequential damages, accordingly the above limitations and exclusions may not apply to you. This warranty provides you with specific legal rights which may vary from state to state.

IT IS THE OWNERS RESPONSIBILITY TO PROPERLY COMPLETE AND MAIL THE WARRANTY REGISTRATION CARD.

PROOF OF PURCHASE AND REGISTRATION WILL BE REQUIRED IN ORDER TO OBTAIN WARRANTY SERVICE.

WARRANTY REGISTRATION CARD

Name of Purchaser: _____

Street Address / P.O. Box: _____

City: _____ State: _____ Zip Code: _____

Model Number: _____ PURCHASE DATE: _____|_____|_____

Dealer Name: _____

Street Address: _____

City: _____ State: _____ Zip Code: _____

Customer Received: Operators Manual () Safety Instructions () Demonstration ()

Customers Signature

Date