


NQD-T4000-52 KIT CONTENTS. INSPECTED BY: _____

BASE PLATE- **NQD-071** STANDARD (WITH **NQD-113-1** A 3/16" BUMPER SPACER)

DOOR BAR- STANDARD (**NQD-080**)

HANDLE PIVOT- STANDARD (**NQD-075**) WITH NQD-093 BRACKET SPUN AROUND WITH THE BEND CLOSEST TO THE DOOR.

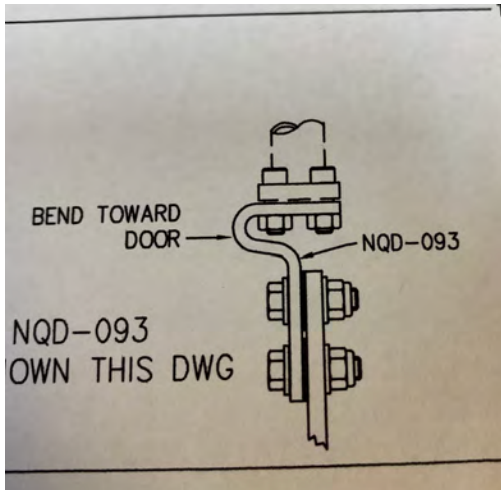


HANDLE- STANDARD (**NQD-092**)

DOOR- **NQD-T4000-52**

CENTER DEFLECTOR- STANDARD (**NQD-100**)

BRACKETS- (UNINSTALLED/IN HARDWARE KIT)

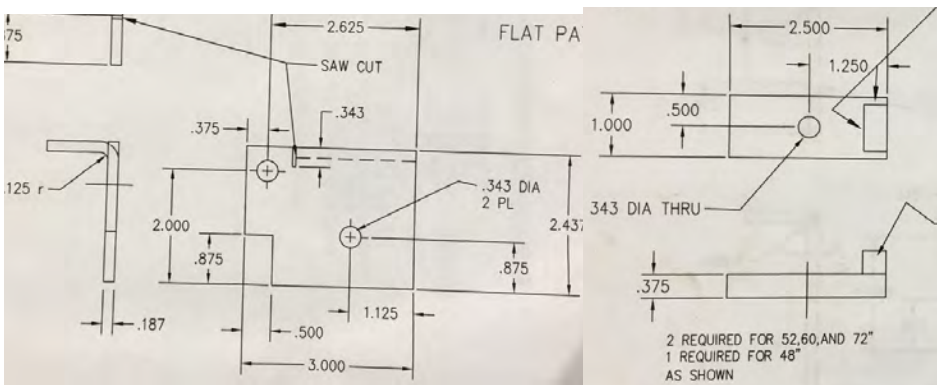

HARDWARE KIT- TG3 CONTENT:

(4) 1/4-20 X 7/8 SOCKET HEAD BOLT

(4) 1/4-20 GR 8 NUT

(4) 5/16-18 X 1 GR5 HEX HEAD BOLT

(8) 5/16 SAE or 1/4 USS WASHER

(4) 5/16-18 NYLOC NUT

(1) NQD-097-SPRING

(1) SPRING PULLER

ASSEM: MT. BRKTS & HEEL CLAMPS


(2) TO-18 W/ (2) TO-13

(2) 5/16-18 X 1-1/2 GR 5HEX HEAD BOLT

(4) 5/16 SAE or 1/4 USS WASHER

(2) 5/16-18 NYLOC NUT

NQD-T4000-52

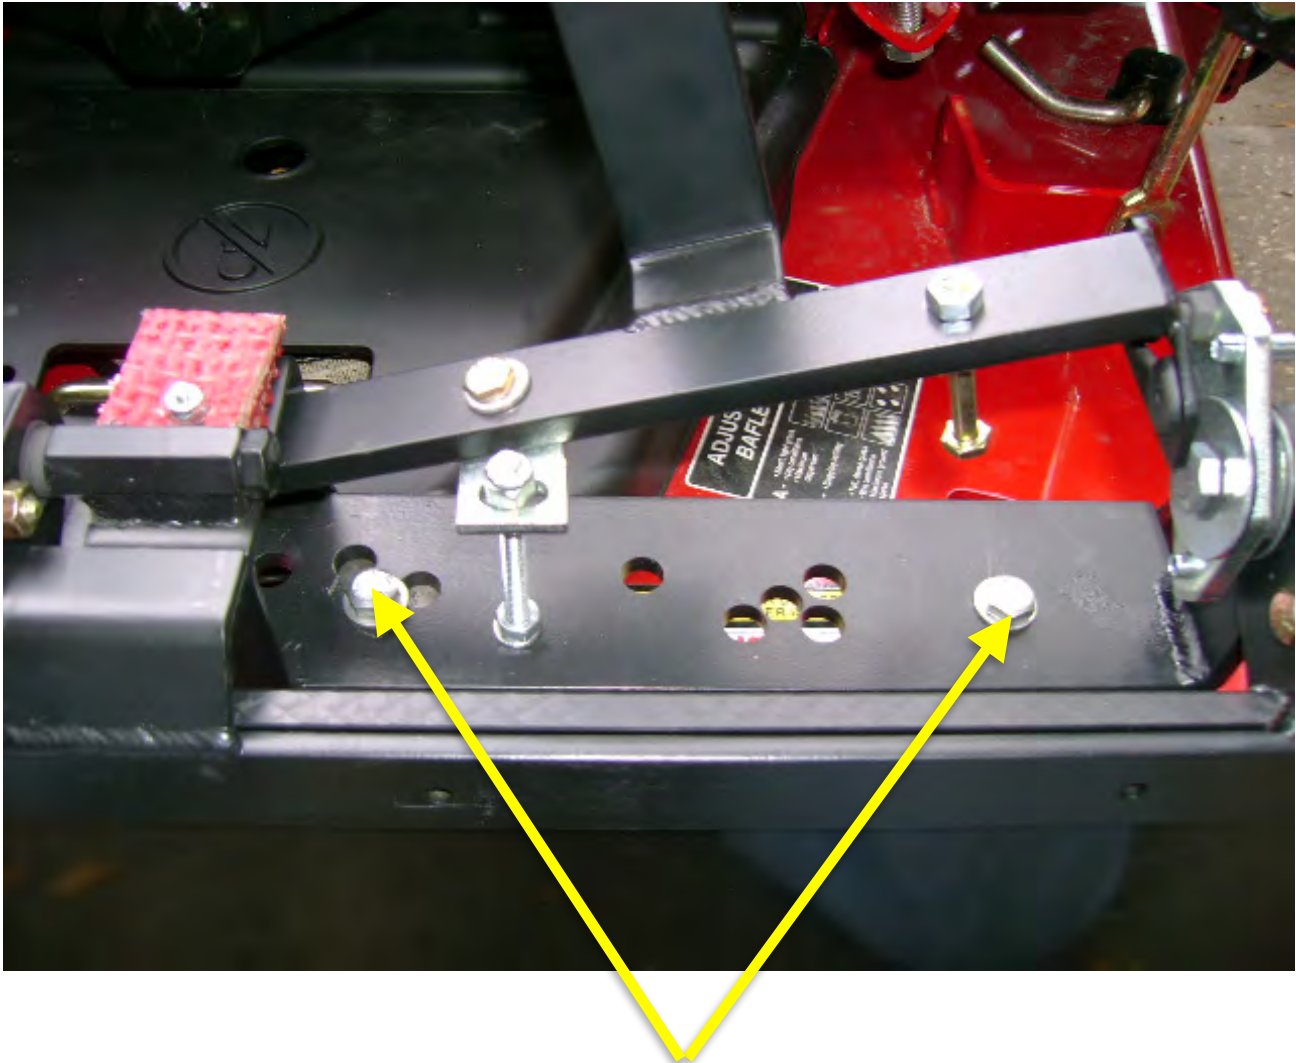

STEP 1: INSTALL QWIKCHUTE MOUNTING BRACKETS ON DECK EARS AS SHOWN ON SHEET 2.

- INSTALL 5/16 X 1" BOLTS THROUGH QWIKCHUTE BASEPLATE AND MOUNTING BRACKETS WITH NUTS AND WASHERS AT LOCATIONS SHOWN.


-WITH DOOR TIGHT AGAINST MOWER DISCHARGE FACE, TIGHTEN ALL MOUNTING HARDWARE.

STEP 2: INSTALL SPRING (SEE SHEET 3)

STEP 3: INSTALL HANDLE (SEE SHEET 4)

INSTALLATION OF QWIKCHUTE ON A TORO G3 STYLE DECK 52",60" AND 72" & 4000 SERIES 52"

NQD-T4000-52

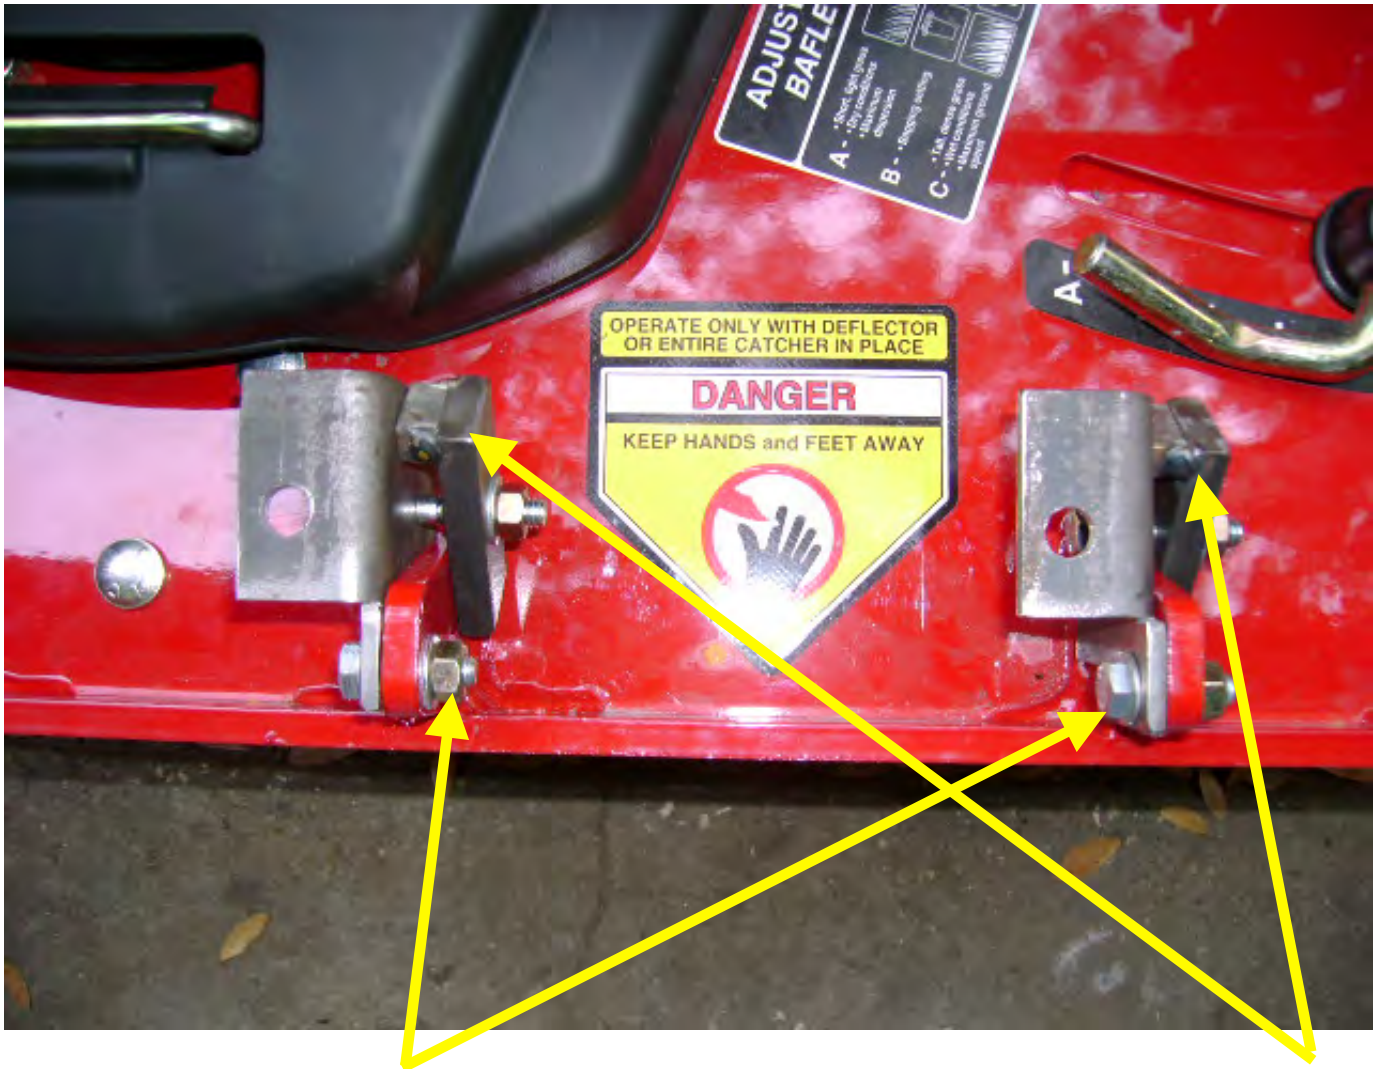



**5/16 X 1" BOLT WITH WASHERS,
AND LOCK NUT, MOUNT USING
EXISTING HOLE IN THE DECK EAR.**

**INSTALL THE HEEL CLAMP SO THAT
THE TOP OF IT IS BELOW THE
MOUNTING SURFACE OF THE
BRACKET.**

NQD-T4000-52

SPRING INSTALLATION QWIKCHUTE NQD MODEL

- STEP 2 LOOP FINGERS OVER SCREWDRIVER
BLADE AND LIFT SPRING ON TO SPRING BOLT
CAUTION --DO NOT OVER STRECH SPRING
DISCARD WIRE LOOP AFTER SPRING IS CONNECTED

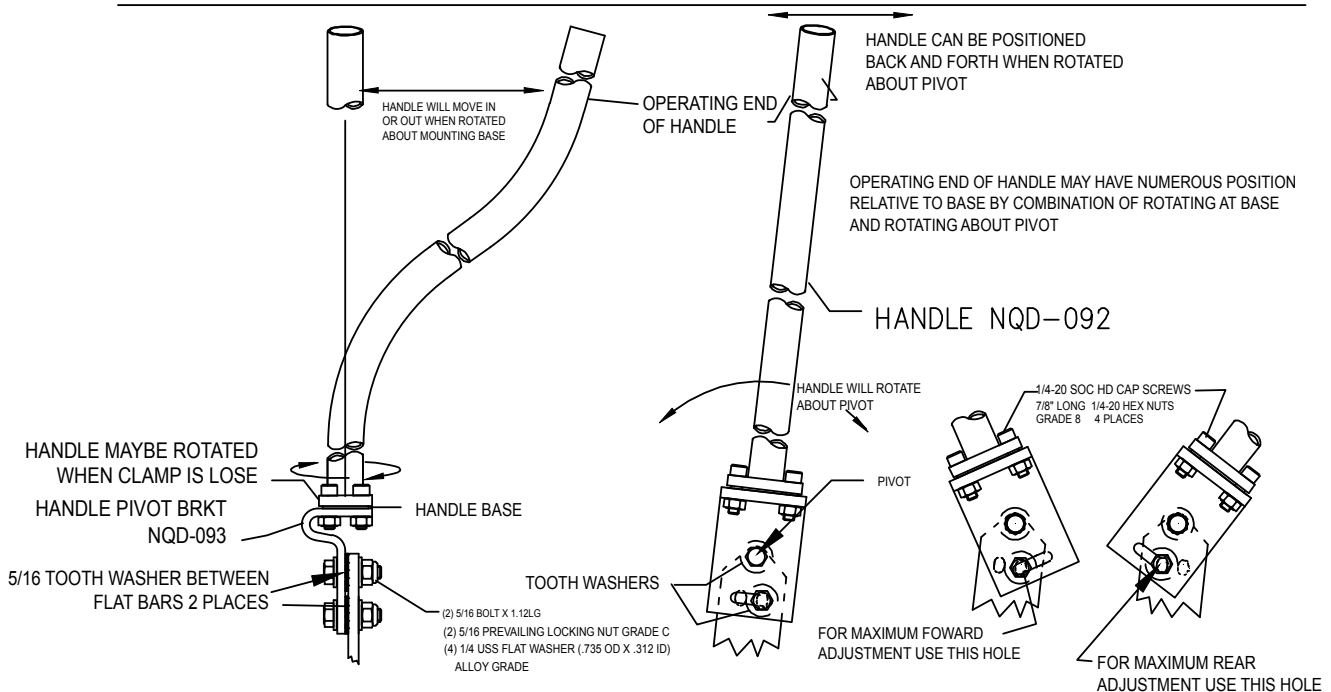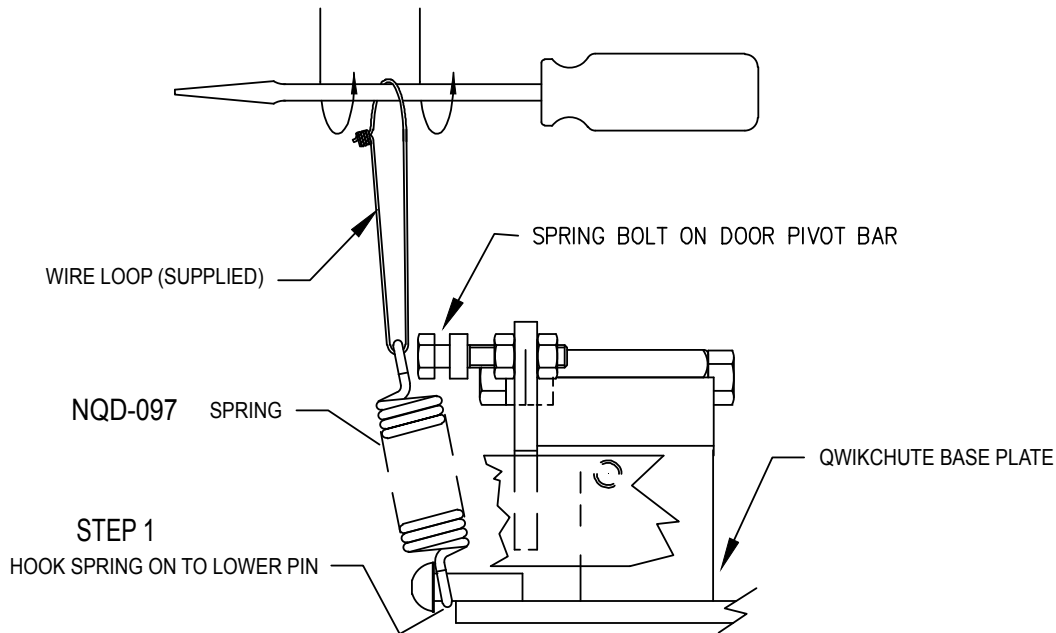

HANDLE INSTALLATION AND ADJUSTMENT

QWIKCHUTE OPERATING PRECEDURE

OPEN FULLY- move handle away from operator quickly.

CLOSE FULLY- move handle toward operator quickly.

PARTIALLY OPEN- from close position move handle away from operator until stay bar swings into position and release handle. To close from partially open position, quickly open and then close.

(some models do not have partial open feature.)

OIL ALL BEARING POINTS WEEKLY OR AS NEEDED.

WARRANTY

GTM Manufacturing, Inc. products are warranted to the original purchaser to be free from defects in materials and workmanship for a period of 90 days from the date of purchase.

Any part(s) of GTM products found to be defective within the warranty period shall, at GTM's option, be repaired or replaced without charge.

Warranty consideration is obtained by returning any GTM product/part believed to be defective to GTM Manufacturing, Inc. within the applicable warranty period. **Please call for authorization.**

GTM Manufacturing, Inc.

14350 EASTSIDE ST

GROVELAND, FL 34736

(407) 654-6598

www.qwikchute.com

Warranty does not apply to conditions resulting from:

1. Damage(s) and/or costs associated with shipping and or/ transportation.
2. Lack of normal maintenance, adjustments, or service required for regular use of the product.
3. Modifications, service/repairs, parts or components not authorized by GTM.

GTM shall not be liable for any special, consequential, direct or indirect damages, and expressly states there are no implied warranties. Some states do not allow limitation of incidental or consequential damages, accordingly the above limitations and exclusions may not apply to you. This warranty provides you with specific legal rights which may vary from state to state.

IT IS THE OWNERS RESPONSIBILITY TO PROPERLY COMPLETE AND MAIL THE WARRANTY REGISTRATION CARD.

PROOF OF PURCHASE AND REGISTRATION WILL BE REQUIRED IN ORDER TO OBTAIN WARRANTY SERVICE.

WARRANTY REGISTRATION CARD

Name of Purchaser: _____

Street Address / P.O. Box: _____

City: _____ State: _____ Zip Code: _____

Model Number: _____ PURCHASE DATE: _____|_____|_____

Dealer Name: _____

Street Address: _____

City: _____ State: _____ Zip Code: _____

Customer Received: Operators Manual () Safety Instructions () Demonstration ()

Customers Signature

Date