

BASE PLATE- **(KU-01)** MODIFIED

DOOR BAR- **(NQD-080)** STANDARD

HANDLE PIVOT- **(NQD-075)** STANDARD

HANDLE- **(NQD-092)** STANDARD

DOOR- **NQD-ZDK60**


CENTER DEFLECTOR- **(NQD-100)** STANDARD

END DEFLECTOR- **(NQD-121-6)**

BRACKETS- (UNINSTALLED/IN HARDWARE KIT)

HARDWARE KIT- **V** CONTENTS:

- (2)** KU-06 (L-Mounting Brkt)
- (4)** 1/4-20 X 7/8 SOCKET HEAD BOLT
- (4)** 1/4-20 GR 8 NUTS
- (4)** 5/16-18 X 1 GR 5 HEX HEAD BOLT
- (8)** 5/16 SAE **or** 1/4 USS WASHER
- (4)** 5/16-18 NYLOC NUT
- (1)** NQD-097-SPRING
- (1)** SPRING PULLER

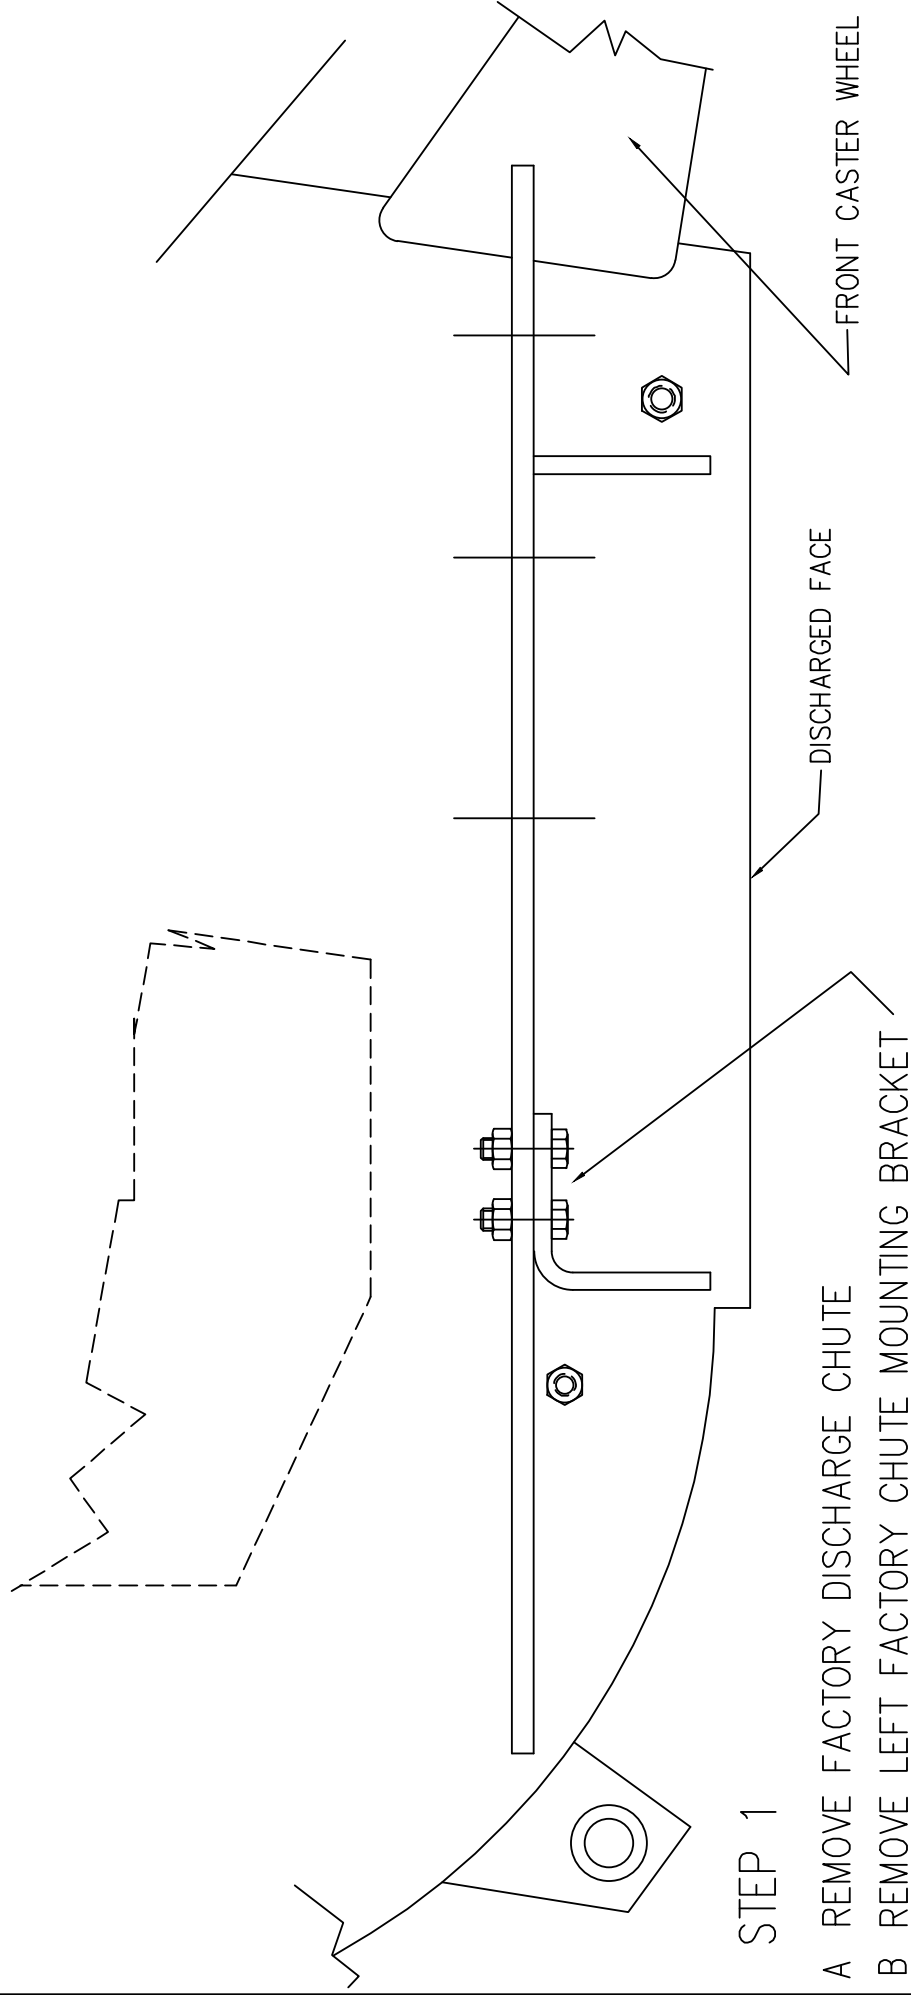


STEP 1

GTM MANUFACTURING
MODEL NQD-ZDK60 QWIKCHUTE INSTALLATION
KUBOTA ZD 331 60"

SHEET 1 OF 3

FILE: KUBOTA-NQD

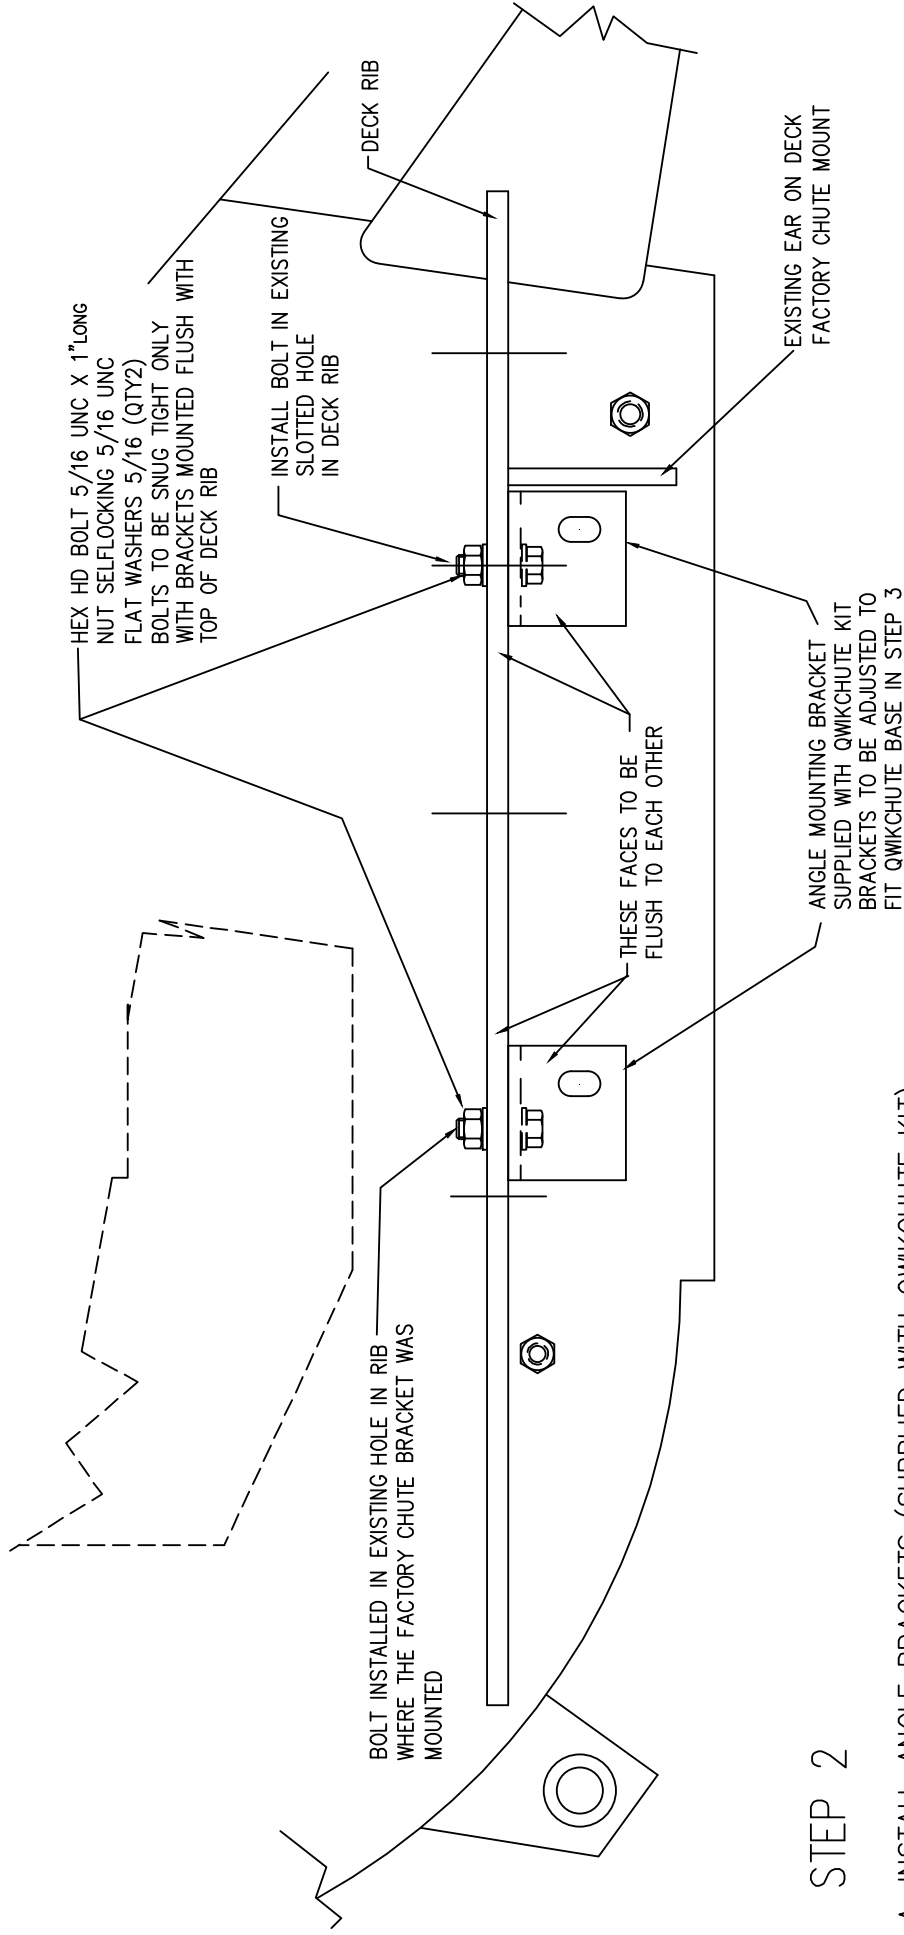

STEP 2


A INSTALL ANGLE BRACKETS (SUPPLIED WITH QWIKCHUTE KIT)
AS SHOWN USING SUPPLIED HARDWARE

STEP 2

GTM MANUFACTURING
MODEL NQD-ZDK60 QWIKCHUTE INSTALLATION
KUBOTA ZD 331 60"

SHEET 2 OF 3

FILE: KUBOTA-NQD

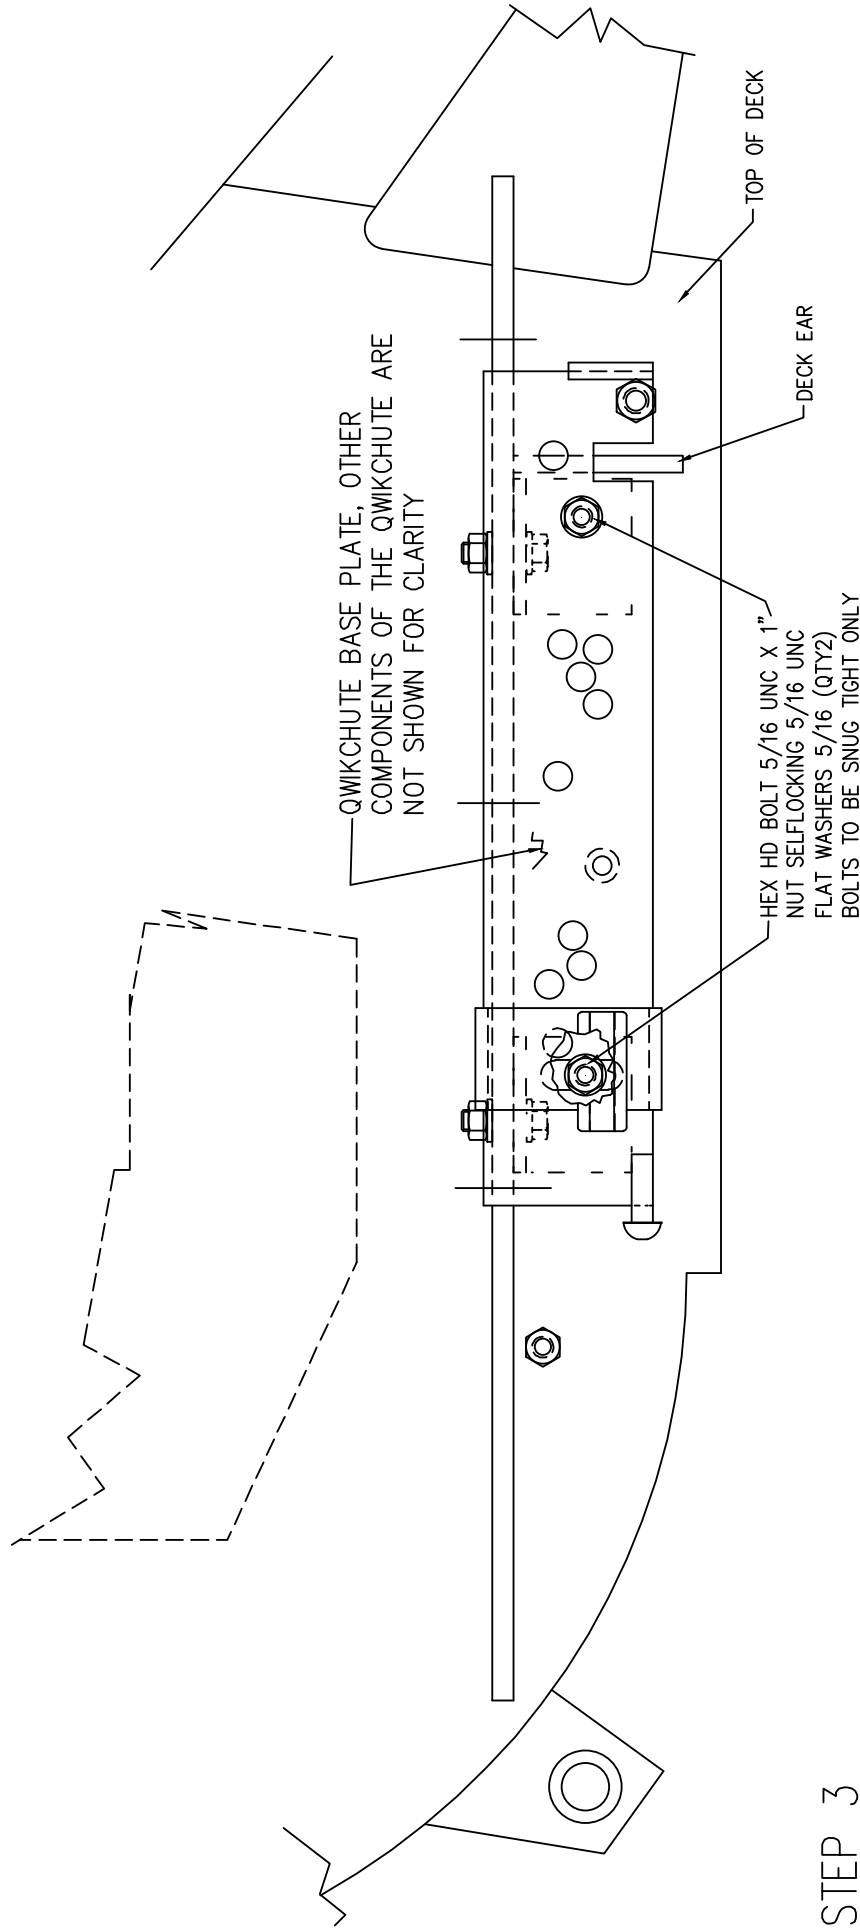

STEP 3

NOTE:

- A QWIKCHUTE TO BE INSTALLED WITHOUT SPRING
- INSTALL MOUNTING HARDWARE THROUGH QWIKCHUTE BASE AND ANGLE MOUNTING BRACKETS (INSTALLED IN STEP 2) AS SHOWN
- MOUNTING HARDWARE TO BE SNUG TIGHT ONLY.
- QWIKCHUTE DOOR TO BE IN CLOSED POSITION
- AND PRESSED FIRM AGAINST MOWER DISCHARGE FACE
- TIGHTEN ALL MOUNTING HARDWARE THAT IS ACCESSIBLE
- OPEN QWIKCHUTE DOOR AND TIGHTEN ALL MOUNTING HARDWARE
- CLOSE DOOR AND CHECK FIT OF DOOR TO DISCHARGE FACE
- ADJUST QWIKCHUTE TO MOUNTING BRACKETS IF REQUIRED

- B INSTALL SPRING (SEE SPRING INSTALLATION SHEET)

- C INSTALL HANDLE (SEE HANDLE INSTALLATION SHEET)

STEP 3



SHEET 3 OF 3

GTM MANUFACTURING
MODEL NQD-ZDK60 QWIKCHUTE INSTALLATION
KUBOTA ZD 331 60"

FILE: KUBOTA-NQD

SPRING INSTALLATION QWIKCHUTE NQD MODEL

STEP 2 LOOP FINGERS OVER SCREWDRIVER
BLADE AND LIFT SPRING ON TO SPRING BOLT
CAUTION --DO NOT OVER STRECH SPRING
DISCARD WIRE LOOP AFTER SPRING IS CONNECTED

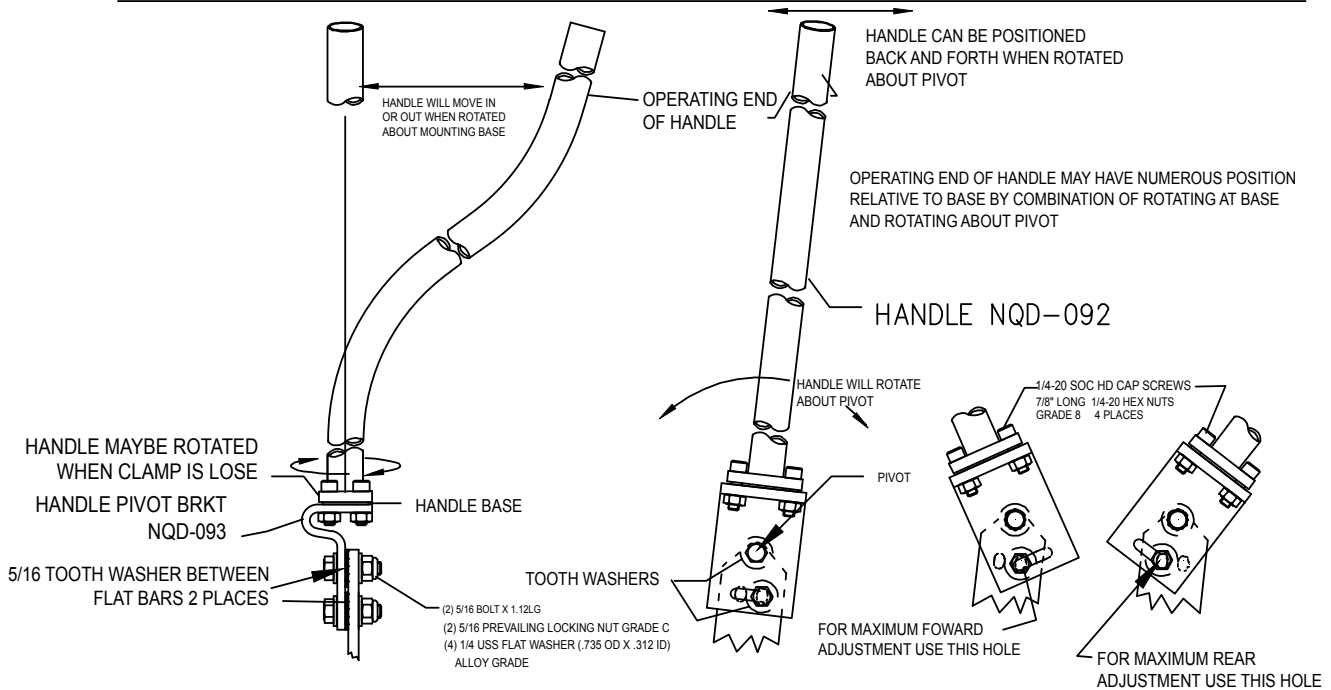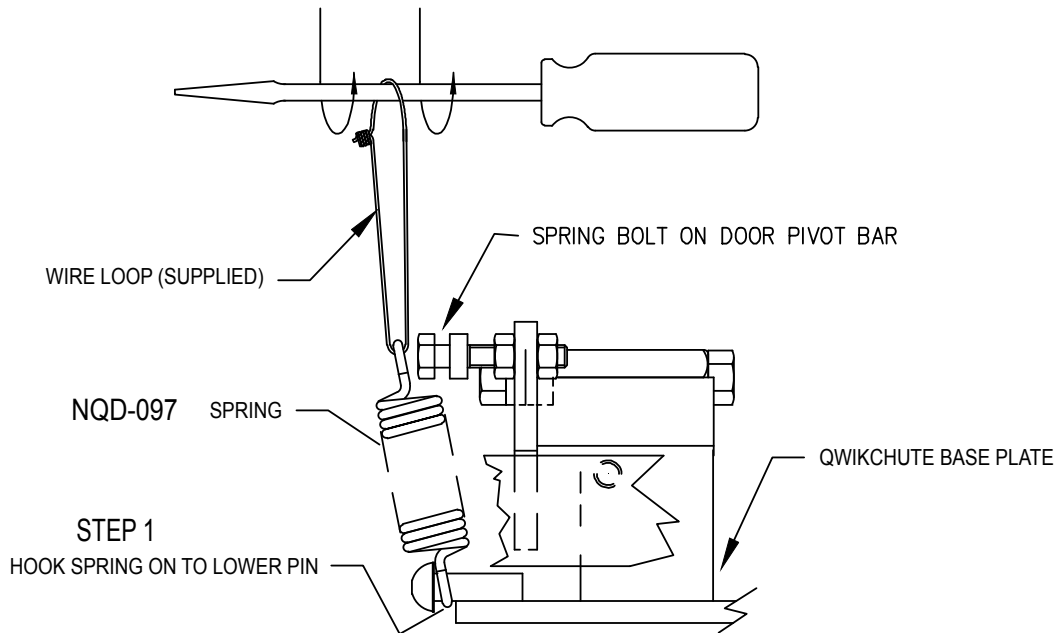

HANDLE INSTALLATION AND ADJUSTMENT

QWIKCHUTE OPERATING PRECEDURE

OPEN FULLY- move handle away from operator quickly.

CLOSE FULLY- move handle toward operator quickly.

PARTIALLY OPEN- from close position move handle away from operator until stay bar swings into position and release handle. To close from partially open position, quickly open and then close.

(some models do not have partial open feature.)

OIL ALL BEARING POINTS WEEKLY OR AS NEEDED.

WARRANTY

GTM Manufacturing, Inc. products are warranted to the original purchaser to be free from defects in materials and workmanship for a period of 90 days from the date of purchase.

Any part(s) of GTM products found to be defective within the warranty period shall, at GTM's option, be repaired or replaced without charge.

Warranty consideration is obtained by returning any GTM product/part believed to be defective to GTM Manufacturing, Inc. within the applicable warranty period. **Please call for authorization.**

GTM Manufacturing, Inc.

14350 EASTSIDE ST

GROVELAND, FL. 34736

(407) 654-6598

www.qwikchute.com

Warranty does not apply to conditions resulting from:

1. Damage(s) and/or costs associated with shipping and or/ transportation.
2. Lack of normal maintenance, adjustments, or service required for regular use of the product.
3. Modifications, service/repairs, parts or components not authorized by GTM.

GTM shall not be liable for any special, consequential, direct or indirect damages, and expressly states there are no implied warranties. Some states do not allow limitation of incidental or consequential damages, accordingly the above limitations and exclusions may not apply to you. This warranty provides you with specific legal rights which may vary from state to state.

IT IS THE OWNERS RESPONSIBILITY TO PROPERLY COMPLETE AND MAIL THE WARRANTY REGISTRATION CARD.

PROOF OF PURCHASE AND REGISTRATION WILL BE REQUIRED IN ORDER TO OBTAIN WARRANTY SERVICE.

WARRANTY REGISTRATION CARD

Name of Purchaser: _____

Street Address / P.O. Box: _____

City: _____ State: _____ Zip Code: _____

Model Number: _____ PURCHASE DATE: _____|_____|_____

Dealer Name: _____

Street Address: _____

City: _____ State: _____ Zip Code: _____

Customer Received: Operators Manual (☐) Safety Instructions (☐) Demonstration (☐)

Customers Signature

Date