

NQDR-WS52 KIT CONTENTS. INSPECTED BY:_____

BASE PLATE- **(NQDR-106)** STANDARD REVERSE

DOOR BAR- **(NQDR-108)** STANDARD REVERSE


HANDLE PIVOT- **(NQDR-110)** STANDARD REVERSE

HANDLE- **(NQD-092)** STANDARD

DOOR- NQDR-WS52

CENTER DEFLECTOR- **(NQDR-103)** STANDARD REVERSE

BRACKETS- (2) **UB-01** (2 3/16" TALL TRIM STAR U-BRACKET)

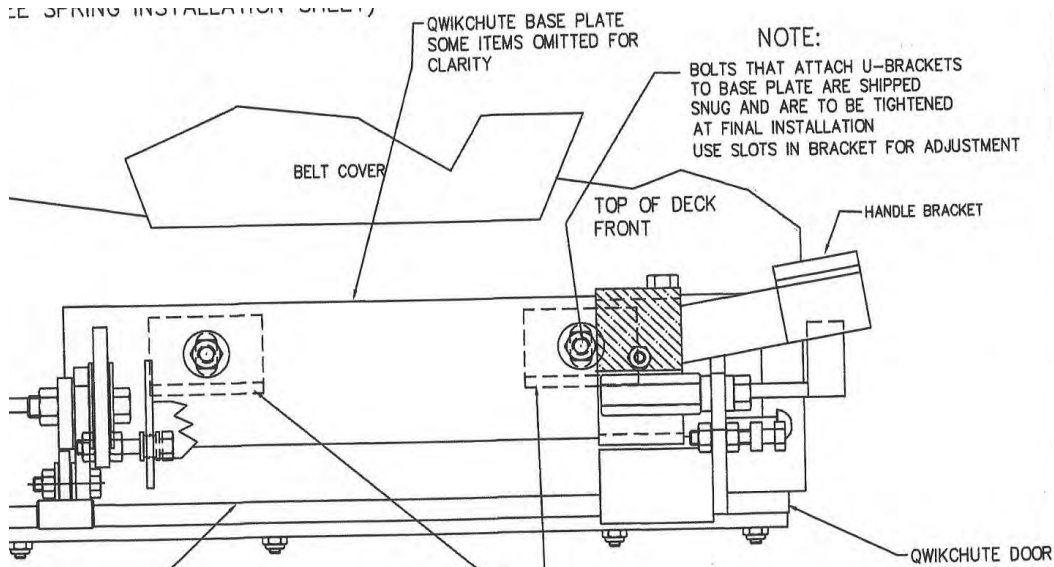


HARDWARE KIT- **A**

STEP 1 POSITION QWIKCHUTE ON DECK OF MOWER
WITH QWIKCHUTE DOOR CLOSED AND BASE
PLATE MOUNTING U-BRACKETS FLAT ON MOWER DECK AND
QWIKCHUTE DOOR TIGHT AGAINST MOWER DISCHARGE FACE

STEP 2 SEE SHEET 2 FOR MARKING MOUNTING ON DECK

STEP 3 INSTALL SPRING (SEE SPRING INSTALLATION SHEET)


STEP 4 INSTALL HANDLE

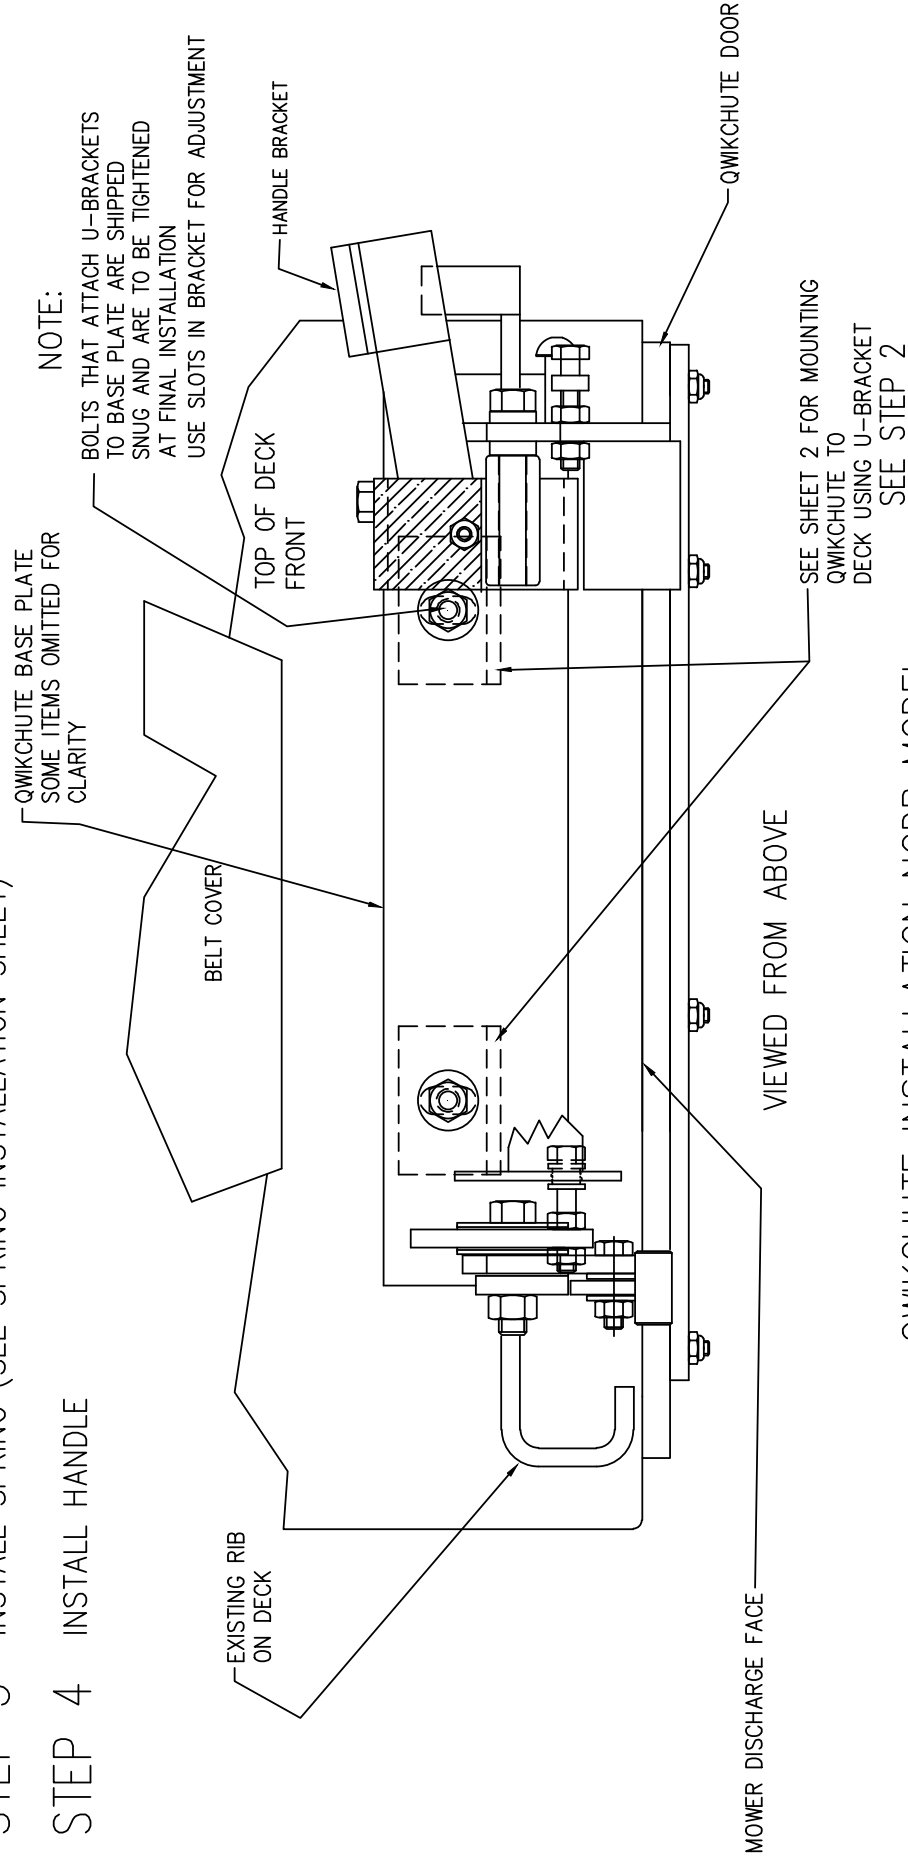

QWIKCHUTE INSTALLATION NQDR MODEL
WRIGHT STANDER 36" / 52"

MOUNTING U-BRACKETS ARE SHIPPED ATTACHED TO THE BASE PLATE OF THE QWIKCHUTE.

DO NOT REMOVE FROM QWIKCHUTE WHEN MARKING HOLE LOCATION

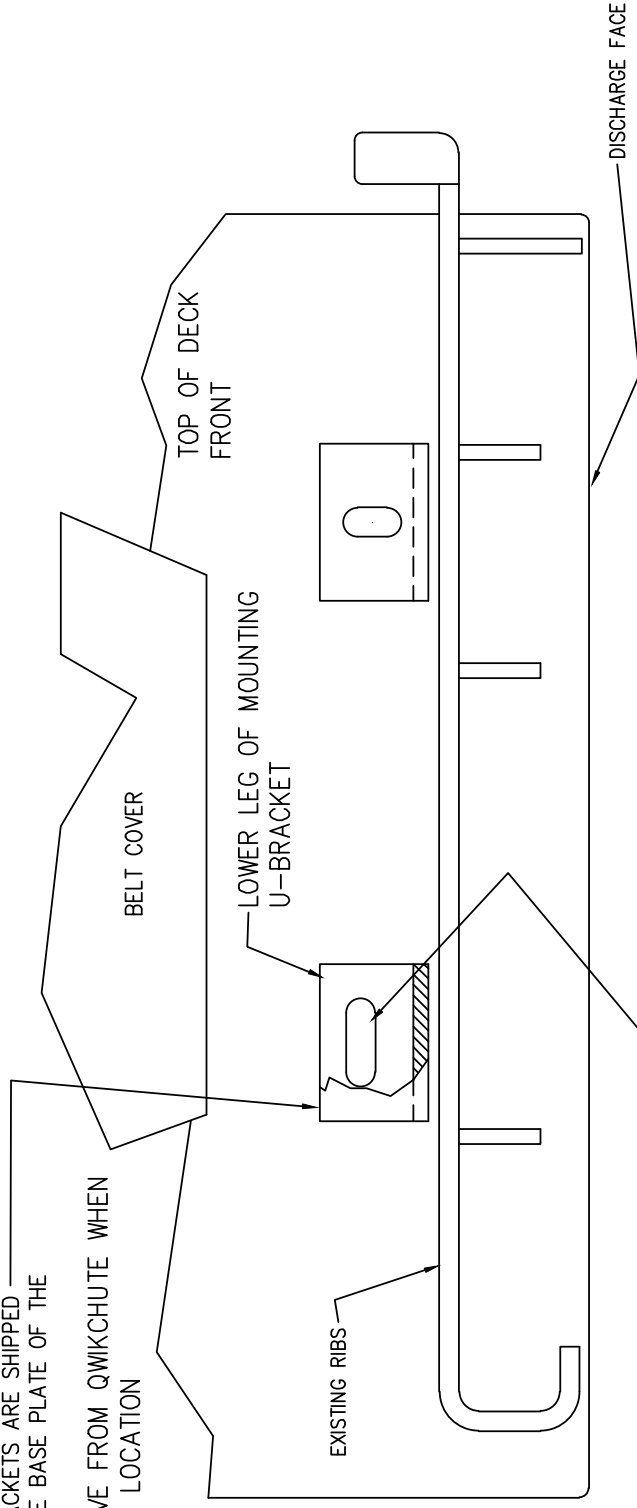

STEP 2

MARK QWIKCHUTE MOUNTING HOLES (CENTER OF SLOT) ON DECK REMOVE QWIKCHUTE AND CENTER PUNCH MARKED HOLE LOCATION. THEN DRILL 3/8" DIAMETER THROUGH TOP OF DECK. INSTALL QWIKCHUTE ON DECK USING SUPPLIED 5/16 X 1" BOLTS AND NUTS AND WASHERS , DOOR TO BE TIGHT TO DISCHARGE FACE WHEN TIGHTENING BOLTS

SEE STEP 1 ON SHEET 1



VIEWED FROM ABOVE SHOWING MOUNTING

U-BRACKETS ON DECK WITH OUT QWIKCHUTE

QWIKCHUTE INSTALLATION NQDR MODEL
WRIGHT STANDER 36" /52"

SPRING INSTALLATION QWIKCHUTE NQD MODEL

STEP 2 LOOP FINGERS OVER SCREWDRIVER
BLADE AND LIFT SPRING ON TO SPRING BOLT
CAUTION -DO NOT OVER STRECH SPRING
DISCARD WIRE LOOP AFTER SPRING IS CONNECTED

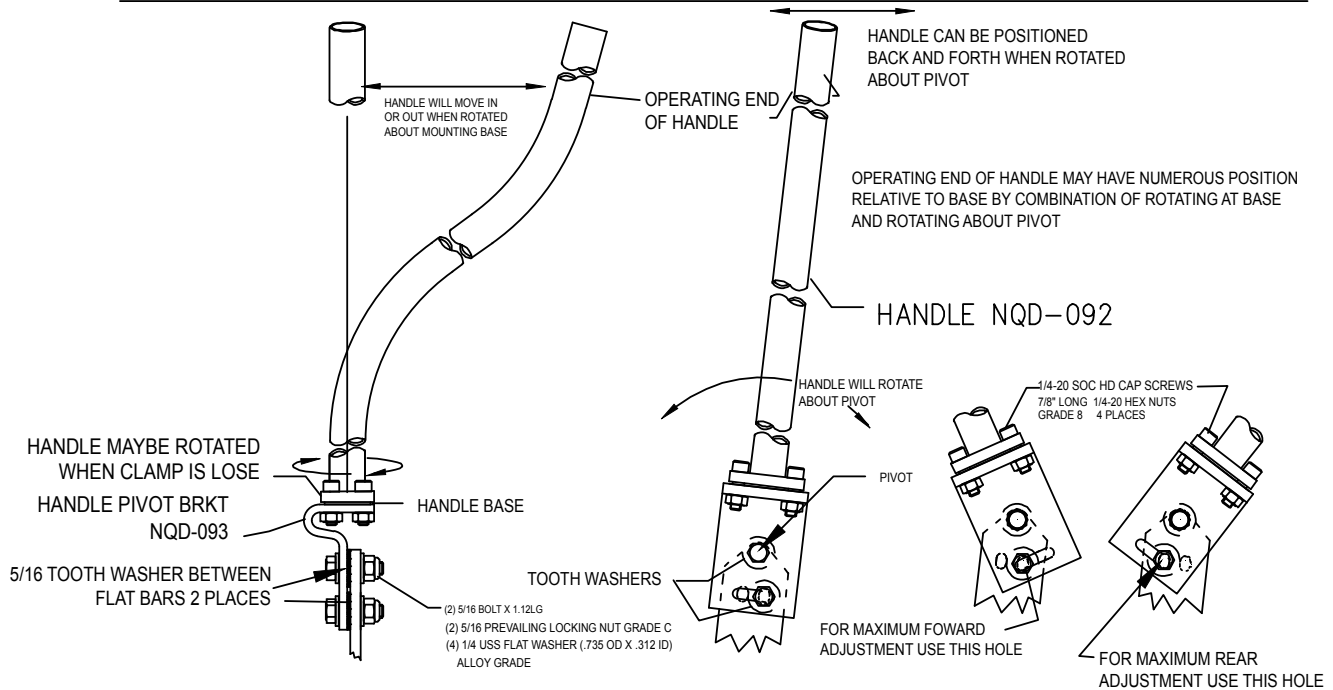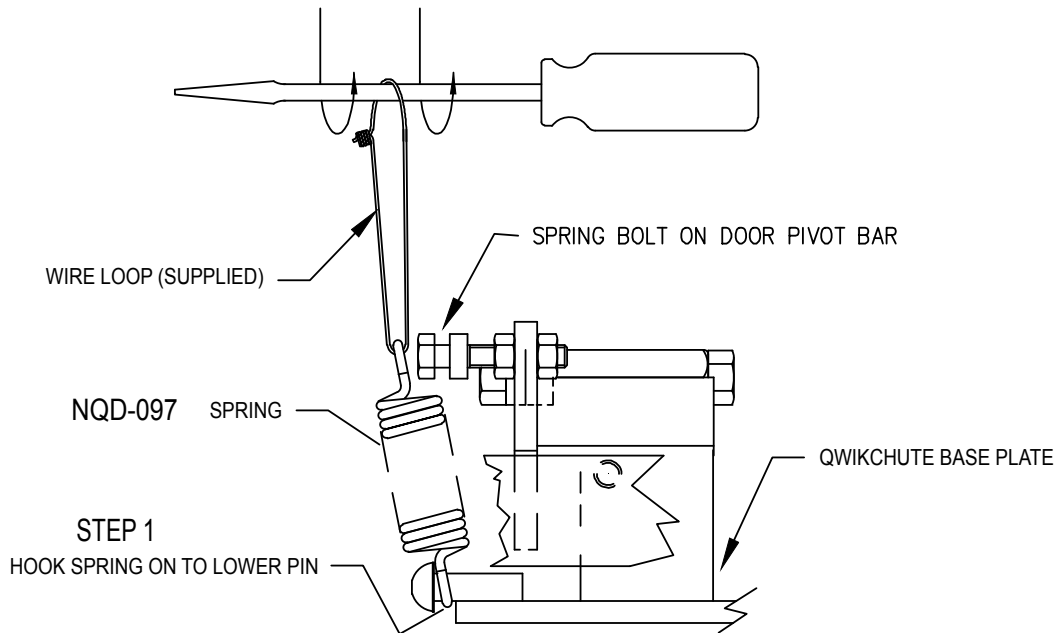

HANDLE INSTALLATION AND ADJUSTMENT

QWIKCHUTE OPERATING PRECEDURE

OPEN FULLY- move handle away from operator quickly.

CLOSE FULLY- move handle toward operator quickly.

PARTIALLY OPEN- from close position move handle away from operator until stay bar swings into position and release handle. To close from partially open position, quickly open and then close.

(some models do not have partial open feature.)

OIL ALL BEARING POINTS WEEKLY OR AS NEEDED.

WARRANTY

GTM Manufacturing, Inc. products are warranted to the original purchaser to be free from defects in materials and workmanship for a period of 90 days from the date of purchase.

Any part(s) of GTM products found to be defective within the warranty period shall, at GTM's option, be repaired or replaced without charge.

Warranty consideration is obtained by returning any GTM product/part believed to be defective to GTM Manufacturing, Inc. within the applicable warranty period. **Please call for authorization.**

GTM Manufacturing, Inc.

14350 EASTSIDE ST

GROVELAND, FL. 34736

(407) 654-6598

www.qwikchute.com

Warranty does not apply to conditions resulting from:

1. Damage(s) and/or costs associated with shipping and or/ transportation.
2. Lack of normal maintenance, adjustments, or service required for regular use of the product.
3. Modifications, service/repairs, parts or components not authorized by GTM.

GTM shall not be liable for any special, consequential, direct or indirect damages, and expressly states there are no implied warranties. Some states do not allow limitation of incidental or consequential damages, accordingly the above limitations and exclusions may not apply to you. This warranty provides you with specific legal rights which may vary from state to state.

IT IS THE OWNERS RESPONSIBILITY TO PROPERLY COMPLETE AND MAIL THE WARRANTY REGISTRATION CARD.

PROOF OF PURCHASE AND REGISTRATION WILL BE REQUIRED IN ORDER TO OBTAIN WARRANTY SERVICE.

WARRANTY REGISTRATION CARD

Name of Purchaser: _____

Street Address / P.O. Box: _____

City: _____ State: _____ Zip Code: _____

Model Number: _____ PURCHASE DATE: _____|_____|_____

Dealer Name: _____

Street Address: _____

City: _____ State: _____ Zip Code: _____

Customer Received: Operators Manual () Safety Instructions () Demonstration ()

Customers Signature

Date